

avr-libc
1.8.0

Generated by Doxygen 1.8.1.1

Fri Aug 17 2012 13:58:18

Contents

1	AVR Libc	1
1.1	Introduction	1
1.2	General information about this library	1
1.3	Supported Devices	1
1.4	avr-libc License	10
2	Toolchain Overview	11
2.1	Introduction	11
2.2	FSF and GNU	11
2.3	GCC	12
2.4	GNU Binutils	12
2.5	avr-libc	13
2.6	Building Software	14
2.7	AVRDUDE	14
2.8	GDB / Insight / DDD	14
2.9	AVaRICE	14
2.10	SimulAVR	14
2.11	Utilities	14
2.12	Toolchain Distributions (Distros)	14
2.13	Open Source	15
3	Memory Areas and Using malloc()	15
3.1	Introduction	15
3.2	Internal vs. external RAM	16
3.3	Tunables for malloc()	16
3.4	Implementation details	18
4	Memory Sections	18
4.1	The .text Section	19
4.2	The .data Section	19
4.3	The .bss Section	19
4.4	The .eeprom Section	19
4.5	The .noinit Section	19
4.6	The .initN Sections	20
4.7	The .finiN Sections	21
4.8	Using Sections in Assembler Code	22
4.9	Using Sections in C Code	22

5	Data in Program Space	22
5.1	Introduction	22
5.2	A Note On const	23
5.3	Storing and Retrieving Data in the Program Space	23
5.4	Storing and Retrieving Strings in the Program Space	24
5.5	Caveats	26
6	avr-libc and assembler programs	26
6.1	Introduction	26
6.2	Invoking the compiler	26
6.3	Example program	27
6.4	Pseudo-ops and operators	29
7	Inline Assembler Cookbook	30
7.1	GCC asm Statement	31
7.2	Assembler Code	32
7.3	Input and Output Operands	33
7.4	Clobbers	36
7.5	Assembler Macros	38
7.6	C Stub Functions	38
7.7	C Names Used in Assembler Code	39
7.8	Links	39
8	How to Build a Library	40
8.1	Introduction	40
8.2	How the Linker Works	40
8.3	How to Design a Library	40
8.4	Creating a Library	41
8.5	Using a Library	41
9	Benchmarks	42
9.1	A few of libc functions.	42
9.2	Math functions.	43
10	Porting From IAR to AVR GCC	44
10.1	Introduction	44
10.2	Registers	44
10.3	Interrupt Service Routines (ISRs)	45
10.4	Intrinsic Routines	45

10.5 Flash Variables	46
10.6 Non-Returning main()	46
10.7 Locking Registers	47
11 Building and Installing the GNU Tool Chain	47
11.1 Building and Installing under Linux, FreeBSD, and Others	47
11.2 Required Tools	48
11.3 Optional Tools	48
11.4 GNU Binutils for the AVR target	49
11.5 GCC for the AVR target	50
11.6 AVR LibC	50
11.7 AVRDUDE	51
11.8 GDB for the AVR target	51
11.9 SimulAVR	52
11.10AVaRICE	52
11.11Building and Installing under Windows	52
11.12Tools Required for Building the Toolchain for Windows	53
11.13Building the Toolchain for Windows	55
12 Using the GNU tools	59
12.1 Options for the C compiler avr-gcc	60
12.1.1 Machine-specific options for the AVR	60
12.1.2 Selected general compiler options	72
12.2 Options for the assembler avr-as	74
12.2.1 Machine-specific assembler options	74
12.2.2 Examples for assembler options passed through the C compiler	75
12.3 Controlling the linker avr-ld	75
12.3.1 Selected linker options	75
12.3.2 Passing linker options from the C compiler	76
13 Compiler optimization	77
13.1 Problems with reordering code	77
14 Using the avrdude program	78
15 Release Numbering and Methodology	80
15.1 Release Version Numbering Scheme	80
15.2 Releasing AVR Libc	80
15.2.1 Creating an SVN branch	80

15.2.2 Making a release	81
16 Acknowledgments	83
17 Todo List	83
18 Deprecated List	83
19 Module Index	84
19.1 Modules	84
20 Data Structure Index	86
20.1 Data Structures	86
21 File Index	86
21.1 File List	86
22 Module Documentation	90
22.1 <alloca.h>: Allocate space in the stack	90
22.1.1 Detailed Description	90
22.1.2 Function Documentation	90
22.2 <assert.h>: Diagnostics	91
22.2.1 Detailed Description	91
22.2.2 Macro Definition Documentation	91
22.3 <ctype.h>: Character Operations	92
22.3.1 Detailed Description	92
22.3.2 Function Documentation	92
22.4 <errno.h>: System Errors	94
22.4.1 Detailed Description	94
22.4.2 Macro Definition Documentation	94
22.5 <inttypes.h>: Integer Type conversions	95
22.5.1 Detailed Description	97
22.5.2 Macro Definition Documentation	97
22.5.3 Typedef Documentation	104
22.6 <math.h>: Mathematics	105
22.6.1 Detailed Description	107
22.6.2 Macro Definition Documentation	107
22.6.3 Function Documentation	111
22.7 <setjmp.h>: Non-local goto	115
22.7.1 Detailed Description	115

22.7.2	Function Documentation	115
22.8	<stdint.h>: Standard Integer Types	117
22.8.1	Detailed Description	120
22.8.2	Macro Definition Documentation	120
22.8.3	Typedef Documentation	124
22.9	<stdio.h>: Standard IO facilities	127
22.9.1	Detailed Description	128
22.9.2	Macro Definition Documentation	130
22.9.3	Function Documentation	132
22.10	<stdlib.h>: General utilities	140
22.10.1	Detailed Description	141
22.10.2	Macro Definition Documentation	141
22.10.3	Typedef Documentation	142
22.10.4	Function Documentation	142
22.10.5	Variable Documentation	148
22.11	<string.h>: Strings	149
22.11.1	Detailed Description	150
22.11.2	Macro Definition Documentation	150
22.11.3	Function Documentation	150
22.12	<avr/boot.h>: Bootloader Support Utilities	159
22.12.1	Detailed Description	159
22.12.2	Macro Definition Documentation	160
22.13	<avr/cpufunc.h>: Special AVR CPU functions	165
22.13.1	Detailed Description	165
22.13.2	Macro Definition Documentation	165
22.14	<avr/eeprom.h>: EEPROM handling	166
22.14.1	Detailed Description	166
22.14.2	Macro Definition Documentation	167
22.14.3	Function Documentation	167
22.15	<avr/fuse.h>: Fuse Support	170
22.16	<avr/interrupt.h>: Interrupts	173
22.16.1	Detailed Description	173
22.16.2	Macro Definition Documentation	188
22.17	<avr/io.h>: AVR device-specific IO definitions	191
22.18	<avr/lock.h>: Lockbit Support	192
22.19	<avr/pgmspace.h>: Program Space Utilities	195
22.19.1	Detailed Description	196

22.19.2 Macro Definition Documentation	196
22.19.3 Typedef Documentation	198
22.19.4 Function Documentation	201
22.20<avr/power.h>: Power Reduction Management	207
22.21 Additional notes from <avr/sfr_defs.h>	257
22.22<avr/sfr_defs.h>: Special function registers	258
22.22.1 Detailed Description	258
22.22.2 Macro Definition Documentation	259
22.23<avr/signature.h>: Signature Support	260
22.24<avr/sleep.h>: Power Management and Sleep Modes	261
22.24.1 Detailed Description	261
22.24.2 Function Documentation	262
22.25<avr/version.h>: avr-libc version macros	263
22.25.1 Detailed Description	263
22.25.2 Macro Definition Documentation	263
22.26<avr/wdt.h>: Watchdog timer handling	265
22.26.1 Detailed Description	265
22.26.2 Macro Definition Documentation	266
22.27<util/atomic.h>: Atomically and Non-Atomically Executed Code Blocks	268
22.27.1 Detailed Description	268
22.27.2 Macro Definition Documentation	269
22.28<util/crc16.h>: CRC Computations	271
22.28.1 Detailed Description	271
22.28.2 Function Documentation	271
22.29<util/delay_basic.h>: Basic busy-wait delay loops	274
22.29.1 Detailed Description	274
22.29.2 Function Documentation	274
22.30<util/parity.h>: Parity bit generation	275
22.30.1 Detailed Description	275
22.30.2 Macro Definition Documentation	275
22.31<util/setbaud.h>: Helper macros for baud rate calculations	276
22.31.1 Detailed Description	276
22.31.2 Macro Definition Documentation	277
22.32<util/twi.h>: TWI bit mask definitions	278
22.32.1 Detailed Description	279
22.32.2 Macro Definition Documentation	279
22.33<compat/deprecated.h>: Deprecated items	282

22.33.1 Detailed Description	282
22.33.2 Macro Definition Documentation	283
22.33.3 Function Documentation	284
22.34<compat/ina90.h>: Compatibility with IAR EWB 3.x	285
22.35Demo projects	286
22.35.1 Detailed Description	286
22.36Combining C and assembly source files	287
22.36.1 Hardware setup	287
22.36.2 A code walkthrough	287
22.36.3 The source code	289
22.37A simple project	290
22.37.1 The Project	290
22.37.2 The Source Code	291
22.37.3 Compiling and Linking	293
22.37.4 Examining the Object File	293
22.37.5 Linker Map Files	297
22.37.6 Generating Intel Hex Files	299
22.37.7 Letting Make Build the Project	300
22.37.8 Reference to the source code	302
22.38A more sophisticated project	303
22.38.1 Hardware setup	303
22.38.2 Functional overview	305
22.38.3 A code walkthrough	306
22.38.4 The source code	308
22.39Using the standard IO facilities	309
22.39.1 Hardware setup	309
22.39.2 Functional overview	310
22.39.3 A code walkthrough	310
22.39.4 The source code	314
22.40Example using the two-wire interface (TWI)	315
22.40.1 Introduction into TWI	315
22.40.2 The TWI example project	315
22.40.3 The Source Code	315
23 Data Structure Documentation	319
23.1 div_t Struct Reference	319
23.1.1 Detailed Description	319

23.1.2	Field Documentation	319
23.2	ldiv_t Struct Reference	319
23.2.1	Detailed Description	319
23.2.2	Field Documentation	319
24	File Documentation	320
24.1	assert.h File Reference	320
24.1.1	Detailed Description	320
24.2	atoi.S File Reference	320
24.2.1	Detailed Description	320
24.3	atol.S File Reference	320
24.3.1	Detailed Description	320
24.4	atomic.h File Reference	320
24.4.1	Detailed Description	320
24.5	boot.h File Reference	320
24.5.1	Detailed Description	321
24.5.2	Macro Definition Documentation	321
24.6	cpufunc.h File Reference	325
24.6.1	Detailed Description	325
24.7	crc16.h File Reference	325
24.7.1	Detailed Description	325
24.8	ctype.h File Reference	325
24.8.1	Detailed Description	326
24.9	delay_basic.h File Reference	326
24.9.1	Detailed Description	326
24.10	errno.h File Reference	326
24.10.1	Detailed Description	326
24.11	fdevopen.c File Reference	326
24.11.1	Detailed Description	327
24.12	ffs.S File Reference	327
24.12.1	Detailed Description	327
24.13	ffsl.S File Reference	327
24.13.1	Detailed Description	327
24.14	ffsll.S File Reference	327
24.14.1	Detailed Description	327
24.15	fuse.h File Reference	327
24.15.1	Detailed Description	327

24.16interrupt.h File Reference	327
24.16.1 Detailed Description	328
24.17inttypes.h File Reference	328
24.17.1 Detailed Description	330
24.18io.h File Reference	330
24.18.1 Detailed Description	330
24.19lock.h File Reference	330
24.19.1 Detailed Description	330
24.20math.h File Reference	330
24.20.1 Detailed Description	332
24.21memccpy.S File Reference	332
24.21.1 Detailed Description	332
24.22memchr.S File Reference	332
24.22.1 Detailed Description	332
24.23memchr_P.S File Reference	332
24.23.1 Detailed Description	332
24.24memcmp.S File Reference	332
24.24.1 Detailed Description	332
24.25memcmp_P.S File Reference	332
24.25.1 Detailed Description	332
24.26memcmp_PF.S File Reference	332
24.26.1 Detailed Description	332
24.27memcpy.S File Reference	332
24.27.1 Detailed Description	332
24.28memcpy_P.S File Reference	332
24.28.1 Detailed Description	332
24.29memmem.S File Reference	332
24.29.1 Detailed Description	333
24.30memmove.S File Reference	333
24.30.1 Detailed Description	333
24.31memrchr.S File Reference	333
24.31.1 Detailed Description	333
24.32memrchr_P.S File Reference	333
24.32.1 Detailed Description	333
24.33memset.S File Reference	333
24.33.1 Detailed Description	333
24.34parity.h File Reference	333

24.34.1 Detailed Description	333
24.35pgmspace.h File Reference	333
24.35.1 Detailed Description	336
24.35.2 Macro Definition Documentation	336
24.36power.h File Reference	343
24.36.1 Detailed Description	343
24.37setbaud.h File Reference	343
24.37.1 Detailed Description	343
24.38setjmp.h File Reference	343
24.38.1 Detailed Description	343
24.39signature.h File Reference	343
24.39.1 Detailed Description	343
24.40sleep.h File Reference	344
24.40.1 Detailed Description	344
24.41stdint.h File Reference	344
24.41.1 Detailed Description	347
24.42stdio.h File Reference	347
24.42.1 Detailed Description	348
24.43stdlib.h File Reference	348
24.43.1 Detailed Description	350
24.44strcasecmp.S File Reference	350
24.44.1 Detailed Description	350
24.45strcasecmp_P.S File Reference	350
24.45.1 Detailed Description	350
24.46strcasestr.S File Reference	350
24.46.1 Detailed Description	350
24.47strcat.S File Reference	350
24.47.1 Detailed Description	350
24.48strcat_P.S File Reference	350
24.48.1 Detailed Description	350
24.49strchr.S File Reference	350
24.49.1 Detailed Description	350
24.50strchr_P.S File Reference	350
24.50.1 Detailed Description	350
24.51strchrnul.S File Reference	350
24.51.1 Detailed Description	350
24.52strchrnul_P.S File Reference	350

24.52.1 Detailed Description	350
24.53strcmp.S File Reference	350
24.53.1 Detailed Description	350
24.54strcmp_P.S File Reference	350
24.54.1 Detailed Description	350
24.55strcpy.S File Reference	350
24.55.1 Detailed Description	350
24.56strcpy_P.S File Reference	351
24.56.1 Detailed Description	351
24.57strcspn.S File Reference	351
24.57.1 Detailed Description	351
24.58strcspn_P.S File Reference	351
24.58.1 Detailed Description	351
24.59strdup.c File Reference	351
24.59.1 Detailed Description	351
24.60string.h File Reference	351
24.60.1 Detailed Description	352
24.61strcat.S File Reference	352
24.61.1 Detailed Description	352
24.62strcat_P.S File Reference	352
24.62.1 Detailed Description	352
24.63strcpy.S File Reference	352
24.63.1 Detailed Description	352
24.64strcpy_P.S File Reference	352
24.64.1 Detailed Description	352
24.65strlen.S File Reference	352
24.65.1 Detailed Description	352
24.66strlen_P.S File Reference	352
24.66.1 Detailed Description	352
24.67strlwr.S File Reference	352
24.67.1 Detailed Description	352
24.68strncasecmp.S File Reference	353
24.68.1 Detailed Description	353
24.69strncasecmp_P.S File Reference	353
24.69.1 Detailed Description	353
24.70strncat.S File Reference	353
24.70.1 Detailed Description	353

24.71strncat_P.S File Reference	353
24.71.1 Detailed Description	353
24.72strncmp.S File Reference	353
24.72.1 Detailed Description	353
24.73strncmp_P.S File Reference	353
24.73.1 Detailed Description	353
24.74strncpy.S File Reference	353
24.74.1 Detailed Description	353
24.75strncpy_P.S File Reference	353
24.75.1 Detailed Description	353
24.76strlen.S File Reference	353
24.76.1 Detailed Description	353
24.77strlen_P.S File Reference	353
24.77.1 Detailed Description	353
24.78strpbrk.S File Reference	353
24.78.1 Detailed Description	353
24.79strpbrk_P.S File Reference	353
24.79.1 Detailed Description	353
24.80strchr.S File Reference	353
24.80.1 Detailed Description	354
24.81strchr_P.S File Reference	354
24.81.1 Detailed Description	354
24.82strrev.S File Reference	354
24.82.1 Detailed Description	354
24.83strsep.S File Reference	354
24.83.1 Detailed Description	354
24.84strsep_P.S File Reference	354
24.84.1 Detailed Description	354
24.85strspn.S File Reference	354
24.85.1 Detailed Description	354
24.86strspn_P.S File Reference	354
24.86.1 Detailed Description	354
24.87strstr.S File Reference	354
24.87.1 Detailed Description	354
24.88strstr_P.S File Reference	354
24.88.1 Detailed Description	354
24.89strtok.c File Reference	354

24.89.1 Detailed Description	354
24.90strtok_P.c File Reference	354
24.90.1 Detailed Description	355
24.91strtok_r.S File Reference	355
24.91.1 Detailed Description	355
24.92strtok_r.PS File Reference	355
24.92.1 Detailed Description	355
24.93strupr.S File Reference	355
24.93.1 Detailed Description	355
24.94twi.h File Reference	355
24.94.1 Detailed Description	356
24.95wdt.h File Reference	356
24.95.1 Detailed Description	356

1 AVR Libc

1.1 Introduction

The latest version of this document is always available from <http://savannah.nongnu.org/projects/avr-libc/>

The AVR Libc package provides a subset of the standard C library for **Atmel AVR 8-bit RISC microcontrollers**. In addition, the library provides the basic startup code needed by most applications.

There is a wealth of information in this document which goes beyond simply describing the interfaces and routines provided by the library. We hope that this document provides enough information to get a new AVR developer up to speed quickly using the freely available development tools: binutils, gcc avr-libc and many others.

If you find yourself stuck on a problem which this document doesn't quite address, you may wish to post a message to the avr-gcc mailing list. Most of the developers of the AVR binutils and gcc ports in addition to the developers of avr-libc subscribe to the list, so you will usually be able to get your problem resolved. You can subscribe to the list at <http://lists.nongnu.org/mailman/listinfo/avr-gcc-list>. Before posting to the list, you might want to try reading the FAQ chapter of this document.

Note

If you think you've found a bug, or have a suggestion for an improvement, either in this documentation or in the library itself, please use the bug tracker at <https://savannah.nongnu.org/bugs/?group=avr-libc> to ensure the issue won't be forgotten.

1.2 General information about this library

In general, it has been the goal to stick as best as possible to established standards while implementing this library. Commonly, this refers to the C library as described by the ANSI X3.159-1989 and ISO/IEC 9899:1990 ("ANSI-C") standard, as well as parts of their successor ISO/IEC 9899:1999 ("C99"). Some additions have been inspired by other standards like IEEE Std 1003.1-1988 ("POSIX.1"), while other extensions are purely AVR-specific (like the entire program-space string interface).

Unless otherwise noted, functions of this library are *not* guaranteed to be reentrant. In particular, any functions that store local state are known to be non-reentrant, as well as functions that manipulate IO registers like the EEPROM access

routines. If these functions are used within both standard and interrupt contexts undefined behaviour will result. See the FAQ for a more detailed discussion.

1.3 Supported Devices

The following is a list of AVR devices currently supported by the library. Note that actual support for some newer devices depends on the ability of the compiler/assembler to support these devices at library compile-time.

megaAVR Devices:

- atmega103
- atmega128
- atmega128a
- atmega1280
- atmega1281
- atmega1284
- atmega1284p
- atmega16
- atmega161
- atmega162
- atmega163
- atmega164a
- atmega164p
- atmega164pa
- atmega165
- atmega165a
- atmega165p
- atmega165pa
- atmega168
- atmega168a
- atmega168p
- atmega168pa
- atmega16a
- atmega2560
- atmega2561

- atmega32
- atmega32a
- atmega323
- atmega324a
- atmega324p
- atmega324pa
- atmega325
- atmega325a
- atmega325p
- atmega325pa
- atmega3250
- atmega3250a
- atmega3250p
- atmega3250pa
- atmega328
- atmega328p
- atmega48
- atmega48a
- atmega48pa
- atmega48p
- atmega64
- atmega64a
- atmega640
- atmega644
- atmega644a
- atmega644p
- atmega644pa
- atmega645
- atmega645a
- atmega645p
- atmega6450
- atmega6450a
- atmega6450p

- atmega8
- atmega8a
- atmega88
- atmega88a
- atmega88p
- atmega88pa
- atmega8515
- atmega8535

tinyAVR Devices:

- attiny4
- attiny5
- attiny10
- attiny11 [\[1\]](#)
- attiny12 [\[1\]](#)
- attiny13
- attiny13a
- attiny15 [\[1\]](#)
- attiny20
- attiny22
- attiny24
- attiny24a
- attiny25
- attiny26
- attiny261
- attiny261a
- attiny28 [\[1\]](#)
- attiny2313
- attiny2313a
- attiny40
- attiny4313
- attiny43u
- attiny44

- attiny44a
- attiny45
- attiny461
- attiny461a
- attiny48
- attiny828
- attiny84
- attiny84a
- attiny841
- attiny85
- attiny861
- attiny861a
- attiny87
- attiny88
- attiny1634

Automotive AVR Devices:

- atmega16m1
- atmega32c1
- atmega32m1
- atmega64c1
- atmega64m1
- attiny167
- ata5505
- ata5272
- ata5790
- ata5790n
- ata5795
- ata5831

CAN AVR Devices:

- at90can32

- at90can64
- at90can128

LCD AVR Devices:

- atmega169
- atmega169a
- atmega169p
- atmega169pa
- atmega329
- atmega329a
- atmega329p
- atmega329pa
- atmega3290
- atmega3290a
- atmega3290p
- atmega3290pa
- atmega649
- atmega649a
- atmega6490
- atmega6490a
- atmega6490p
- atmega649p

Lighting AVR Devices:

- at90pwm1
- at90pwm2
- at90pwm2b
- at90pwm216
- at90pwm3
- at90pwm3b
- at90pwm316
- at90pwm161

- at90pwm81

Smart Battery AVR Devices:

- atmega8hva
- atmega16hva
- atmega16hva2
- atmega16hvb
- atmega16hvbrevb
- atmega26hvg
- atmega32hvb
- atmega32hvbrevb
- atmega64hve
- atmega406
- atmega48hvf

USB AVR Devices:

- at90usb82
- at90usb162
- at90usb646
- at90usb647
- at90usb1286
- at90usb1287
- atmega8u2
- atmega16u2
- atmega16u4
- atmega32u2
- atmega32u4
- atmega32u6

XMEGA Devices:

- atmx112sl
- atmx1224

- atmxxt224e
- atmxxt336s
- atmxxt540s
- atmxxt540sreva
- atxmega16a4
- atxmega16a4u
- atxmega16c4
- atxmega16d4
- atxmega32a4
- atxmega32a4u
- atxmega32c4
- atxmega32d4
- atxmega32e5
- atxmega32x1
- atxmega64a1
- atxmega64a1u
- atxmega64a3
- atxmega64a3u
- atxmega64a4u
- atxmega64b1
- atxmega64b3
- atxmega64c3
- atxmega64d3
- atxmega64d4
- atxmega128a1
- atxmega128a1u
- atxmega128a3
- atxmega128a3u
- atxmega128a4u
- atxmega128b1
- atxmega128b3
- atxmega128c3
- atxmega128d3

- atxmega128d4
- atxmega192a3
- atxmega192a3u
- atxmega192c3
- atxmega192d3
- atxmega256a3
- atxmega256a3u
- atxmega256a3b
- atxmega256a3bu
- atxmega256c3
- atxmega256d3
- atxmega384c3
- atxmega384d3

Wireless AVR devices:

- atmega64rfa2
- atmega64rfr2
- atmega128rfa1
- atmega128rfa2
- atmega128rfr2
- atmega256rfa2
- atmega256rfr2

Miscellaneous Devices:

- at94K [\[2\]](#)
- at76c711 [\[3\]](#)
- at43usb320
- at43usb355
- at86rf401
- at90scr100
- ata6285
- ata6286

- ata6289
- m3000 [\[4\]](#)

Classic AVR Devices:

- at90s1200 [\[1\]](#)
- at90s2313
- at90s2323
- at90s2333
- at90s2343
- at90s4414
- at90s4433
- at90s4434
- at90s8515
- at90c8534
- at90s8535

Note

[1] Assembly only. There is no direct support for these devices to be programmed in C since they do not have a RAM based stack. Still, it could be possible to program them in C, see the FAQ for an option.

Note

[2] The at94K devices are a combination of FPGA and AVR microcontroller. [TRoth-2002/11/12: Not sure of the level of support for these. More information would be welcomed.]

Note

[3] The at76c711 is a USB to fast serial interface bridge chip using an AVR core.

Note

[4] The m3000 is a motor controller AVR ASIC from Intelligent Motion Systems (IMS) / Schneider Electric.

1.4 avr-libc License

avr-libc can be freely used and redistributed, provided the following license conditions are met.

Portions of avr-libc are Copyright (c) 1999-2010
Werner Boellmann,
Dean Camera,
Pieter Conradie,
Brian Dean,
Keith Gudger,
Wouter van Gulik,
Bjoern Haase,
Steinar Haugen,
Peter Jansen,
Reinhard Jessich,
Magnus Johansson,
Harald Kipp,
Carlos Lamas,
Cliff Lawson,
Artur Lipowski,
Marek Michalkiewicz,
Todd C. Miller,
Rich Neswold,
Colin O'Flynn,
Bob Paddock,
Andrey Pashchenko,
Reiner Patommel,
Florin-Viorel Petrov,
Alexander Popov,
Michael Rickman,
Theodore A. Roth,
Juergen Schilling,
Philip Soeberg,
Anatoly Sokolov,
Nils Kristian Strom,
Michael Stumpf,
Stefan Swanepoel,
Helmut Wallner,
Eric B. Weddington,
Joerg Wunsch,
Dmitry Xmelkov,
Atmel Corporation,
egnite Software GmbH,
The Regents of the University of California.
All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright
notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright
notice, this list of conditions and the following disclaimer in
the documentation and/or other materials provided with the
distribution.
- * Neither the name of the copyright holders nor the names of
contributors may be used to endorse or promote products derived
from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE
LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR
CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF
SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN
CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE
POSSIBILITY OF SUCH DAMAGE.

2 Toolchain Overview

2.1 Introduction

Welcome to the open source software development toolset for the Atmel AVR!

There is not a single tool that provides everything needed to develop software for the AVR. It takes many tools working together. Collectively, the group of tools are called a toolset, or commonly a toolchain, as the tools are chained together to produce the final executable application for the AVR microcontroller.

The following sections provide an overview of all of these tools. You may be used to cross-compilers that provide everything with a GUI front-end, and not know what goes on "underneath the hood". You may be coming from a desktop or server computer background and not used to embedded systems. Or you may be just learning about the most common software development toolchain available on Unix and Linux systems. Hopefully the following overview will be helpful in putting everything in perspective.

2.2 FSF and GNU

According to its website, "the Free Software Foundation (FSF), established in 1985, is dedicated to promoting computer users' rights to use, study, copy, modify, and redistribute computer programs. The FSF promotes the development and use of free software, particularly the GNU operating system, used widely in its GNU/Linux variant." The FSF remains the primary sponsor of the GNU project.

The GNU Project was launched in 1984 to develop a complete Unix-like operating system which is free software: the GNU system. GNU is a recursive acronym for »GNU's Not Unix«; it is pronounced guh-noo, approximately like canoe.

One of the main projects of the GNU system is the GNU Compiler Collection, or GCC, and its sister project, GNU Binutils. These two open source projects provide a foundation for a software development toolchain. Note that these projects were designed to originally run on Unix-like systems.

2.3 GCC

GCC stands for GNU Compiler Collection. GCC is highly flexible compiler system. It has different compiler front-ends for different languages. It has many back-ends that generate assembly code for many different processors and host operating systems. All share a common "middle-end", containing the generic parts of the compiler, including a lot of optimizations.

In GCC, a *host* system is the system (processor/OS) that the compiler runs on. A *target* system is the system that the compiler compiles code for. And, a *build* system is the system that the compiler is built (from source code) on. If a compiler has the same system for *host* and for *target*, it is known as a *native* compiler. If a compiler has different systems for *host* and *target*, it is known as a cross-compiler. (And if all three, *build*, *host*, and *target* systems are different, it is known as a Canadian cross compiler, but we won't discuss that here.) When GCC is built to execute on a *host* system such as FreeBSD, Linux, or Windows, and it is built to generate code for the AVR microcontroller *target*, then it is a cross compiler, and this version of GCC is commonly known as "AVR GCC". In documentation, or discussion, AVR GCC is used when referring to GCC targeting specifically the AVR, or something that is AVR specific about GCC. The term "GCC" is usually used to refer to something generic about GCC, or about GCC as a whole.

GCC is different from most other compilers. GCC focuses on translating a high-level language to the target assembly only. AVR GCC has three available compilers for the AVR: C language, C++, and Ada. The compiler itself does not assemble or link the final code.

GCC is also known as a "driver" program, in that it knows about, and drives other programs seamlessly to create the final output. The assembler, and the linker are part of another open source project called GNU Binutils. GCC knows how to drive the GNU assembler (gas) to assemble the output of the compiler. GCC knows how to drive the GNU linker (ld) to link all of the object modules into a final executable.

The two projects, GCC and Binutils, are very much interrelated and many of the same volunteers work on both open source projects.

When GCC is built for the AVR target, the actual program names are prefixed with "avr-". So the actual executable name for AVR GCC is: avr-gcc. The name "avr-gcc" is used in documentation and discussion when referring to the program itself and not just the whole AVR GCC system.

See the GCC Web Site and GCC User Manual for more information about GCC.

2.4 GNU Binutils

The name GNU Binutils stands for "Binary Utilities". It contains the GNU assembler (gas), and the GNU linker (ld), but also contains many other utilities that work with binary files that are created as part of the software development toolchain.

Again, when these tools are built for the AVR target, the actual program names are prefixed with "avr-". For example, the assembler program name, for a native assembler is "as" (even though in documentation the GNU assembler is commonly referred to as "gas"). But when built for an AVR target, it becomes "avr-as". Below is a list of the programs that are included in Binutils:

avr-as

The Assembler.

avr-ld

The Linker.

avr-ar

Create, modify, and extract from libraries (archives).

avr-ranlib

Generate index to library (archive) contents.

avr-objcopy

Copy and translate object files to different formats.

avr-objdump

Display information from object files including disassembly.

avr-size

List section sizes and total size.

avr-nm

List symbols from object files.

avr-strings

List printable strings from files.

avr-strip

Discard symbols from files.

avr-readelf

Display the contents of ELF format files.

avr-addr2line

Convert addresses to file and line.

avr-c++filt

Filter to demangle encoded C++ symbols.

2.5 avr-libc

GCC and Binutils provides a lot of the tools to develop software, but there is one critical component that they do not provide: a Standard C Library.

There are different open source projects that provide a Standard C Library depending upon your system time, whether for a native compiler (GNU Libc), for some other embedded system (newlib), or for some versions of Linux (uClibc). The open source AVR toolchain has its own Standard C Library project: avr-libc.

AVR-Libc provides many of the same functions found in a regular Standard C Library and many additional library functions that is specific to an AVR. Some of the Standard C Library functions that are commonly used on a PC environment have limitations or additional issues that a user needs to be aware of when used on an embedded system.

AVR-Libc also contains the most documentation about the whole AVR toolchain.

2.6 Building Software

Even though GCC, Binutils, and avr-libc are the core projects that are used to build software for the AVR, there is another piece of software that ties it all together: Make. GNU Make is a program that makes things, and mainly software. Make interprets and executes a Makefile that is written for a project. A Makefile contains dependency rules, showing which output files are dependent upon which input files, and instructions on how to build output files from input files.

Some distributions of the toolchains, and other AVR tools such as MFile, contain a Makefile template written for the AVR toolchain and AVR applications that you can copy and modify for your application.

See the GNU Make User Manual for more information.

2.7 AVRDUDE

After creating your software, you'll want to program your device. You can do this by using the program AVRDUDE which can interface with various hardware devices to program your processor.

AVRDUDE is a very flexible package. All the information about AVR processors and various hardware programmers is stored in a text database. This database can be modified by any user to add new hardware or to add an AVR processor if it is not already listed.

2.8 GDB / Insight / DDD

The GNU Debugger (GDB) is a command-line debugger that can be used with the rest of the AVR toolchain. Insight is GDB plus a GUI written in Tcl/Tk. Both GDB and Insight are configured for the AVR and the main executables are prefixed with the target name: avr-gdb, and avr-insight. There is also a "text mode" GUI for GDB: avr-gdbtui. DDD (Data Display Debugger) is another popular GUI front end to GDB, available on Unix and Linux systems.

2.9 AVaRICE

AVaRICE is a back-end program to AVR GDB and interfaces to the Atmel JTAG In-Circuit Emulator (ICE), to provide emulation capabilities.

2.10 SimulAVR

SimulAVR is an AVR simulator used as a back-end with AVR GDB. Unfortunately, this project is currently unmaintained and could use some help.

2.11 Utilities

There are also other optional utilities available that may be useful to add to your toolset.

`SRecord` is a collection of powerful tools for manipulating EPROM load files. It reads and writes numerous EPROM file formats, and can perform many different manipulations.

`MFile` is a simple Makefile generator is meant as an aid to quickly customize a Makefile to use for your AVR application.

2.12 Toolchain Distributions (Distros)

All of the various open source projects that comprise the entire toolchain are normally distributed as source code. It is left up to the user to build the tool application from its source code. This can be a very daunting task to any potential user of these tools.

Luckily there are people who help out in this area. Volunteers take the time to build the application from source code on particular host platforms and sometimes packaging the tools for convenient installation by the end user. These packages contain the binary executables of the tools, pre-made and ready to use. These packages are known as "distributions" of the AVR toolchain, or by a more shortened name, "distros".

AVR toolchain distros are available on FreeBSD, Windows, Mac OS X, and certain flavors of Linux.

2.13 Open Source

All of these tools, from the original source code in the multitude of projects, to the various distros, are put together by many, many volunteers. All of these projects could always use more help from other people who are willing to volunteer some of their time. There are many different ways to help, for people with varying skill levels, abilities, and available time.

You can help to answer questions in mailing lists such as the `avr-gcc-list`, or on forums at the AVR Freaks website. This helps many people new to the open source AVR tools.

If you think you found a bug in any of the tools, it is always a big help to submit a good bug report to the proper project. A good bug report always helps other volunteers to analyze the problem and to get it fixed for future versions of the software.

You can also help to fix bugs in various software projects, or to add desirable new features.

Volunteers are always welcome! :-)

3 Memory Areas and Using `malloc()`

3.1 Introduction

Many of the devices that are possible targets of avr-libc have a minimal amount of RAM. The smallest parts supported by the C environment come with 128 bytes of RAM. This needs to be shared between initialized and uninitialized variables (sections `.data` and `.bss`), the dynamic memory allocator, and the stack that is used for calling subroutines and storing local (automatic) variables.

Also, unlike larger architectures, there is no hardware-supported memory management which could help in separating the mentioned RAM regions from being overwritten by each other.

The standard RAM layout is to place `.data` variables first, from the beginning of the internal RAM, followed by `.bss`. The stack is started from the top of internal RAM, growing downwards. The so-called "heap" available for the dynamic memory allocator will be placed beyond the end of `.bss`. Thus, there's no risk that dynamic memory will ever collide with the RAM variables (unless there were bugs in the implementation of the allocator). There is still a risk that the heap and stack could collide if there are large requirements for either dynamic memory or stack space. The former can even happen if the allocations aren't all that large but dynamic memory allocations get fragmented over time such that new requests don't quite fit into the "holes" of previously freed regions. Large stack space requirements can arise in a C function containing large and/or numerous local variables or when recursively calling function.

Note

The pictures shown in this document represent typical situations where the RAM locations refer to an ATmega128. The memory addresses used are not displayed in a linear scale.

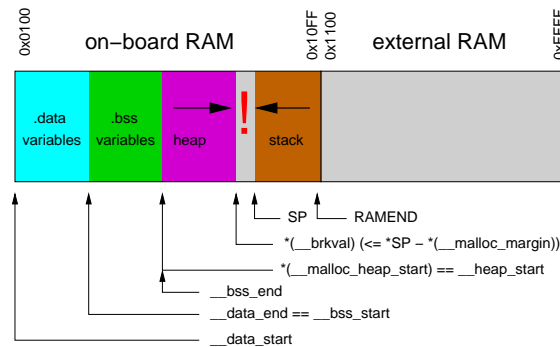


Figure 1: RAM map of a device with internal RAM

On a simple device like a microcontroller it is a challenge to implement a dynamic memory allocator that is simple enough so the code size requirements will remain low, yet powerful enough to avoid unnecessary memory fragmentation and to get it all done with reasonably few CPU cycles. Microcontrollers are often low on space and also run at much lower speeds than the typical PC these days.

The memory allocator implemented in avr-libc tries to cope with all of these constraints, and offers some tuning options that can be used if there are more resources available than in the default configuration.

3.2 Internal vs. external RAM

Obviously, the constraints are much harder to satisfy in the default configuration where only internal RAM is available. Extreme care must be taken to avoid a stack-heap collision, both by making sure functions aren't nesting too deeply, and don't require too much stack space for local variables, as well as by being cautious with allocating too much dynamic memory.

If external RAM is available, it is strongly recommended to move the heap into the external RAM, regardless of whether or not the variables from the `.data` and `.bss` sections are also going to be located there. The stack should always be kept

in internal RAM. Some devices even require this, and in general, internal RAM can be accessed faster since no extra wait states are required. When using dynamic memory allocation and stack and heap are separated in distinct memory areas, this is the safest way to avoid a stack-heap collision.

3.3 Tunables for malloc()

There are a number of variables that can be tuned to adapt the behavior of `malloc()` to the expected requirements and constraints of the application. Any changes to these tunables should be made before the very first call to `malloc()`. Note that some library functions might also use dynamic memory (notably those from the `<stdio.h>`: [Standard IO facilities](#)), so make sure the changes will be done early enough in the startup sequence.

The variables `__malloc_heap_start` and `__malloc_heap_end` can be used to restrict the `malloc()` function to a certain memory region. These variables are statically initialized to point to `__heap_start` and `__heap_end`, respectively, where `__heap_start` is filled in by the linker to point just beyond `.bss`, and `__heap_end` is set to 0 which makes `malloc()` assume the heap is below the stack.

If the heap is going to be moved to external RAM, `__malloc_heap_end` *must* be adjusted accordingly. This can either be done at run-time, by writing directly to this variable, or it can be done automatically at link-time, by adjusting the value of the symbol `__heap_end`.

The following example shows a linker command to relocate the entire `.data` and `.bss` segments, and the heap to location 0x1100 in external RAM. The heap will extend up to address 0xffff.

```
avr-gcc ... -Wl,--section-start,.data=0x801100,--defsym=__heap_end=0x80ffff ...
```

Note

See [explanation](#) for offset 0x800000. See the chapter about [using gcc](#) for the `-Wl` options.

The `ld` (linker) user manual states that using `-Tdata=<x>` is equivalent to using `--section-start,.data=<x>`. However, you have to use `--section-start` as above because the GCC frontend also sets the `-Tdata` option for all MCU types where the SRAM doesn't start at 0x800060. Thus, the linker is being faced with two `-Tdata` options. Starting with binutils 2.16, the linker changed the preference, and picks the "wrong" option in this situation.

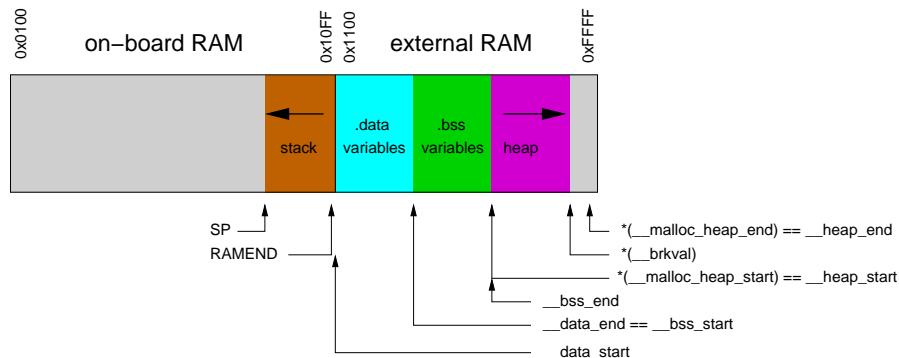


Figure 2: Internal RAM: stack only, external RAM: variables and heap

If dynamic memory should be placed in external RAM, while keeping the variables in internal RAM, something like the following could be used. Note that for demonstration purposes, the assignment of the various regions has not been made adjacent in this example, so there are "holes" below and above the heap in external RAM that remain completely inaccessible by regular variables or dynamic memory allocations (shown in light bisque color in the picture below).

```
avr-gcc ... -Wl,--defsym=__heap_start=0x802000,--defsym=__heap_end=0x803fff ...
```

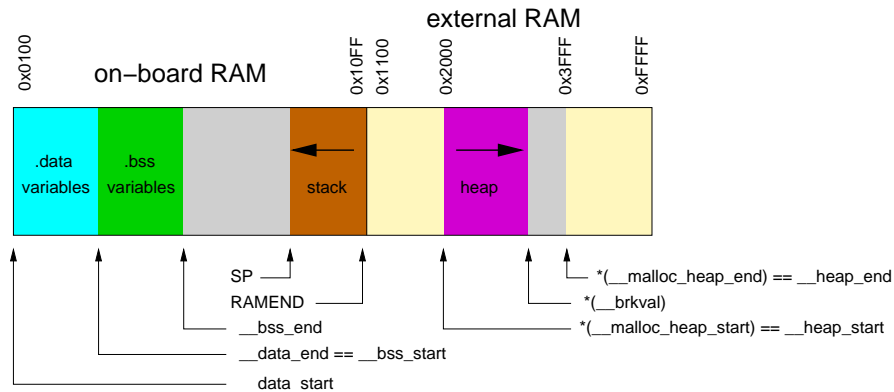


Figure 3: Internal RAM: variables and stack, external RAM: heap

If `__malloc_heap_end` is 0, the allocator attempts to detect the bottom of stack in order to prevent a stack-heap collision when extending the actual size of the heap to gain more space for dynamic memory. It will not try to go beyond the current stack limit, decreased by `__malloc_margin` bytes. Thus, all possible stack frames of interrupt routines that could interrupt the current function, plus all further nested function calls must not require more stack space, or they will risk colliding with the data segment.

The default value of `__malloc_margin` is set to 32.

3.4 Implementation details

Dynamic memory allocation requests will be returned with a two-byte header prepended that records the size of the allocation. This is later used by `free()`. The returned address points just beyond that header. Thus, if the application accidentally writes before the returned memory region, the internal consistency of the memory allocator is compromised.

The implementation maintains a simple freelist that accounts for memory blocks that have been returned in previous calls to `free()`. Note that all of this memory is considered to be successfully added to the heap already, so no further checks against stack-heap collisions are done when recycling memory from the freelist.

The freelist itself is not maintained as a separate data structure, but rather by modifying the contents of the freed memory to contain pointers chaining the pieces together. That way, no additional memory is required to maintain this list except for a variable that keeps track of the lowest memory segment available for reallocation. Since both, a chain pointer and the size of the chunk need to be recorded in each chunk, the minimum chunk size on the freelist is four bytes.

When allocating memory, first the freelist is walked to see if it could satisfy the request. If there's a chunk available on the freelist that will fit the request exactly, it will be taken, disconnected from the freelist, and returned to the caller. If no exact match could be found, the closest match that would just satisfy the request will be used. The chunk will normally be split up into one to be returned to the caller, and another (smaller) one that will remain on the freelist. In case this chunk was only up to two bytes larger than the request, the request will simply be altered internally to also account for these additional bytes since no separate freelist entry could be split off in that case.

If nothing could be found on the freelist, heap extension is attempted. This is where `__malloc_margin` will be considered if the heap is operating below the stack, or where `__malloc_heap_end` will be verified otherwise.

If the remaining memory is insufficient to satisfy the request, `NULL` will eventually be returned to the caller.

When calling `free()`, a new freelist entry will be prepared. An attempt is then made to aggregate the new entry with possible adjacent entries, yielding a single larger entry available for further allocations. That way, the potential for heap fragmentation is hopefully reduced. When deallocating the topmost chunk of memory, the size of the heap is reduced.

A call to `realloc()` first determines whether the operation is about to grow or shrink the current allocation. When shrinking, the case is easy: the existing chunk is split, and the tail of the region that is no longer to be used is passed to the standard

`free()` function for insertion into the freelist. Checks are first made whether the tail chunk is large enough to hold a chunk of its own at all, otherwise `realloc()` will simply do nothing, and return the original region.

When growing the region, it is first checked whether the existing allocation can be extended in-place. If so, this is done, and the original pointer is returned without copying any data contents. As a side-effect, this check will also record the size of the largest chunk on the freelist.

If the region cannot be extended in-place, but the old chunk is at the top of heap, and the above freelist walk did not reveal a large enough chunk on the freelist to satisfy the new request, an attempt is made to quickly extend this topmost chunk (and thus the heap), so no need arises to copy over the existing data. If there's no more space available in the heap (same check is done as in `malloc()`), the entire request will fail.

Otherwise, `malloc()` will be called with the new request size, the existing data will be copied over, and `free()` will be called on the old region.

4 Memory Sections

Remarks

Need to list all the sections which are available to the avr.

Weak Bindings

FIXME: need to discuss the `.weak` directive.

The following describes the various sections available.

4.1 The `.text` Section

The `.text` section contains the actual machine instructions which make up your program. This section is further subdivided by the `.initN` and `.finiN` sections discussed below.

Note

The `avr-size` program (part of `binutils`), coming from a Unix background, doesn't account for the `.data` initialization space added to the `.text` section, so in order to know how much flash the final program will consume, one needs to add the values for both, `.text` and `.data` (but not `.bss`), while the amount of pre-allocated SRAM is the sum of `.data` and `.bss`.

4.2 The `.data` Section

This section contains static data which was defined in your code. Things like the following would end up in `.data`:

```
char err_str[] = "Your program has died a horrible death!";
struct point pt = { 1, 1 };
```

It is possible to tell the linker the SRAM address of the beginning of the `.data` section. This is accomplished by adding `-Wl,-Tdata,addr` to the `avr-gcc` command used to link your program. Note that `addr` must be offset by adding `0x800000` to the real SRAM address so that the linker knows that the address is in the SRAM memory space. Thus, if you want the `.data` section to start at `0x1100`, pass `0x801100` at the address to the linker. [offset [explained](#)]

Note

When using `malloc()` in the application (which could even happen inside library calls), [additional adjustments](#) are required.

4.3 The .bss Section

Uninitialized global or static variables end up in the .bss section.

4.4 The .eeprom Section

This is where eeprom variables are stored.

4.5 The .noinit Section

This sections is a part of the .bss section. What makes the .noinit section special is that variables which are defined as such:

```
int foo __attribute__((section (".noinit")));
```

will not be initialized to zero during startup as would normal .bss data.

Only uninitialized variables can be placed in the .noinit section. Thus, the following code will cause `avr-gcc` to issue an error:

```
int bar __attribute__((section (".noinit"))) = 0xaa;
```

It is possible to tell the linker explicitly where to place the .noinit section by adding `-Wl,--section-start=.noinit=0x802000` to the `avr-gcc` command line at the linking stage. For example, suppose you wish to place the .noinit section at SRAM address 0x2000:

```
$ avr-gcc ... -Wl,--section-start=.noinit=0x802000 ...
```

Note

Because of the Harvard architecture of the AVR devices, you must manually add 0x800000 to the address you pass to the linker as the start of the section. Otherwise, the linker thinks you want to put the .noinit section into the .text section instead of .data/.bss and will complain.

Alternatively, you can write your own linker script to automate this. [FIXME: need an example or ref to dox for writing linker scripts.]

4.6 The .initN Sections

These sections are used to define the startup code from reset up through the start of `main()`. These all are subparts of the [.text section](#).

The purpose of these sections is to allow for more specific placement of code within your program.

Note

Sometimes, it is convenient to think of the .initN and .finiN sections as functions, but in reality they are just symbolic names which tell the linker where to stick a chunk of code which is *not* a function. Notice that the examples for [asm](#) and [C](#) can not be called as functions and should not be jumped into.

The **.initN** sections are executed in order from 0 to 9.

.init0:

Weakly bound to `__init()`. If user defines `__init()`, it will be jumped into immediately after a reset.

.init1:

Unused. User definable.

.init2:

In C programs, weakly bound to initialize the stack, and to clear **zero_reg** (r1).

.init3:

Unused. User definable.

.init4:

For devices with > 64 KB of ROM, .init4 defines the code which takes care of copying the contents of .data from the flash to SRAM. For all other devices, this code as well as the code to zero out the .bss section is loaded from libgcc.a.

.init5:

Unused. User definable.

.init6:

Unused for C programs, but used for constructors in C++ programs.

.init7:

Unused. User definable.

.init8:

Unused. User definable.

.init9:

Jumps into `main()`.

4.7 The .finiN Sections

These sections are used to define the exit code executed after return from `main()` or a call to `exit()`. These all are subparts of the [.text section](#).

The **.finiN** sections are executed in descending order from 9 to 0.

.finit9:

Unused. User definable. This is effectively where `_exit()` starts.

.fini8:

Unused. User definable.

.fini7:

Unused. User definable.

.fini6:

Unused for C programs, but used for destructors in C++ programs.

.fini5:

Unused. User definable.

.fini4:

Unused. User definable.

.fini3:

Unused. User definable.

.fini2:

Unused. User definable.

.fini1:

Unused. User definable.

.fini0:

Goes into an infinite loop after program termination and completion of any `_exit()` code (execution of code in the `.fini9` -> `.fini1` sections).

4.8 Using Sections in Assembler Code

Example:

```
#include <avr/io.h>

.section .init1,"ax",@progbits
ldi    r0, 0xff
out    _SFR_IO_ADDR(PORTB), r0
out    _SFR_IO_ADDR(DDRB), r0
```

Note

The `"ax",@progbits` tells the assembler that the section is allocatable ("a"), executable ("x") and contains data ("@progbits"). For more detailed information on the `.section` directive, see the gas user manual.

4.9 Using Sections in C Code

Example:

```
#include <avr/io.h>

void my_init_portb (void) __attribute__((naked)) \
    __attribute__((section(".init3")));

void
my_init_portb (void)
{
    PORTB = 0xff;
    DDRB = 0xff;
}
```

Note

Section `.init3` is used in this example, as this ensures the internal `__zero_reg__` has already been set up. The code generated by the compiler might blindly rely on `__zero_reg__` being really 0.

5 Data in Program Space

5.1 Introduction

So you have some constant data and you're running out of room to store it? Many AVR's have limited amount of RAM in which to store data, but may have more Flash space available. The AVR is a Harvard architecture processor, where Flash is used for the program, RAM is used for data, and they each have separate address spaces. It is a challenge to get constant data to be stored in the Program Space, and to retrieve that data to use it in the AVR application.

The problem is exacerbated by the fact that the C Language was not designed for Harvard architectures, it was designed for Von Neumann architectures where code and data exist in the same address space. This means that any compiler for a Harvard architecture processor, like the AVR, has to use other means to operate with separate address spaces.

Some compilers use non-standard C language keywords, or they extend the standard syntax in ways that are non-standard. The AVR toolset takes a different approach.

GCC has a special keyword, **attribute** that is used to attach different attributes to things such as function declarations, variables, and types. This keyword is followed by an attribute specification in double parentheses. In AVR GCC, there is a special attribute called `progmem`. This attribute is use on data declarations, and tells the compiler to place the data in the Program Memory (Flash).

AVR-Libc provides a simple macro `PROGMEM` that is defined as the attribute syntax of GCC with the `progmem` attribute. This macro was created as a convenience to the end user, as we will see below. The `PROGMEM` macro is defined in the `<avr/pgmspace.h>` system header file.

It is difficult to modify GCC to create new extensions to the C language syntax, so instead, avr-libc has created macros to retrieve the data from the Program Space. These macros are also found in the `<avr/pgmspace.h>` system header file.

5.2 A Note On const

Many users bring up the idea of using C's keyword `const` as a means of declaring data to be in Program Space. Doing this would be an abuse of the intended meaning of the `const` keyword.

`const` is used to tell the compiler that the data is to be "read-only". It is used to help make it easier for the compiler to make certain transformations, or to help the compiler check for incorrect usage of those variables.

For example, the `const` keyword is commonly used in many functions as a modifier on the parameter type. This tells the compiler that the function will only use the parameter as read-only and will not modify the contents of the parameter variable.

`const` was intended for uses such as this, not as a means to identify where the data should be stored. If it were used as a means to define data storage, then it loses its correct meaning (changes its semantics) in other situations such as in the function parameter example.

5.3 Storing and Retrieving Data in the Program Space

Let's say you have some global data:

```
unsigned char mydata[11][10] =
{
    {0x00,0x01,0x02,0x03,0x04,0x05,0x06,0x07,0x08,0x09},
    {0x0A,0x0B,0x0C,0x0D,0x0E,0x0F,0x10,0x11,0x12,0x13},
    {0x14,0x15,0x16,0x17,0x18,0x19,0x1A,0x1B,0x1C,0x1D},
    {0x1E,0x1F,0x20,0x21,0x22,0x23,0x24,0x25,0x26,0x27},
    {0x28,0x29,0x2A,0x2B,0x2C,0x2D,0x2E,0x2F,0x30,0x31},
    {0x32,0x33,0x34,0x35,0x36,0x37,0x38,0x39,0x3A,0x3B},
    {0x3C,0x3D,0x3E,0x3F,0x40,0x41,0x42,0x43,0x44,0x45},
    {0x46,0x47,0x48,0x49,0x4A,0x4B,0x4C,0x4D,0x4E,0x4F},
}
```

```

        {0x50,0x51,0x52,0x53,0x54,0x55,0x56,0x57,0x58,0x59},
        {0x5A,0x5B,0x5C,0x5D,0x5E,0x5F,0x60,0x61,0x62,0x63},
        {0x64,0x65,0x66,0x67,0x68,0x69,0x6A,0x6B,0x6C,0x6D}
    };

```

and later in your code you access this data in a function and store a single byte into a variable like so:

```
byte = mydata[i][j];
```

Now you want to store your data in Program Memory. Use the `PROGMEM` macro found in `<avr/pgmspace.h>` and put it after the declaration of the variable, but before the initializer, like so:

```

#include <avr/pgmspace.h>
.
.
.
unsigned char mydata[11][10] PROGMEM =
{
    {0x00,0x01,0x02,0x03,0x04,0x05,0x06,0x07,0x08,0x09},
    {0x0A,0x0B,0x0C,0x0D,0x0E,0x0F,0x10,0x11,0x12,0x13},
    {0x14,0x15,0x16,0x17,0x18,0x19,0x1A,0x1B,0x1C,0x1D},
    {0x1E,0x1F,0x20,0x21,0x22,0x23,0x24,0x25,0x26,0x27},
    {0x28,0x29,0x2A,0x2B,0x2C,0x2D,0x2E,0x2F,0x30,0x31},
    {0x32,0x33,0x34,0x35,0x36,0x37,0x38,0x39,0x3A,0x3B},
    {0x3C,0x3D,0x3E,0x3F,0x40,0x41,0x42,0x43,0x44,0x45},
    {0x46,0x47,0x48,0x49,0x4A,0x4B,0x4C,0x4D,0x4E,0x4F},
    {0x50,0x51,0x52,0x53,0x54,0x55,0x56,0x57,0x58,0x59},
    {0x5A,0x5B,0x5C,0x5D,0x5E,0x5F,0x60,0x61,0x62,0x63},
    {0x64,0x65,0x66,0x67,0x68,0x69,0x6A,0x6B,0x6C,0x6D}
};

```

That's it! Now your data is in the Program Space. You can compile, link, and check the map file to verify that `mydata` is placed in the correct section.

Now that your data resides in the Program Space, your code to access (read) the data will no longer work. The code that gets generated will retrieve the data that is located at the address of the `mydata` array, plus offsets indexed by the `i` and `j` variables. However, the final address that is calculated where to retrieve the data points to the Data Space! Not the Program Space where the data is actually located. It is likely that you will be retrieving some garbage. The problem is that AVR GCC does not intrinsically know that the data resides in the Program Space.

The solution is fairly simple. The "rule of thumb" for accessing data stored in the Program Space is to access the data as you normally would (as if the variable is stored in Data Space), like so:

```
byte = mydata[i][j];
```

then take the address of the data:

```
byte = &(mydata[i][j]);
```

then use the appropriate `pgm_read_*` macro, and the address of your data becomes the parameter to that macro:

```
byte = pgm_read_byte(&(mydata[i][j]));
```

The `pgm_read_*` macros take an address that points to the Program Space, and retrieves the data that is stored at that address. This is why you take the address of the offset into the array. This address becomes the parameter to the macro so it can generate the correct code to retrieve the data from the Program Space. There are different `pgm_read_*` macros to read different sizes of data at the address given.

5.4 Storing and Retrieving Strings in the Program Space

Now that you can successfully store and retrieve simple data from Program Space you want to store and retrieve strings from Program Space. And specifically you want to store an array of strings to Program Space. So you start off with your array, like so:

```
char *string_table[] =
{
    "String 1",
    "String 2",
    "String 3",
    "String 4",
    "String 5"
};
```

and then you add your `PROGMEM` macro to the end of the declaration:

```
char *string_table[] PROGMEM =
{
    "String 1",
    "String 2",
    "String 3",
    "String 4",
    "String 5"
};
```

Right? WRONG!

Unfortunately, with GCC attributes, they affect only the declaration that they are attached to. So in this case, we successfully put the `string_table` variable, the array itself, in the Program Space. This DOES NOT put the actual strings themselves into Program Space. At this point, the strings are still in the Data Space, which is probably not what you want.

In order to put the strings in Program Space, you have to have explicit declarations for each string, and put each string in Program Space:

```
char string_1[] PROGMEM = "String 1";
char string_2[] PROGMEM = "String 2";
char string_3[] PROGMEM = "String 3";
char string_4[] PROGMEM = "String 4";
char string_5[] PROGMEM = "String 5";
```

Then use the new symbols in your table, like so:

```
PGM_P string_table[] PROGMEM =
{
    string_1,
    string_2,
    string_3,
    string_4,
    string_5
};
```

Now this has the effect of putting `string_table` in Program Space, where `string_table` is an array of pointers to characters (strings), where each pointer is a pointer to the Program Space, where each string is also stored.

The `PGM_P` type above is also a macro that is defined as a pointer to a character in the Program Space.

Retrieving the strings is a different matter. You probably don't want to pull the string out of Program Space, byte by byte, using the `pgm_read_byte()` macro. There are other functions declared in the `<avr/pgmspace.h>` header file that work with strings that are stored in the Program Space.

For example if you want to copy the string from Program Space to a buffer in RAM (like an automatic variable inside a function, that is allocated on the stack), you can do this:

```
void foo(void)
{
    char buffer[10];

    for (unsigned char i = 0; i < 5; i++)
    {
        strcpy_P(buffer, (PGM_P)pgm_read_word(&(string_table[
            i])));

        // Display buffer on LCD.
    }
    return;
}
```

Here, the `string_table` array is stored in Program Space, so we access it normally, as if were stored in Data Space, then take the address of the location we want to access, and use the address as a parameter to `pgm_read_word`. We use the `pgm_read_word` macro to read the string pointer out of the `string_table` array. Remember that a pointer is 16-bits, or word size. The `pgm_read_word` macro will return a 16-bit unsigned integer. We then have to typecast it as a true pointer to program memory, `PGM_P`. This pointer is an address in Program Space pointing to the string that we want to copy. This pointer is then used as a parameter to the function `strcpy_P`. The function `strcpy_P` is just like the regular `strcpy` function, except that it copies a string from Program Space (the second parameter) to a buffer in the Data Space (the first parameter).

There are many string functions available that work with strings located in Program Space. All of these special string functions have a suffix of `_P` in the function name, and are declared in the `<avr/pgmspace.h>` header file.

5.5 Caveats

The macros and functions used to retrieve data from the Program Space have to generate some extra code in order to actually load the data from the Program Space. This incurs some extra overhead in terms of code space (extra opcodes) and execution time. Usually, both the space and time overhead is minimal compared to the space savings of putting data in Program Space. But you should be aware of this so you can minimize the number of calls within a single function that gets the same piece of data from Program Space. It is always instructive to look at the resulting disassembly from the compiler.

6 avr-libc and assembler programs

6.1 Introduction

There might be several reasons to write code for AVR microcontrollers using plain assembler source code. Among them are:

- Code for devices that do not have RAM and are thus not supported by the C compiler.
- Code for very time-critical applications.
- Special tweaks that cannot be done in C.

Usually, all but the first could probably be done easily using the `inline assembler` facility of the compiler.

Although `avr-libc` is primarily targeted to support programming AVR microcontrollers using the C (and C++) language, there's limited support for direct assembler usage as well. The benefits of it are:

- Use of the C preprocessor and thus the ability to use the same symbolic constants that are available to C programs, as well as a flexible macro concept that can use any valid C identifier as a macro (whereas the assembler's macro concept is basically targeted to use a macro in place of an assembler instruction).

- Use of the runtime framework like automatically assigning interrupt vectors. For devices that have RAM, [initializing the RAM variables](#) can also be utilized.

6.2 Invoking the compiler

For the purpose described in this document, the assembler and linker are usually not invoked manually, but rather using the C compiler frontend (`avr-gcc`) that in turn will call the assembler and linker as required.

This approach has the following advantages:

- There is basically only one program to be called directly, `avr-gcc`, regardless of the actual source language used.
- The invocation of the C preprocessor will be automatic, and will include the appropriate options to locate required include files in the filesystem.
- The invocation of the linker will be automatic, and will include the appropriate options to locate additional libraries as well as the application start-up code (`crtXXX.o`) and linker script.

Note that the invocation of the C preprocessor will be automatic when the filename provided for the assembler file ends in `.S` (the capital letter "s"). This would even apply to operating systems that use case-insensitive filesystems since the actual decision is made based on the case of the filename suffix given on the command-line, not based on the actual filename from the file system.

Alternatively, the language can explicitly be specified using the `-x assembler-with-cpp` option.

6.3 Example program

The following annotated example features a simple 100 kHz square wave generator using an AT90S1200 clocked with a 10.7 MHz crystal. Pin PD6 will be used for the square wave output.

```
#include <avr/io.h>                ; Note [1]

work    =    16                    ; Note [2]
tmp     =    17

inttmp  =    19

intsav  =    0

SQUARE  =    PD6                  ; Note [3]

tmconst= 10700000 / 200000        ; Note [4]:
fuzz=   8                        ; 100 kHz => 200000 edges/s
                                ; # clocks in ISR until TCNT0 is set

        .section .text

        .global main              ; Note [5]
main:
    rcall    ioinit

1:      rjmp   1b                  ; Note [6]

        .global TIMER0_OVF_vect   ; Note [7]
TIMER0_OVF_vect:
    ldi      inttmp, 256 - tmconst + fuzz
    out      _SFR_IO_ADDR(TCNT0), inttmp ; Note [8]

    in       intsav, _SFR_IO_ADDR(SREG) ; Note [9]

    sbic     _SFR_IO_ADDR(PORTD), SQUARE
    rjmp     1f
    sbi      _SFR_IO_ADDR(PORTD), SQUARE
    rjmp     2f
```



```

1:      cbi      _SFR_IO_ADDR(PORTD), SQUARE
2:

        out      _SFR_IO_ADDR(SREG), intsav
        reti

ioinit:
        sbi      _SFR_IO_ADDR(DDRD), SQUARE

        ldi      work, _BV(TOIE0)
        out      _SFR_IO_ADDR(TIMSK), work

        ldi      work, _BV(CS00)          ; tmr0: CK/1
        out      _SFR_IO_ADDR(TCCR0), work

        ldi      work, 256 - tmconst
        out      _SFR_IO_ADDR(TCNT0), work

        sei

        ret

        .global __vector_default          ; Note [10]
__vector_default:
        reti

        .end

```

Note [1]

As in C programs, this includes the central processor-specific file containing the IO port definitions for the device. Note that not all include files can be included into assembler sources.

Note [2]

Assignment of registers to symbolic names used locally. Another option would be to use a C preprocessor macro instead:

```
#define work 16
```

Note [3]

Our bit number for the square wave output. Note that the right-hand side consists of a CPP macro which will be substituted by its value (6 in this case) before actually being passed to the assembler.

Note [4]

The assembler uses integer operations in the host-defined integer size (32 bits or longer) when evaluating expressions. This is in contrast to the C compiler that uses the C type `int` by default in order to calculate constant integer expressions.

In order to get a 100 kHz output, we need to toggle the PD6 line 200000 times per second. Since we use timer 0 without any prescaling options in order to get the desired frequency and accuracy, we already run into serious timing considerations: while accepting and processing the timer overflow interrupt, the timer already continues to count. When pre-loading the `TCCNT0` register, we therefore have to account for the number of clock cycles required for interrupt acknowledge and for the instructions to reload `TCCNT0` (4 clock cycles for interrupt acknowledge, 2 cycles for the jump from the interrupt vector, 2 cycles for the 2 instructions that reload `TCCNT0`). This is what the constant `fuzz` is for.

Note [5]

External functions need to be declared to be `.global`. `main` is the application entry point that will be jumped to from the initialization routine in `crt0.o`.

Note [6]

The main loop is just a single jump back to itself. Square wave generation itself is completely handled by the timer 0 overflow interrupt service. A `sleep` instruction (using idle mode) could be used as well, but probably would not conserve much energy anyway since the interrupt service is executed quite frequently.

Note [7]

Interrupt functions can get the [usual names](#) that are also available to C programs. The linker will then put them into the appropriate interrupt vector slots. Note that they must be declared `.global` in order to be acceptable for this purpose. This will only work if `<avr/io.h>` has been included. Note that the assembler or linker have no chance to check the correct spelling of an interrupt function, so it should be double-checked. (When analyzing the resulting object file using `avr-objdump` or `avr-nm`, a name like `__vector_N` should appear, with *N* being a small integer number.)

Note [8]

As explained in the section about [special function registers](#), the actual IO port address should be obtained using the macro `_SFR_IO_ADDR`. (The AT90S1200 does not have RAM thus the memory-mapped approach to access the IO registers is not available. It would be slower than using `in/out` instructions anyway.)

Since the operation to reload `TCCR0` is time-critical, it is even performed before saving `SREG`. Obviously, this requires that the instructions involved would not change any of the flag bits in `SREG`.

Note [9]

Interrupt routines must not clobber the global CPU state. Thus, it is usually necessary to save at least the state of the flag bits in `SREG`. (Note that this serves as an example here only since actually, all the following instructions would not modify `SREG` either, but that's not commonly the case.)

Also, it must be made sure that registers used inside the interrupt routine do not conflict with those used outside. In the case of a RAM-less device like the AT90S1200, this can only be done by agreeing on a set of registers to be used exclusively inside the interrupt routine; there would not be any other chance to "save" a register anywhere.

If the interrupt routine is to be linked together with C modules, care must be taken to follow the register usage guidelines imposed by the C compiler. Also, any register modified inside the interrupt service needs to be saved, usually on the stack.

Note [10]

As explained in [Interrupts](#), a global "catch-all" interrupt handler that gets all unassigned interrupt vectors can be installed using the name `__vector_default`. This must be `.global`, and obviously, should end in a `reti` instruction. (By default, a jump to location 0 would be implied instead.)

6.4 Pseudo-ops and operators

The available pseudo-ops in the assembler are described in the GNU assembler (gas) manual. The manual can be found online as part of the current binutils release under <http://sources.redhat.com/binutils/>.

As gas comes from a Unix origin, its pseudo-op and overall assembler syntax is slightly different than the one being used by other assemblers. Numeric constants follow the C notation (prefix `0x` for hexadecimal constants), expressions use a C-like syntax.

Some common pseudo-ops include:

- `.byte` allocates single byte constants
- `.ascii` allocates a non-terminated string of characters
- `.asciz` allocates a `\0`-terminated string of characters (C string)
- `.data` switches to the `.data` section (initialized RAM variables)
- `.text` switches to the `.text` section (code and ROM constants)
- `.set` declares a symbol as a constant expression (identical to `.equ`)
- `.global` (or `.globl`) declares a public symbol that is visible to the linker (e. g. function entry point, global variable)
- `.extern` declares a symbol to be externally defined; this is effectively a comment only, as gas treats all undefined symbols it encounters as globally undefined anyway

Note that `.org` is available in gas as well, but is a fairly pointless pseudo-op in an assembler environment that uses relocatable object files, as it is the linker that determines the final position of some object in ROM or RAM.

Along with the architecture-independent standard operators, there are some AVR-specific operators available which are unfortunately not yet described in the official documentation. The most notable operators are:

- `lo8` Takes the least significant 8 bits of a 16-bit integer
- `hi8` Takes the most significant 8 bits of a 16-bit integer
- `pm` Takes a program-memory (ROM) address, and converts it into a RAM address. This implies a division by 2 as the AVR handles ROM addresses as 16-bit words (e.g. in an `IJMP` or `ICALL` instruction), and can also handle relocatable symbols on the right-hand side.

Example:

```
ldi    r24, lo8(pm(somefunc))
ldi    r25, hi8(pm(somefunc))
call   something
```

This passes the address of function `somefunc` as the first parameter to function `something`.

7 Inline Assembler Cookbook

AVR-GCC

Inline Assembler Cookbook

About this Document

The GNU C compiler for Atmel AVR RISC processors offers, to embed assembly language code into C programs. This cool feature may be used for manually optimizing time critical parts of the software or to use specific processor instruction, which are not available in the C language.

Because of a lack of documentation, especially for the AVR version of the compiler, it may take some time to figure out the implementation details by studying the compiler and assembler source code. There are also a few sample programs available in the net. Hopefully this document will help to increase their number.

It's assumed, that you are familiar with writing AVR assembler programs, because this is not an AVR assembler programming tutorial. It's not a C language tutorial either.

Note that this document does not cover file written completely in assembler language, refer to [avr-libc and assembler programs](#) for this.

Copyright (C) 2001-2002 by egnite Software GmbH

Permission is granted to copy and distribute verbatim copies of this manual provided that the copyright notice and this permission notice are preserved on all copies. Permission is granted to copy and distribute modified versions of this manual provided that the entire resulting derived work is distributed under the terms of a permission notice identical to this one.

This document describes version 3.3 of the compiler. There may be some parts, which hadn't been completely understood by the author himself and not all samples had been tested so far. Because the author is German and not familiar with the English language, there are definitely some typos and syntax errors in the text. As a programmer the author knows, that a wrong documentation sometimes might be worse than none. Anyway, he decided to offer his little knowledge to the public, in the hope to get enough response to improve this document. Feel free to contact the author via e-mail. For the latest release check <http://www.ethernut.de/>.

Herne, 17th of May 2002 Harald Kipp harald.kipp-at-egnite.de

Note

As of 26th of July 2002, this document has been merged into the documentation for avr-libc. The latest version is now available at <http://savannah.nongnu.org/projects/avr-libc/>.

7.1 GCC asm Statement

Let's start with a simple example of reading a value from port D:

```
asm("in %0, %1" : "=r" (value) : "I" (_SFR_IO_ADDR(PORTD)) );
```

Each `asm` statement is divided by colons into (up to) four parts:

1. The assembler instructions, defined as a single string constant:

```
"in %0, %1"
```

2. A list of output operands, separated by commas. Our example uses just one:

```
"=r" (value)
```

3. A comma separated list of input operands. Again our example uses one operand only:

```
"I" (_SFR_IO_ADDR(PORTD))
```

4. Clobbered registers, left empty in our example.

You can write assembler instructions in much the same way as you would write assembler programs. However, registers and constants are used in a different way if they refer to expressions of your C program. The connection between registers and C operands is specified in the second and third part of the `asm` instruction, the list of input and output operands, respectively. The general form is

```
asm(code : output operand list : input operand list [: clobber list]);
```

In the code section, operands are referenced by a percent sign followed by a single digit. `%0` refers to the first, `%1` to the second operand and so forth. From the above example:

`%0` refers to `"=r" (value)` and

`%1` refers to `"I" (_SFR_IO_ADDR(PORTD))`.

This may still look a little odd now, but the syntax of an operand list will be explained soon. Let us first examine the part of a compiler listing which may have been generated from our example:

```
lds r24,value
/* #APP */
in r24, 12
/* #NOAPP */
sts value,r24
```

The comments have been added by the compiler to inform the assembler that the included code was not generated by the compilation of C statements, but by inline assembler statements. The compiler selected register `r24` for storage of the value read from `PORTD`. The compiler could have selected any other register, though. It may not explicitly load or store the value and it may even decide not to include your assembler code at all. All these decisions are part of the compiler's optimization strategy. For example, if you never use the variable `value` in the remaining part of the C program, the compiler will most likely remove your code unless you switched off optimization. To avoid this, you can add the `volatile` attribute to the `asm` statement:

```
asm volatile("in %0, %1" : "=r" (value) : "I" (_SFR_IO_ADDR(PORTD)));
```

Alternatively, operands can be given names. The name is prepended in brackets to the constraints in the operand list, and references to the named operand use the bracketed name instead of a number after the `%` sign. Thus, the above example could also be written as

```
asm("in %[retval], %[port]" :
    [retval] "=r" (value) :
    [port] "I" (_SFR_IO_ADDR(PORTD)) );
```

The last part of the `asm` instruction, the clobber list, is mainly used to tell the compiler about modifications done by the assembler code. This part may be omitted, all other parts are required, but may be left empty. If your assembler routine won't use any input or output operand, two colons must still follow the assembler code string. A good example is a simple statement to disable interrupts:

```
asm volatile("cli");
```

7.2 Assembler Code

You can use the same assembler instruction mnemonics as you'd use with any other AVR assembler. And you can write as many assembler statements into one code string as you like and your flash memory is able to hold.

Note

The available assembler directives vary from one assembler to another.

To make it more readable, you should put each statement on a separate line:

```
asm volatile("nop\n\t"
             "nop\n\t"
             "nop\n\t"
             "nop\n\t"
             "::);
```

The linefeed and tab characters will make the assembler listing generated by the compiler more readable. It may look a bit odd for the first time, but that's the way the compiler creates its own assembler code.

You may also make use of some special registers.

Symbol	Register
__SREG__	Status register at address 0x3F
__SP_H__	Stack pointer high byte at address 0x3E
__SP_L__	Stack pointer low byte at address 0x3D
__tmp_reg__	Register r0, used for temporary storage
__zero_reg__	Register r1, always zero

Register `r0` may be freely used by your assembler code and need not be restored at the end of your code. It's a good idea to use `tmp_reg` and `zero_reg` instead of `r0` or `r1`, just in case a new compiler version changes the register usage definitions.

7.3 Input and Output Operands

Each input and output operand is described by a constraint string followed by a C expression in parentheses. AVR-GCC 3.3 knows the following constraint characters:

Note

The most up-to-date and detailed information on constraints for the avr can be found in the gcc manual.

The `x` register is `r27:r26`, the `y` register is `r29:r28`, and the `z` register is `r31:r30`

Constraint	Used for	Range
a	Simple upper registers	r16 to r23
b	Base pointer registers pairs	y, z
d	Upper register	r16 to r31
e	Pointer register pairs	x, y, z
q	Stack pointer register	SPH:SPL
r	Any register	r0 to r31
t	Temporary register	r0

w	Special upper register pairs	r24, r26, r28, r30
x	Pointer register pair X	x (r27:r26)
y	Pointer register pair Y	y (r29:r28)
z	Pointer register pair Z	z (r31:r30)
G	Floating point constant	0.0
I	6-bit positive integer constant	0 to 63
J	6-bit negative integer constant	-63 to 0
K	Integer constant	2
L	Integer constant	0
I	Lower registers	r0 to r15
M	8-bit integer constant	0 to 255
N	Integer constant	-1
O	Integer constant	8, 16, 24
P	Integer constant	1
Q	(GCC >= 4.2.x) A memory address based on Y or Z pointer with displacement.	
R	(GCC >= 4.3.x) Integer constant.	-6 to 5

The selection of the proper constraint depends on the range of the constants or registers, which must be acceptable to the AVR instruction they are used with. The C compiler doesn't check any line of your assembler code. But it is able to check the constraint against your C expression. However, if you specify the wrong constraints, then the compiler may silently pass wrong code to the assembler. And, of course, the assembler will fail with some cryptic output or internal errors. For example, if you specify the constraint "r" and you are using this register with an "ori" instruction in your assembler code, then the compiler may select any register. This will fail, if the compiler chooses r2 to r15. (It will never choose r0 or r1, because these are used for special purposes.) That's why the correct constraint in that case is "d". On the other hand, if you use the constraint "M", the compiler will make sure that you don't pass anything else but an 8-bit value. Later on we will see how to pass multibyte expression results to the assembler code.

The following table shows all AVR assembler mnemonics which require operands, and the related constraints. Because of the improper constraint definitions in version 3.3, they aren't strict enough. There is, for example, no constraint, which restricts integer constants to the range 0 to 7 for bit set and bit clear operations.

Mnemonic	Constraints		Mnemonic	Constraints
adc	r,r		add	r,r
adiw	w,l		and	r,r
andi	d,M		asr	r
bclr	l		bld	r,l
brbc	l,label		brbs	l,label
bset	l		bst	r,l
cbi	l,l		cbr	d,l
com	r		cp	r,r
cpc	r,r		cpi	d,M
cpse	r,r		dec	r
elpm	t,z		eor	r,r
in	r,l		inc	r
ld	r,e		idd	r,b
ldi	d,M		lds	r,label
lpm	t,z		lsl	r
lsr	r		mov	r,r
movw	r,r		mul	r,r
neg	r		or	r,r
ori	d,M		out	l,r
pop	r		push	r
rol	r		ror	r
sbc	r,r		sbc	d,M
sbi	l,l		sbic	l,l
sbiw	w,l		sbr	d,M
sbr	r,l		sbrs	r,l
ser	d		st	e,r
std	b,r		sts	label,r
sub	r,r		subi	d,M
swap	r			

Constraint characters may be prepended by a single constraint modifier. Constraints without a modifier specify read-only operands. Modifiers are:

Modifier	Specifies
=	Write-only operand, usually used for all output operands.
+	Read-write operand
&	Register should be used for output only

Output operands must be write-only and the C expression result must be an lvalue, which means that the operands must be valid on the left side of assignments. Note, that the compiler will not check if the operands are of reasonable type for the kind of operation used in the assembler instructions.

Input operands are, you guessed it, read-only. But what if you need the same operand for input and output? As stated above, read-write operands are not supported in inline assembler code. But there is another solution. For input operators it is possible to use a single digit in the constraint string. Using digit *n* tells the compiler to use the same register as for the *n*-th operand, starting with zero. Here is an example:

```
asm volatile("swap %0" : "=r" (value) : "0" (value));
```

This statement will swap the nibbles of an 8-bit variable named `value`. Constraint `"0"` tells the compiler, to use the same input register as for the first operand. Note however, that this doesn't automatically imply the reverse case. The compiler may choose the same registers for input and output, even if not told to do so. This is not a problem in most cases, but may be fatal if the output operator is modified by the assembler code before the input operator is used. In the situation where your code depends on different registers used for input and output operands, you must add the `&` constraint modifier to your output operand. The following example demonstrates this problem:


```
asm volatile("in %0,%1" "\n\t"
            "out %1, %2" "\n\t"
            : "=&r" (input)
            : "I" (_SFR_IO_ADDR(port)), "r" (output)
            );
```

In this example an input value is read from a port and then an output value is written to the same port. If the compiler would have chosen the same register for input and output, then the output value would have been destroyed on the first assembler instruction. Fortunately, this example uses the `&` constraint modifier to instruct the compiler not to select any register for the output value, which is used for any of the input operands. Back to swapping. Here is the code to swap high and low byte of a 16-bit value:

```
asm volatile("mov __tmp_reg__, %A0" "\n\t"
            "mov %A0, %B0" "\n\t"
            "mov %B0, __tmp_reg__" "\n\t"
            : "=r" (value)
            : "0" (value)
            );
```

First you will notice the usage of register `__tmp_reg__`, which we listed among other special registers in the [Assembler Code](#) section. You can use this register without saving its contents. Completely new are those letters A and B in `%A0` and `%B0`. In fact they refer to two different 8-bit registers, both containing a part of value.

Another example to swap bytes of a 32-bit value:

```
asm volatile("mov __tmp_reg__, %A0" "\n\t"
            "mov %A0, %D0" "\n\t"
            "mov %D0, __tmp_reg__" "\n\t"
            "mov __tmp_reg__, %B0" "\n\t"
            "mov %B0, %C0" "\n\t"
            "mov %C0, __tmp_reg__" "\n\t"
            : "=r" (value)
            : "0" (value)
            );
```

Instead of listing the same operand as both, input and output operand, it can also be declared as a read-write operand. This must be applied to an output operand, and the respective input operand list remains empty:

```
asm volatile("mov __tmp_reg__, %A0" "\n\t"
            "mov %A0, %D0" "\n\t"
            "mov %D0, __tmp_reg__" "\n\t"
            "mov __tmp_reg__, %B0" "\n\t"
            "mov %B0, %C0" "\n\t"
            "mov %C0, __tmp_reg__" "\n\t"
            : "+r" (value));
```

If operands do not fit into a single register, the compiler will automatically assign enough registers to hold the entire operand. In the assembler code you use `%A0` to refer to the lowest byte of the first operand, `%A1` to the lowest byte of the second operand and so on. The next byte of the first operand will be `%B0`, the next byte `%C0` and so on.

This also implies, that it is often necessary to cast the type of an input operand to the desired size.

A final problem may arise while using pointer register pairs. If you define an input operand

```
"e" (ptr)
```

and the compiler selects register Z (`r30:r31`), then

`%A0` refers to `r30` and

`%B0` refers to `r31`.

But both versions will fail during the assembly stage of the compiler, if you explicitly need Z, like in

```
ld r24,Z
```

If you write

```
ld r24, %a0
```

with a lower case `a` following the percent sign, then the compiler will create the proper assembler line.

7.4 Clobbers

As stated previously, the last part of the `asm` statement, the list of clobbers, may be omitted, including the colon separator. However, if you are using registers, which had not been passed as operands, you need to inform the compiler about this. The following example will do an atomic increment. It increments an 8-bit value pointed to by a pointer variable in one go, without being interrupted by an interrupt routine or another thread in a multithreaded environment. Note, that we must use a pointer, because the incremented value needs to be stored before interrupts are enabled.

```
asm volatile(
    "cli"                "\n\t"
    "ld r24, %a0"        "\n\t"
    "inc r24"            "\n\t"
    "st %a0, r24"        "\n\t"
    "sei"                "\n\t"
    :
    : "e" (ptr)
    : "r24"
);
```

The compiler might produce the following code:

```
cli
ld r24, Z
inc r24
st Z, r24
sei
```

One easy solution to avoid clobbering register `r24` is, to make use of the special temporary register `tmp_reg` defined by the compiler.

```
asm volatile(
    "cli"                "\n\t"
    "ld __tmp_reg__, %a0" "\n\t"
    "inc __tmp_reg__"     "\n\t"
    "st %a0, __tmp_reg__" "\n\t"
    "sei"                "\n\t"
    :
    : "e" (ptr)
);
```

The compiler is prepared to reload this register next time it uses it. Another problem with the above code is, that it should not be called in code sections, where interrupts are disabled and should be kept disabled, because it will enable interrupts at the end. We may store the current status, but then we need another register. Again we can solve this without clobbering a fixed, but let the compiler select it. This could be done with the help of a local C variable.

```
{
    uint8_t s;
    asm volatile(
        "in %0, __SREG__"    "\n\t"
        "cli"                "\n\t"
        "ld __tmp_reg__, %a1" "\n\t"
        "inc __tmp_reg__"     "\n\t"
        "st %a1, __tmp_reg__" "\n\t"
        "out __SREG__, %0"   "\n\t"
        : "=&r" (s)
        : "e" (ptr)
    );
}
```

Now every thing seems correct, but it isn't really. The assembler code modifies the variable, that `ptr` points to. The compiler will not recognize this and may keep its value in any of the other registers. Not only does the compiler work with the wrong value, but the assembler code does too. The C program may have modified the value too, but the compiler didn't update the memory location for optimization reasons. The worst thing you can do in this case is:

```
{
    uint8_t s;
    asm volatile(
        "in %0, __SREG__"           "\n\t"
        "cli"                       "\n\t"
        "ld __tmp_reg__, %a1"       "\n\t"
        "inc __tmp_reg__"           "\n\t"
        "st %a1, __tmp_reg__"       "\n\t"
        "out __SREG__, %0"          "\n\t"
        : "=&r" (s)
        : "e" (ptr)
        : "memory"
    );
}
```

The special clobber "memory" informs the compiler that the assembler code may modify any memory location. It forces the compiler to update all variables for which the contents are currently held in a register before executing the assembler code. And of course, everything has to be reloaded again after this code.

In most situations, a much better solution would be to declare the pointer destination itself volatile:

```
volatile uint8_t *ptr;
```

This way, the compiler expects the value pointed to by `ptr` to be changed and will load it whenever used and store it whenever modified.

Situations in which you need clobbers are very rare. In most cases there will be better ways. Clobbered registers will force the compiler to store their values before and reload them after your assembler code. Avoiding clobbers gives the compiler more freedom while optimizing your code.

7.5 Assembler Macros

In order to reuse your assembler language parts, it is useful to define them as macros and put them into include files. AVR Libc comes with a bunch of them, which could be found in the directory `avr/include`. Using such include files may produce compiler warnings, if they are used in modules, which are compiled in strict ANSI mode. To avoid that, you can write **asm** instead of `asm` and **volatile** instead of `volatile`. These are equivalent aliases.

Another problem with reused macros arises if you are using labels. In such cases you may make use of the special pattern `%=`, which is replaced by a unique number on each `asm` statement. The following code had been taken from `avr/include/iomacros.h`:

```
#define loop_until_bit_is_clear(port,bit) \
    __asm__ __volatile__ ( \
        "L_%=: " "sbic %0, %1" "\n\t" \
        "rjmp L_%" \
        : /* no outputs */ \
        : "I" (_SFR_IO_ADDR(port)), \
        "I" (bit) \
    )
```

When used for the first time, `L_%=` may be translated to `L_1404`, the next usage might create `L_1405` or whatever. In any case, the labels became unique too.

Another option is to use Unix-assembler style numeric labels. They are explained in `faq_asmstabs`. The above example would then look like:

```
#define loop_until_bit_is_clear(port,bit)
    __asm__ __volatile__ (
        "1: " "sbic %0, %1" "\n\t"
            "rjmp 1b"
            : /* no outputs */
            : "I" (_SFR_IO_ADDR(port)),
              "I" (bit)
    )
```

7.6 C Stub Functions

Macro definitions will include the same assembler code whenever they are referenced. This may not be acceptable for larger routines. In this case you may define a C stub function, containing nothing other than your assembler code.

```
void delay(uint8_t ms)
{
    uint16_t cnt;
    asm volatile (
        "\n"
        "L_d11%=: " "\n\t"
        "mov %A0, %A2" "\n\t"
        "mov %B0, %B2" "\n\t"
        "L_d12%=: " "\n\t"
        "sbw %A0, 1" "\n\t"
        "brne L_d12%=: " "\n\t"
        "dec %1" "\n\t"
        "brne L_d11%=: " "\n\t"
        : "=w" (cnt)
        : "r" (ms), "r" (delay_count)
    );
}
```

The purpose of this function is to delay the program execution by a specified number of milliseconds using a counting loop. The global 16 bit variable `delay_count` must contain the CPU clock frequency in Hertz divided by 4000 and must have been set before calling this routine for the first time. As described in the [clobber](#) section, the routine uses a local variable to hold a temporary value.

Another use for a local variable is a return value. The following function returns a 16 bit value read from two successive port addresses.

```
uint16_t inw(uint8_t port)
{
    uint16_t result;
    asm volatile (
        "in %A0,%1" "\n\t"
        "in %B0,(%1) + 1"
        : "=r" (result)
        : "I" (_SFR_IO_ADDR(port))
    );
    return result;
}
```

Note

`inw()` is supplied by `avr-libc`.

7.7 C Names Used in Assembler Code

By default AVR-GCC uses the same symbolic names of functions or variables in C and assembler code. You can specify a different name for the assembler code by using a special form of the `asm` statement:

```
unsigned long value asm("clock") = 3686400;
```

This statement instructs the compiler to use the symbol name `clock` rather than `value`. This makes sense only for external or static variables, because local variables do not have symbolic names in the assembler code. However, local variables may be held in registers.

With AVR-GCC you can specify the use of a specific register:

```
void Count(void)
{
    register unsigned char counter asm("r3");

    ... some code...
    asm volatile("clr r3");
    ... more code...
}
```

The assembler instruction, `"clr r3"`, will clear the variable `counter`. AVR-GCC will not completely reserve the specified register. If the optimizer recognizes that the variable will not be referenced any longer, the register may be re-used. But the compiler is not able to check whether this register usage conflicts with any predefined register. If you reserve too many registers in this way, the compiler may even run out of registers during code generation.

In order to change the name of a function, you need a prototype declaration, because the compiler will not accept the `asm` keyword in the function definition:

```
extern long Calc(void) asm ("CALCULATE");
```

Calling the function `Calc()` will create assembler instructions to call the function `CALCULATE`.

7.8 Links

For a more thorough discussion of inline assembly usage, see the gcc user manual. The latest version of the gcc manual is always available here: <http://gcc.gnu.org/onlinedocs/>

8 How to Build a Library

8.1 Introduction

So you keep reusing the same functions that you created over and over? Tired of cut and paste going from one project to the next? Would you like to reduce your maintenance overhead? Then you're ready to create your own library! Code reuse is a very laudable goal. With some upfront investment, you can save time and energy on future projects by having ready-to-go libraries. This chapter describes some background information, design considerations, and practical knowledge that you will need to create and use your own libraries.

8.2 How the Linker Works

The compiler compiles a single high-level language file (C language, for example) into a single object module file. The linker (`ld`) can only work with object modules to link them together. Object modules are the smallest unit that the linker works with.

Typically, on the linker command line, you will specify a set of object modules (that has been previously compiled) and then a list of libraries, including the Standard C Library. The linker takes the set of object modules that you specify on the command line and links them together. Afterwards there will probably be a set of "undefined references". A reference is essentially a function call. An undefined reference is a function call, with no defined function to match the call.

The linker will then go through the libraries, in order, to match the undefined references with function definitions that are found in the libraries. If it finds the function that matches the call, the linker will then link in the object module in which

the function is located. This part is important: the linker links in THE ENTIRE OBJECT MODULE in which the function is located. Remember, the linker knows nothing about the functions internal to an object module, other than symbol names (such as function names). The smallest unit the linker works with is object modules.

When there are no more undefined references, the linker has linked everything and is done and outputs the final application.

8.3 How to Design a Library

How the linker behaves is very important in designing a library. Ideally, you want to design a library where only the functions that are called are the only functions to be linked into the final application. This helps keep the code size to a minimum. In order to do this, with the way the linker works, is to only write one function per code module. This will compile to one function per object module. This is usually a very different way of doing things than writing an application!

There are always exceptions to the rule. There are generally two cases where you would want to have more than one function per object module.

The first is when you have very complementary functions that it doesn't make much sense to split them up. For example, `malloc()` and `free()`. If someone is going to use `malloc()`, they will very likely be using `free()` (or at least should be using `free()`). In this case, it makes more sense to aggregate those two functions in the same object module.

The second case is when you want to have an Interrupt Service Routine (ISR) in your library that you want to link in. The problem in this case is that the linker looks for unresolved references and tries to resolve them with code in libraries. A reference is the same as a function call. But with ISRs, there is no function call to initiate the ISR. The ISR is placed in the Interrupt Vector Table (IVT), hence no call, no reference, and no linking in of the ISR. In order to do this, you have to trick the linker in a way. Aggregate the ISR, with another function in the same object module, but have the other function be something that is required for the user to call in order to use the ISR, like perhaps an initialization function for the subsystem, or perhaps a function that enables the ISR in the first place.

8.4 Creating a Library

The librarian program is called `ar` (for "archiver") and is found in the GNU Binutils project. This program will have been built for the AVR target and will therefore be named `avr-ar`.

The job of the librarian program is simple: aggregate a list of object modules into a single library (archive) and create an index for the linker to use. The name that you create for the library filename must follow a specific pattern: `libname.a`. The *name* part is the unique part of the filename that you create. It makes it easier if the *name* part relates to what the library is about. This *name* part must be prefixed by "lib", and it must have a file extension of `.a`, for "archive". The reason for the special form of the filename is for how the library gets used by the toolchain, as we will see later on.

Note

The filename is case-sensitive. Use a lowercase "lib" prefix, and a lowercase ".a" as the file extension.

The command line is fairly simple:

```
avr-ar rcs <library name> <list of object modules>
```

The `r` command switch tells the program to insert the object modules into the archive with replacement. The `c` command line switch tells the program to create the archive. And the `s` command line switch tells the program to write an object-file index into the archive, or update an existing one. This last switch is very important as it helps the linker to find what it needs to do its job.

Note

The command line switches are case sensitive! There are uppercase switches that have completely different actions.

MFile and the WinAVR distribution contain a Makefile Template that includes the necessary command lines to build a library. You will have to manually modify the template to switch it over to build a library instead of an application.

See the GNU Binutils manual for more information on the `ar` program.

8.5 Using a Library

To use a library, use the `-l` switch on your linker command line. The string immediately following the `-l` is the unique part of the library filename that the linker will link in. For example, if you use:

```
-lm
```

this will expand to the library filename:

```
libm.a
```

which happens to be the math library included in `avr-libc`.

If you use this on your linker command line:

```
-lprintf_flt
```

then the linker will look for a library called:

```
libprintf_flt.a
```

This is why naming your library is so important when you create it!

The linker will search libraries in the order that they appear on the command line. Whichever function is found first that matches the undefined reference, it will be linked in.

There are also command line switches that tell GCC which directory to look in (`-L`) for the libraries that are specified to be linked in with `-l`.

See the GNU Binutils manual for more information on the GNU linker (`ld`) program.

9 Benchmarks

The results below can only give a rough estimate of the resources necessary for using certain library functions. There is a number of factors which can both increase or reduce the effort required:

- Expenses for preparation of operands and their stack are not considered.
- In the table, the size includes all additional functions (for example, function to multiply two integers) but they are only linked from the library.
- Expenses of time of performance of some functions essentially depend on parameters of a call, for example, `qsort()` is recursive, and `sprintf()` receives parameters in a stack.
- Different versions of the compiler can give a significant difference in code size and execution time. For example, the `dtostrf()` function, compiled with `avr-gcc 3.4.6`, requires 930 bytes. After transition to `avr-gcc 4.2.3`, the size become 1088 bytes.

9.1 A few of libc functions.

Avr-gcc version is 4.2.3

The size of function is given in view of all picked up functions. By default Avr-libc is compiled with `-mcall-prologues` option. In brackets the size without taking into account modules of a prologue and an epilogue is resulted. Both of the size can coincide, if function does not cause a prologue/epilogue.

Function	Units	Avr2	Avr25	Avr4
atoi ("12345")	Flash bytes Stack bytes MCU clocks	82 (82) 2 155	78 (78)	74 (74) 2 149
atol ("12345")	Flash bytes Stack bytes MCU clocks	122 (122) 2 221	118 (118)	118 (118) 2 219
dtostre (1.2345, s, 6, 0)	Flash bytes Stack bytes MCU clocks	1184 (1072) 17 1313	1088 (978)	1088 (978) 17 1152
dtostrf (1.2345, 15, 6, s)	Flash bytes Stack bytes MCU clocks	1676 (1564) 36 1608	1548 (1438)	1548 (1438) 36 1443
itoa (12345, s, 10)	Flash bytes Stack bytes MCU clocks	150 (150) 4 1172	134 (134)	134 (134) 4 1152
ltoa (12345L, s, 10)	Flash bytes Stack bytes MCU clocks	220 (220) 9 3174	200 (200)	200 (200) 9 3136
malloc (1)	Flash bytes Stack bytes MCU clocks	554 (554) 4 196	506 (506)	506 (506) 4 178
realloc ((void *)0, 1)	Flash bytes Stack bytes MCU clocks	1152 (1040) 20 303	1042 (932)	1042 (932) 20 280
qsort (s, sizeof(s), 1, cmp)	Flash bytes Stack bytes MCU clocks	1242 (1130) 38 20914	990 (880)	1008 (898) 38 16678
sprintf_min (s, "%d", 12345)	Flash bytes Stack bytes MCU clocks	1216 (1104) 59 1846	1090 (980)	1086 (976) 59 1711
sprintf (s, "%d", 12345)	Flash bytes Stack bytes MCU clocks	1674 (1562) 58 1610	1542 (1432)	1498 (1388) 58 1528
sprintf_flt (s, "%e", 1.2345)	Flash bytes Stack bytes MCU clocks	3334 (3222) 66 2513	3084 (2974)	3040 (2930) 66 2297
sscanf_min ("12345", "%d", &i)	Flash bytes Stack bytes MCU clocks	1540 (1428) 55 1339	1354 (1244)	1354 (1244) 55 1240
sscanf ("12345", "%d", &i)	Flash bytes Stack bytes MCU clocks	1950 (1838) 53 1334	1704 (1594)	1704 (1594) 53 1235
sscanf ("point,color", "[%a-z]", s)	Flash bytes Stack bytes MCU clocks	1950 (1838) 87 2878	1704 (1594)	1704 (1594) 87 2718
sscanf_flt ("1.2345", "%e", &x)	Flash bytes Stack bytes MCU clocks	3298 (3186) 63 2187	2934 (2824)	2918 (2808) 63 1833
strtod ("1.2345", &p)	Flash bytes Stack bytes MCU clocks	1570 (1458) 22 1237	1472 (1362)	1456 (1346) 22 971

strtol ("12345", &p, 0)	Flash bytes Stack bytes MCU clocks	942 (830) 29 1074	874 (764)	808 (698) 21 722
-------------------------	--	-------------------------	-----------	------------------------

9.2 Math functions.

The table contains the number of MCU clocks to calculate a function with a given argument(s). The main reason of a big difference between Avr2 and Avr4 is a hardware multiplication.

Function	Avr2	Avr4
__addsf3 (1.234, 5.678)	113	108
__mulsf3 (1.234, 5.678)	375	138
__divsf3 (1.234, 5.678)	466	465
acos (0.54321)	4411	2455
asin (0.54321)	4517	2556
atan (0.54321)	4710	2271
atan2 (1.234, 5.678)	5270	2857
cbrt (1.2345)	2684	2555
ceil (1.2345)	177	177
cos (1.2345)	3387	1671
cosh (1.2345)	4922	2979
exp (1.2345)	4708	2765
fdim (5.678, 1.234)	111	111
floor (1.2345)	180	180
fmax (1.234, 5.678)	39	37
fmin (1.234, 5.678)	35	35
fmod (5.678, 1.234)	131	131
frexp (1.2345, 0)	42	41
hypot (1.234, 5.678)	1341	866
ldexp (1.2345, 6)	42	42
log (1.2345)	4142	2134
log10 (1.2345)	4498	2260
modf (1.2345, 0)	433	429
pow (1.234, 5.678)	9293	5047
round (1.2345)	150	150
sin (1.2345)	3353	1653
sinh (1.2345)	4946	3003
sqrt (1.2345)	494	492
tan (1.2345)	4381	2426
tanh (1.2345)	5126	3173
trunc (1.2345)	178	178

10 Porting From IAR to AVR GCC

10.1 Introduction

C language was designed to be a portable language. There two main types of porting activities: porting an application to a different platform (OS and/or processor), and porting to a different compiler. Porting to a different compiler can be exacerbated when the application is an embedded system. For example, the C language Standard, strangely, does not specify a standard for declaring and defining Interrupt Service Routines (ISRs). Different compilers have different ways of defining registers, some of which use non-standard language constructs.

This chapter describes some methods and pointers on porting an AVR application built with the IAR compiler to the GNU toolchain (AVR GCC). Note that this may not be an exhaustive list.

10.2 Registers

IO header files contain identifiers for all the register names and bit names for a particular processor. IAR has individual header files for each processor and they must be included when registers are being used in the code. For example:

```
#include <iom169.h>
```

Note

IAR does not always use the same register names or bit names that are used in the AVR datasheet.

AVR GCC also has individual IO header files for each processor. However, the actual processor type is specified as a command line flag to the compiler. (Using the `-mmcu=processor` flag.) This is usually done in the Makefile. This allows you to specify only a single header file for any processor type:

```
#include <avr/io.h>
```

Note

The forward slash in the `<avr/io.h>` file name that is used to separate subdirectories can be used on Windows distributions of the toolchain and is the recommended method of including this file.

The compiler knows the processor type and through the single header file above, it can pull in and include the correct individual IO header file. This has the advantage that you only have to specify one generic header file, and you can easily port your application to another processor type without having to change every file to include the new IO header file.

The AVR toolchain tries to adhere to the exact names of the registers and names of the bits found in the AVR datasheet. There may be some discrepancies between the register names found in the IAR IO header files and the AVR GCC IO header files.

10.3 Interrupt Service Routines (ISRs)

As mentioned above, the C language Standard, strangely, does not specify a standard way of declaring and defining an ISR. Hence, every compiler seems to have their own special way of doing so.

IAR declares an ISR like so:

```
#pragma vector=TIMER0_OVF_vect
__interrupt void MotorPWMBottom()
{
    // code
}
```

In AVR GCC, you declare an ISR like so:

```
ISR(PCINT1_vect)
{
    //code
}
```

AVR GCC uses the `ISR` macro to define an ISR. This macro requires the header file:

```
#include <avr/interrupt.h>
```

The names of the various interrupt vectors are found in the individual processor IO header files that you must include with `<avr/io.h>`.

Note

The names of the interrupt vectors in AVR GCC has been changed to match the names of the vectors in IAR. This significantly helps in porting applications from IAR to AVR GCC.

10.4 Intrinsic Routines

IAR has a number of intrinsic routine such as

```
__enable_interrupts() __disable_interrupts() __watchdog_reset()
```

These intrinsic functions compile to specific AVR opcodes (SEI, CLI, WDR).

There are equivalent macros that are used in AVR GCC, however they are not located in a single include file.

AVR GCC has `sei()` for `__enable_interrupts()`, and `cli()` for `__disable_interrupts()`. Both of these macros are located in `<avr/interrupts.h>`.

AVR GCC has the macro `wdt_reset()` in place of `__watchdog_reset()`. However, there is a whole Watchdog Timer API available in AVR GCC that can be found in `<avr/wdt.h>`.

10.5 Flash Variables

The C language was not designed for Harvard architecture processors with separate memory spaces. This means that there are various non-standard ways to define a variable whose data resides in the Program Memory (Flash).

IAR uses a non-standard keyword to declare a variable in Program Memory:

```
__flash int mydata[] = ....
```

AVR GCC uses Variable Attributes to achieve the same effect:

```
int mydata[] __attribute__((progmem))
```

Note

See the GCC User Manual for more information about Variable Attributes.

avr-libc provides a convenience macro for the Variable Attribute:

```
#include <avr/pgmspace.h>
.
.
.
int mydata[] PROGMEM = ....
```

Note

The `PROGMEM` macro expands to the Variable Attribute of `progmem`. This macro requires that you include `<avr/pgmspace.h>`. This is the canonical method for defining a variable in Program Space.

To read back flash data, use the `pgm_read_*`() macros defined in `<avr/pgmspace.h>`. All Program Memory handling macros are defined there.

There is also a way to create a method to define variables in Program Memory that is common between the two compilers (IAR and AVR GCC). Create a header file that has these definitions:

```
#if defined(__ICCAVR__) // IAR C Compiler
#define FLASH_DECLARE(x) __flash x
#endif
#if defined(__GNUC__) // GNU Compiler
#define FLASH_DECLARE(x) x __attribute__((__progmem__))
#endif
```

This code snippet checks for the IAR compiler or for the GCC compiler and defines a macro `FLASH_DECLARE(x)` that will declare a variable in Program Memory using the appropriate method based on the compiler that is being used. Then you would use it like so:

```
FLASH_DECLARE(int mydata[] = ...);
```

10.6 Non-Returning main()

To declare `main()` to be a non-returning function in IAR, it is done like this:

```
__C_task void main(void)
{
    // code
}
```

To do the equivalent in AVR GCC, do this:

```
void main(void) __attribute__((noreturn));

void main(void)
{
    //...
}
```

Note

See the GCC User Manual for more information on Function Attributes.

In AVR GCC, a prototype for `main()` is required so you can declare the function attribute to specify that the `main()` function is of type "noreturn". Then, define `main()` as normal. Note that the return type for `main()` is now `void`.

10.7 Locking Registers

The IAR compiler allows a user to lock general registers from r15 and down by using compiler options and this keyword syntax:

```
__regvar __no_init volatile unsigned int filteredTimeSinceCommutation @14;
```

This line locks r14 for use only when explicitly referenced in your code through the var name "filteredTimeSinceCommutation". This means that the compiler cannot dispose of it at its own will.

To do this in AVR GCC, do this:

```
register unsigned char counter asm("r3");
```

Typically, it should be possible to use r2 through r15 that way.

Note

Do not reserve r0 or r1 as these are used internally by the compiler for a temporary register and for a zero value. Locking registers is not recommended in AVR GCC as it removes this register from the control of the compiler, which may make code generation worse. Use at your own risk.

11 Building and Installing the GNU Tool Chain

This chapter shows how to build and install, from source code, a complete development environment for the AVR processors using the GNU toolset. There are two main sections, one for Linux, FreeBSD, and other Unix-like operating systems, and another section for Windows.

11.1 Building and Installing under Linux, FreeBSD, and Others

The default behaviour for most of these tools is to install every thing under the `/usr/local` directory. In order to keep the AVR tools separate from the base system, it is usually better to install everything into `/usr/local/avr`. If the `/usr/local/avr` directory does not exist, you should create it before trying to install anything. You will need `root` access to install there. If you don't have root access to the system, you can alternatively install in your home directory, for example, in `$HOME/local/avr`. Where you install is a completely arbitrary decision, but should be consistent for all the tools.

You specify the installation directory by using the `-prefix=dir` option with the `configure` script. It is important to install all the AVR tools in the same directory or some of the tools will not work correctly. To ensure consistency and simplify the discussion, we will use `$PREFIX` to refer to whatever directory you wish to install in. You can set this as an environment variable if you wish as such (using a Bourne-like shell):

```
$ PREFIX=$HOME/local/avr
$ export PREFIX
```

Note

Be sure that you have your `PATH` environment variable set to search the directory you install everything in *before* you start installing anything. For example, if you use `-prefix=$PREFIX`, you must have `$PREFIX/bin` in your exported `PATH`. As such:

```
$ PATH=$PATH:$PREFIX/bin
$ export PATH
```

Warning

If you have `CC` set to anything other than `avr-gcc` in your environment, this will cause the `configure` script to fail. It is best to not have `CC` set at all.

Note

It is usually the best to use the latest released version of each of the tools.

11.2 Required Tools

- **GNU Binutils**

<http://sources.redhat.com/binutils/>
[Installation](#)

- **GCC**

<http://gcc.gnu.org/>
[Installation](#)

- **AVR LibC**

<http://savannah.gnu.org/projects/avr-libc/>
[Installation](#)

11.3 Optional Tools

You can develop programs for AVR devices without the following tools. They may or may not be of use for you.

- **AVRDUDE**

<http://savannah.nongnu.org/projects/avrdude/>
[Installation](#)
[Usage Notes](#)

- **GDB**

<http://sources.redhat.com/gdb/>
[Installation](#)

- **SimulAVR**

<http://savannah.gnu.org/projects/simulavr/>
[Installation](#)

- **AVaRICE**

<http://avarice.sourceforge.net/>
[Installation](#)

11.4 GNU Binutils for the AVR target

The **binutils** package provides all the low-level utilities needed in building and manipulating object files. Once installed, your environment will have an AVR assembler (`avr-as`), linker (`avr-ld`), and librarian (`avr-ar` and `avr-ranlib`). In addition, you get tools which extract data from object files (`avr-objcopy`), disassemble object file information (`avr-objdump`), and strip information from object files (`avr-strip`). Before we can build the C compiler, these tools need to be in place.

Download and unpack the source files:

```
$ bunzip2 -c binutils-<version>.tar.bz2 | tar xf -  
$ cd binutils-<version>
```

Note

Replace `<version>` with the version of the package you downloaded.
If you obtained a gzip compressed file (.gz), use `gunzip` instead of `bunzip2`.

It is usually a good idea to configure and build **binutils** in a subdirectory so as not to pollute the source with the compiled files. This is recommended by the **binutils** developers.

```
$ mkdir obj-avr  
$ cd obj-avr
```

The next step is to configure and build the tools. This is done by supplying arguments to the `configure` script that enable the AVR-specific options.

```
$ ../configure --prefix=$PREFIX --target=avr --disable-nls
```

If you don't specify the `--prefix` option, the tools will get installed in the `/usr/local` hierarchy (i.e. the binaries will get installed in `/usr/local/bin`, the info pages get installed in `/usr/local/info`, etc.) Since these tools are changing frequently, it is preferable to put them in a location that is easily removed.

When `configure` is run, it generates a lot of messages while it determines what is available on your operating system. When it finishes, it will have created several `Makefiles` that are custom tailored to your platform. At this point, you can build the project.

```
$ make
```

Note

BSD users should note that the project's `Makefile` uses GNU `make` syntax. This means FreeBSD users may need to build the tools by using `gmake`.

If the tools compiled cleanly, you're ready to install them. If you specified a destination that isn't owned by your account, you'll need `root` access to install them. To install:

```
$ make install
```

You should now have the programs from `binutils` installed into `$PREFIX/bin`. Don't forget to [set your PATH](#) environment variable before going to build `avr-gcc`.

Note

The official version of `binutils` might lack support for recent AVR devices. A patch that adds more AVR types can be found at <http://www.freebsd.org/cgi/cvsweb.cgi/ports/devel/avr-binutils/files/patch-newdevi>

11.5 GCC for the AVR target

Warning

You **must** install `avr-binutils` and make sure your [path is set](#) properly before installing `avr-gcc`.

The steps to build `avr-gcc` are essentially same as for `binutils`:

```
$ bunzip2 -c gcc-<version>.tar.bz2 | tar xf -
$ cd gcc-<version>
$ mkdir obj-avr
$ cd obj-avr
$ ../configure --prefix=$PREFIX --target=avr --enable-languages=c,c++ \
  --disable-nls --disable-libssp --with-dwarf2
$ make
$ make install
```

To save your self some download time, you can alternatively download only the `gcc-core-<version>.tar.bz2` and `gcc-c++-<version>.tar.bz2` parts of the gcc. Also, if you don't need C++ support, you only need the core part and should only enable the C language support.

Note

Early versions of these tools did not support C++.

The stdc++ libs are not included with C++ for AVR due to the size limitations of the devices.

The official version of GCC might lack support for recent AVR devices. A patch that adds more AVR types can be found at <http://www.freebsd.org/cgi/cvsweb.cgi/ports/devel/avr-gcc/files/patch-newdevices>

11.6 AVR LibC

Warning

You **must** install [avr-binutils](#), [avr-gcc](#) and make sure your [path is set](#) properly before installing avr-libc.

Note

If you have obtained the latest avr-libc from cvs, you will have to run the `bootstrap` script before using either of the build methods described below.

To build and install avr-libc:

```
$ gunzip -c avr-libc-<version>.tar.gz | tar xf -
$ cd avr-libc-<version>
$ ./configure --prefix=$PREFIX --build='./config.guess' --host=avr
$ make
$ make install
```

11.7 AVRDUDE

Note

It has been ported to windows (via MinGW or cygwin), Linux and Solaris. Other Unix systems should be trivial to port to.

avrdude is part of the FreeBSD ports system. To install it, simply do the following:

```
# cd /usr/ports/devel/avrdude
# make install
```

Note

Installation into the default location usually requires root permissions. However, running the program only requires access permissions to the appropriate `spi(4)` device.

Building and installing on other systems should use the `configure` system, as such:

```
$ gunzip -c avrdude-<version>.tar.gz | tar xf -
$ cd avrdude-<version>
$ mkdir obj-avr
$ cd obj-avr
$ ../configure --prefix=$PREFIX
$ make
$ make install
```


11.8 GDB for the AVR target

GDB also uses the `configure` system, so to build and install:

```
$ bunzip2 -c gdb-<version>.tar.bz2 | tar xf -
$ cd gdb-<version>
$ mkdir obj-avr
$ cd obj-avr
$ ../configure --prefix=$PREFIX --target=avr
$ make
$ make install
```

Note

If you are planning on using `avr-gdb`, you will probably want to install either [simulavr](#) or [avarice](#) since `avr-gdb` needs one of these to run as a remote target backend.

11.9 SimulAVR

SimulAVR also uses the `configure` system, so to build and install:

```
$ gunzip -c simulavr-<version>.tar.gz | tar xf -
$ cd simulavr-<version>
$ mkdir obj-avr
$ cd obj-avr
$ ../configure --prefix=$PREFIX
$ make
$ make install
```

Note

You might want to have already installed [avr-binutils](#), [avr-gcc](#) and [avr-libc](#) if you want to have the test programs built in the `simulavr` source.

11.10 AVaRICE

Note

These install notes are not applicable to `avarice-1.5` or older. You probably don't want to use anything that old anyways since there have been many improvements and bug fixes since the 1.5 release.

AVaRICE also uses the `configure` system, so to build and install:

```
$ gunzip -c avarice-<version>.tar.gz | tar xf -
$ cd avarice-<version>
$ mkdir obj-avr
$ cd obj-avr
$ ../configure --prefix=$PREFIX
$ make
$ make install
```

Note

AVaRICE uses the BFD library for accessing various binary file formats. You may need to tell the `configure` script where to find the lib and headers for the link to work. This is usually done by invoking the `configure` script like this (Replace `<hdr_path>` with the path to the `bfd.h` file on your system. Replace `<lib_path>` with the path to `libbfd.a` on your system.):

```
$ CPPFLAGS=-I<hdr_path> LDFLAGS=-L<lib_path> ../configure --prefix=$PREFIX
```

11.11 Building and Installing under Windows

Building and installing the toolchain under Windows requires more effort because all of the tools required for building, and the programs themselves, are mainly designed for running under a POSIX environment such as Unix and Linux. Windows does not natively provide such an environment.

There are two projects available that provide such an environment, Cygwin and MinGW. There are advantages and disadvantages to both. Cygwin provides a very complete POSIX environment that allows one to build many Linux based tools from source with very little or no source modifications. However, POSIX functionality is provided in the form of a DLL that is linked to the application. This DLL has to be redistributed with your application and there are issues if the Cygwin DLL already exists on the installation system and different versions of the DLL. On the other hand, MinGW can compile code as native Win32 applications. However, this means that programs designed for Unix and Linux (i.e. that use POSIX functionality) will not compile as MinGW does not provide that POSIX layer for you. Therefore most programs that compile on both types of host systems, usually must provide some sort of abstraction layer to allow an application to be built cross-platform.

MinGW does provide somewhat of a POSIX environment, called MSYS, that allows you to build Unix and Linux applications as they would normally do, with a `configure` step and a `make` step. Cygwin also provides such an environment. This means that building the AVR toolchain is very similar to how it is built in Linux, described above. The main differences are in what the `PATH` environment variable gets set to, pathname differences, and the tools that are required to build the projects under Windows. We'll take a look at the tools next.

11.12 Tools Required for Building the Toolchain for Windows

These are the tools that are currently used to build an AVR tool chain. This list may change, either the version of the tools, or the tools themselves, as improvements are made.

- **MinGW**

Download the MinGW Automated Installer, 20100909 (or later) <http://sourceforge.net/projects/mingw/files/Automated%20MinGW%20Installer/mingw-get-inst/mingw-get-inst-20100909/mingw-get-inst-20100909.exe/download>

- Run `mingw-get-inst-20100909.exe`
- In the installation wizard, keep the default values and press the "Next" button for all installer pages except for the pages explicitly listed below.

In the installer page "Repository Catalogues", select the "Download latest repository catalogues" radio button, and press the "Next" button

- In the installer page "License Agreement", select the "I accept the agreement" radio button, and press the "Next" button
- In the installer page "Select Components", be sure to select these items:
 - C compiler (default checked)
 - C++ compiler
 - Ada compiler
 - MinGW Developer Toolkit (which includes "MSYS Basic System").
- Install.

- **Install Cygwin**

- Install everything, all users, UNIX line endings. This will take a *long* time. A fat internet pipe is highly recommended. It is also recommended that you download all to a directory first, and then install from that directory to your machine.

Note

GMP, MPFR, and MPC are required to build GCC.
 GMP is a prerequisite for building MPFR. Build GMP first.
 MPFR is a prerequisite for building MPC. Build MPFR second.

• Build GMP for MinGW

- Latest Version
- <http://gmplib.org/>
- Build script:

```
./configure 2>&1 | tee gmp-configure.log
make        2>&1 | tee gmp-make.log
make check  2>&1 | tee gmp-make-check.log
make install 2>&1 | tee gmp-make-install.log
```

- GMP headers will be installed under /usr/local/include and library installed under /usr/local/lib.

• Build MPFR for MinGW

- Latest Version
- <http://www.mpfr.org/>
- Build script:

```
./configure --with-gmp=/usr/local --disable-shared 2>&1 | tee mpfr-configure.log
make        2>&1 | tee mpfr-make.log
make check  2>&1 | tee mpfr-make-check.log
make install 2>&1 | tee mpfr-make-install.log
```

- MPFR headers will be installed under /usr/local/include and library installed under /usr/local/lib.

• Build MPC for MinGW

- Latest Version
- <http://www.multiprecision.org/>
- Build script:

```
./configure --with-gmp=/usr/local --with-mpfr=/usr/local --disable-shared 2>&1 | tee mpfr-confi
make        2>&1 | tee mpfr-make.log
make check  2>&1 | tee mpfr-make-check.log
make install 2>&1 | tee mpfr-make-install.log
```

- MPFR headers will be installed under /usr/local/include and library installed under /usr/local/lib.

Note

Doxygen is required to build AVR-LibC documentation.

• Install Doxygen

- Version 1.7.2
- <http://www.stack.nl/~dimitri/doxygen/>
- Download and install.

NetPBM is required to build graphics in the AVR-LibC documentation.

- **Install NetPBM**

- Version 10.27.0
- From the GNUWin32 project: <http://gnuwin32.sourceforge.net/packages.html>
- Download and install.

fig2dev is required to build graphics in the AVR-LibC documentation.

- **Install fig2dev**

- Version 3.2 patchlevel 5c
- From WinFig 4.62: <http://www.schmidt-web-berlin.de/winfig/>
- Download the zip file version of WinFig
- Unzip the download file and install fig2dev.exe in a location of your choice, somewhere in the PATH.
- You may have to unzip and install related DLL files for fig2dev. In the version above, you have to install QtCore4.dll and QtGui4.dll.

MikTeX is required to build various documentation.

- **Install MiKTeX**

- Version 2.9
- <http://miktex.org/>
- Download and install.

Ghostscript is required to build various documentation.

- **Install Ghostscript**

- Version 9.00
- <http://www.ghostscript.com>
- Download and install.
- In the \bin subdirectory of the installation, copy gswin32c.exe to gs.exe.

- Set the TEMP and TMP environment variables to **c:\temp** or to the short filename version. This helps to avoid NTVDM errors during building.

11.13 Building the Toolchain for Windows

All directories in the PATH environment variable should be specified using their short filename (8.3) version. This will also help to avoid NTVDM errors during building. These short filenames can be specific to each machine.

Build the tools below in MinGW/MSYS.

- **Binutils**

- Open source code package and patch as necessary.
- Configure and build in a directory outside of the source code tree.
- Set PATH, in order:
 - * <MikTeX executables>
 - <ghostscript executables>
 - * /usr/local/bin
 - * /usr/bin
 - * /bin
 - * /mingw/bin
 - * c:/cygwin/bin

* <install directory>/bin

– Configure

```
CFLAGS=-D__USE_MINGW_ACCESS \
../$archivedir/configure \
--prefix=$installdir \
--target=avr \
--disable-nls \
--enable-doc \
--datadir=$installdir/doc/binutils \
--with-gmp=/usr/local \
--with-mpfr=/usr/local \
2>&1 | tee binutils-configure.log
```

– Make

```
make all html install install-html 2>&1 | tee binutils-make.log
```

– Manually change documentation location.

• **GCC**

– Open source code package and patch as necessary.

– Configure and build in a directory outside of the source code tree.

– Set PATH, in order:

```
* <MikTeX executables>
  * <ghostscript executables>
* /usr/local/bin
* /usr/bin
* /bin
* /mingw/bin
* c:/cygwin/bin
* <install directory>/bin
```

– Configure

```
LDLFLAGS='-L /usr/local/lib -R /usr/local/lib' \
CFLAGS='-D__USE_MINGW_ACCESS' \
../gcc-$version/configure \
--with-gmp=/usr/local \
--with-mpfr=/usr/local \
--with-mpc=/usr/local \
--prefix=$installdir \
--target=$target \
--enable-languages=c,c++ \
--with-dwarf2 \
--enable-doc \
--with-docdir=$installdir/doc/$project \
--disable-shared \
--disable-libada \
--disable-libssp \
2>&1 | tee $project-configure.log
```

– Make

```
make all html install 2>&1 | tee $package-make.log
```

• **avr-libc**

– Open source code package.

– Configure and build at the top of the source code tree.

– Set PATH, in order:

- * /usr/local/bin
- * /mingw/bin
- * /bin
- * <MikTex executables>
- * <install directory>/bin
- * <Doxygen executables>
- * <NetPBM executables>
- * <fig2dev executable>
- * <Ghostscript executables>
- * c:/cygwin/bin
- Configure


```
./configure \
  --host=avr \
  --prefix=$installdir \
  --enable-doc \
  --disable-versioned-doc \
  --enable-html-doc \
  --enable-pdf-doc \
  --enable-man-doc \
  --mandir=$installdir/man \
  --datadir=$installdir \
  2>&1 | tee $package-configure.log
```
- Make


```
make all install 2>&1 | tee $package-make.log
```
- Manually change location of man page documentation.
- Move the examples to the top level of the install tree.
- Convert line endings in examples to Windows line endings.
- Convert line endings in header files to Windows line endings.

• AVRDUDE

- Open source code package.
- Configure and build at the top of the source code tree.
- Set PATH, in order:
 - * <MikTex executables>
 - * /usr/local/bin
 - * /usr/bin
 - * /bin
 - * /mingw/bin
 - * c:/cygwin/bin
 - * <install directory>/bin
- Set location of LibUSB headers and libraries


```
export CPPFLAGS="-I../libusb-win32-device-bin-$libusb_version/include"
export CFLAGS="-I../libusb-win32-device-bin-$libusb_version/include"
export LDFLAGS="-L../libusb-win32-device-bin-$libusb_version/lib/gcc"
```
- Configure


```
./configure \
  --prefix=$installdir \
  --datadir=$installdir \
  --sysconfdir=$installdir/bin \
  --enable-doc \
  --disable-versioned-doc \
  2>&1 | tee $package-configure.log
```

- Make

```
make -k all install 2>&1 | tee $package-make.log
```

- Convert line endings in avrdude config file to Windows line endings.
- Delete backup copy of avrdude config file in install directory if exists.

- **Insight/GDB**

- Open source code package and patch as necessary.
- Configure and build in a directory outside of the source code tree.
- Set PATH, in order:

```
* <MikTex executables>
* /usr/local/bin
* /usr/bin
* /bin
* /mingw/bin
* c:/cygwin/bin
* <install directory>/bin
```

- Configure

```
CFLAGS=-D__USE_MINGW_ACCESS \
LDFLAGS='-static' \
../$archivedir/configure \
--prefix=$installdir \
--target=avr \
--with-gmp=/usr/local \
--with-mpfr=/usr/local \
--enable-doc \
2>&1 | tee insight-configure.log
```

- Make

```
make all install 2>&1 | tee $package-make.log
```

- **SRecord**

- Open source code package.
- Configure and build at the top of the source code tree.
- Set PATH, in order:

```
* <MikTex executables>
* /usr/local/bin
* /usr/bin
* /bin
* /mingw/bin
* c:/cygwin/bin
* <install directory>/bin
```

- Configure

```
./configure \
--prefix=$installdir \
--infodir=$installdir/info \
--mandir=$installdir/man \
2>&1 | tee $package-configure.log
```

- Make

```
make all install 2>&1 | tee $package-make.log
```

Build the tools below in Cygwin.

- **AVaRICE**

- Open source code package.
- Configure and build in a directory outside of the source code tree.
- Set PATH, in order:
 - * <MikTex executables>
 - * /usr/local/bin
 - * /usr/bin
 - * /bin
 - * <install directory>/bin
- Set location of LibUSB headers and libraries


```
export CPPFLAGS=-I$startdir/libusb-win32-device-bin-$libusb_version/include
export CFLAGS=-I$startdir/libusb-win32-device-bin-$libusb_version/include
export LDFLAGS="-static -L$startdir/libusb-win32-device-bin-$libusb_version/lib/gcc "
```
- Configure


```
../$archivedir/configure \
--prefix=$installdir \
--datadir=$installdir/doc \
--mandir=$installdir/man \
--infodir=$installdir/info \
2>&1 | tee avarice-configure.log
```
- Make


```
make all install 2>&1 | tee avarice-make.log
```

- **SimulAVR**

- Open source code package.
- Configure and build in a directory outside of the source code tree.
- Set PATH, in order:
 - * <MikTex executables>
 - * /usr/local/bin
 - * /usr/bin
 - * /bin
 - * <install directory>/bin
- Configure


```
export LDFLAGS="-static"
../$archivedir/configure \
--prefix=$installdir \
--datadir=$installdir \
--disable-tests \
--disable-versioned-doc \
2>&1 | tee simulavr-configure.log
```
- Make


```
make -k all install 2>&1 | tee simulavr-make.log
make pdf install-pdf 2>&1 | tee simulavr-pdf-make.log
```

12 Using the GNU tools

This is a short summary of the AVR-specific aspects of using the GNU tools. Normally, the generic documentation of these tools is fairly large and maintained in `texinfo` files. Command-line options are explained in detail in the manual page.

12.1 Options for the C compiler avr-gcc

12.1.1 Machine-specific options for the AVR

The following machine-specific options are recognized by the C compiler frontend. In addition to the preprocessor macros indicated in the tables below, the preprocessor will define the macros **AVR** and **__AVR** (to the value 1) when compiling for an AVR target. The macro **AVR** will be defined as well when using the standard levels gnu89 (default) and gnu99 but not with c89 and c99.

- `-mmcu=architecture`

Compile code for *architecture*. Currently known architectures are

Architecture	PBSMacros	PBSDescription
avr1	PBSAVR_ARCH=1 AVR_ASM_ONLY AVR_2_BYTE_PC [2]	PBSSimple CPU core, only assembler support
avr2	PBSAVR_ARCH=2 AVR_2_BYTE_PC [2]	PBS"Classic" CPU core, up to 8 KB of ROM
avr25 [1]	PBSAVR_ARCH=25 AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_2_BYTE_PC [2]	PBS"Classic" CPU core with 'MOVW' and 'LPM Rx, Z[+]' instruction, up to 8 KB of ROM
avr3	PBSAVR_ARCH=3 AVR_MEGA [5] AVR_HAVE_JMP_CALL [4] AVR_2_BYTE_PC [2]	PBS"Classic" CPU core, 16 KB to 64 KB of ROM
avr31	PBSAVR_ARCH=31 AVR_MEGA [5] AVR_HAVE_JMP_CALL [4] AVR_HAVE_RAMPZ [4] AVR_HAVE_ELPM [4] AVR_2_BYTE_PC [2]	PBS"Classic" CPU core, 128 KB of ROM
avr35 [3]	PBSAVR_ARCH=35 AVR_MEGA [5] AVR_HAVE_JMP_CALL [4] AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_2_BYTE_PC [2]	PBS"Classic" CPU core with 'MOVW' and 'LPM Rx, Z[+]' instruction, 16 KB to 64 KB of ROM
avr4	PBSAVR_ARCH=4 AVR_ENHANCED [5] AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_HAVE_MUL [1] AVR_2_BYTE_PC [2]	PBS"Enhanced" CPU core, up to 8 KB of ROM
avr5	PBSAVR_ARCH=5 AVR_MEGA [5] AVR_ENHANCED [5] AVR_HAVE_JMP_CALL [4] AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_HAVE_MUL [1] AVR_2_BYTE_PC [2]	PBS"Enhanced" CPU core, 16 KB to 64 KB of ROM

avr51	PBSAVR_ARCH=51 AVR_MEGA [5] AVR_ENHANCED [5] AVR_HAVE_JMP_CALL [4] AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_HAVE_MUL [1] AVR_HAVE_RAMPZ [4] AVR_HAVE_ELPM [4] AVR_HAVE_ELPMX [4] AVR_2_BYTE_PC [2]	PBS"Enhanced" CPU core, 128 KB of ROM
avr6 [2]	PBSAVR_ARCH=6 AVR_MEGA [5] AVR_ENHANCED [5] AVR_HAVE_JMP_CALL [4] AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_HAVE_MUL [1] AVR_HAVE_RAMPZ [4] AVR_HAVE_ELPM [4] AVR_HAVE_ELPMX [4] AVR_3_BYTE_PC [2]	PBS"Enhanced" CPU core, 256 KB of ROM
avr7 [2]	PBSAVR_ARCH=7 AVR_MEGA [5] AVR_ENHANCED [5] AVR_HAVE_JMP_CALL [4] AVR_HAVE_MO VW [1] AVR_HAVE_LPMX [1] AVR_HAVE_MUL [1] AVR_2_BYTE_PC [2]	PBS"Enhanced" CPU core, 20K of Flash that starts at 0x8000

[1] New in GCC 4.2

[2] Unofficial patch for GCC 4.1

[3] New in GCC 4.2.3

[4] New in GCC 4.3

[5] Obsolete.

By default, code is generated for the avr2 architecture.

Note that when only using `-mmcu=architecture` but no `-mmcu=MCU type`, including the file `<avr/io.h>` cannot work since it cannot decide which device's definitions to select.

- `-mmcu=MCU type`

The following MCU types are currently understood by avr-gcc. The table matches them against the corresponding avr-gcc architecture name, and shows the preprocessor symbol declared by the `-mmcu` option.

Architecture	PBSMCU name	PBSMacro
avr1	PBSat90s1200	PBS__AVR_AT90-S1200__
avr1	PBSattiny11	PBS__AVR_ATtiny11_-
		-

avr1	PBSattiny12	PBS__AVR_ATtiny12_- —
avr1	PBSattiny15	PBS__AVR_ATtiny15_- —
avr1	PBSattiny28	PBS__AVR_ATtiny28_- —
avr2	PBSat90s2313	PBS__AVR_AT90-S2313__
avr2	PBSat90s2323	PBS__AVR_AT90-S2323__
avr2	PBSat90s2333	PBS__AVR_AT90-S2333__
avr2	PBSat90s2343	PBS__AVR_AT90-S2343__
avr2	PBSattiny22	PBS__AVR_ATtiny22_- —
avr2	PBSattiny26	PBS__AVR_ATtiny26_- —
avr2	PBSat90s4414	PBS__AVR_AT90-S4414__
avr2	PBSat90s4433	PBS__AVR_AT90-S4433__
avr2	PBSat90s4434	PBS__AVR_AT90-S4434__
avr2	PBSat90s8515	PBS__AVR_AT90-S8515__
avr2	PBSat90c8534	PBS__AVR_AT90-C8534__
avr2	PBSat90s8535	PBS__AVR_AT90-S8535__
avr2/avr25 [1]	PBSat86rf401	PBS__AVR_AT86R-F401__
avr2/avr25 [1]	PBSata6289	PBS__AVR_ATA6289_- —
avr2/avr25 [1]	PBSata5272	PBS__AVR_ATA5272_- —
avr2/avr25 [1]	PBSattiny13	PBS__AVR_ATtiny13_- —
avr2/avr25 [1]	PBSattiny13a	PBS__AVR_ATtiny13A- —
avr2/avr25 [1]	PBSattiny2313	PBS__AVR_A-Ttiny2313__
avr2/avr25 [1]	PBSattiny2313a	PBS__AVR_A-Ttiny2313A__
avr2/avr25 [1]	PBSattiny24	PBS__AVR_ATtiny24_- —
avr2/avr25 [1]	PBSattiny24a	PBS__AVR_ATtiny24A- —
avr2/avr25 [1]	PBSattiny25	PBS__AVR_ATtiny25_- —
avr2/avr25 [1]	PBSattiny261	PBS__AVR_ATtiny261- —

avr2/avr25 [1]	PBSattiny261a	PBS__AVR_ATtiny261-A__
avr2/avr25 [1]	PBSattiny4313	PBS__AVR_A-Ttiny4313__
avr2/avr25 [1]	PBSattiny43u	PBS__AVR_ATtiny43U-__
avr2/avr25 [1]	PBSattiny44	PBS__AVR_ATtiny44_-__
avr2/avr25 [1]	PBSattiny44a	PBS__AVR_ATtiny44A-__
avr2/avr25 [1]	PBSattiny45	PBS__AVR_ATtiny45_-__
avr2/avr25 [1]	PBSattiny461	PBS__AVR_ATtiny461-__
avr2/avr25 [1]	PBSattiny461a	PBS__AVR_ATtiny461-A__
avr2/avr25 [1]	PBSattiny48	PBS__AVR_ATtiny48_-__
avr2/avr25 [1]	PBSattiny828	PBS__AVR_ATtiny828-__
avr2/avr25 [1]	PBSattiny84	PBS__AVR_ATtiny84_-__
avr2/avr25 [1]	PBSattiny84a	PBS__AVR_ATtiny84A-__
avr2/avr25 [1]	PBSattiny841	PBS__AVR_ATtiny841-__
avr2/avr25 [1]	PBSattiny85	PBS__AVR_ATtiny85_-__
avr2/avr25 [1]	PBSattiny861	PBS__AVR_ATtiny861-__
avr2/avr25 [1]	PBSattiny861a	PBS__AVR_ATtiny861-A__
avr2/avr25 [1]	PBSattiny87	PBS__AVR_ATtiny87_-__
avr2/avr25 [1]	PBSattiny88	PBS__AVR_ATtiny88_-__
avr3	PBSatmega603	PBS__AVR_A-Tmega603__
avr3	PBSat43usb355	PBS__AVR_AT43USB355__
avr3/avr31 [3]	PBSatmega103	PBS__AVR_A-Tmega103__
avr3/avr31 [3]	PBSat43usb320	PBS__AVR_AT43USB320__
avr3/avr35 [2]	PBSat90usb82	PBS__AVR_AT90USB82__
avr3/avr35 [2]	PBSat90usb162	PBS__AVR_AT90USB162__
avr3/avr35 [2]	PBSata5505	PBS__AVR_ATA5505_-__

avr3/avr35 [2]	PBSatmega8u2	PBS__AVR_ATmega8-U2__
avr3/avr35 [2]	PBSatmega16u2	PBS__AVR_ATmega16-U2__
avr3/avr35 [2]	PBSatmega32u2	PBS__AVR_ATmega32-U2__
avr3/avr35 [2]	PBSattiny167	PBS__AVR_ATtiny167-__
avr3/avr35 [2]	PBSattiny1634	PBS__AVR_A-Ttiny1634__
avr3	PBSat76c711	PBS__AVR_AT76C711-__
avr4	PBSata6285	PBS__AVR_ATA6285_-__
avr4	PBSata6286	PBS__AVR_ATA6286_-__
avr4	PBSatmega48	PBS__AVR_ATmega48-__
avr4	PBSatmega48a	PBS__AVR_ATmega48-A__
avr4	PBSatmega48pa	PBS__AVR_ATmega48-PA__
avr4	PBSatmega48p	PBS__AVR_ATmega48-P__
avr4	PBSatmega8	PBS__AVR_ATmega8_-__
avr4	PBSatmega8a	PBS__AVR_ATmega8A-__
avr4	PBSatmega8515	PBS__AVR_A-Tmega8515__
avr4	PBSatmega8535	PBS__AVR_A-Tmega8535__
avr4	PBSatmega88	PBS__AVR_ATmega88-__
avr4	PBSatmega88a	PBS__AVR_ATmega88-A__
avr4	PBSatmega88p	PBS__AVR_ATmega88-P__
avr4	PBSatmega88pa	PBS__AVR_ATmega88-PA__
avr4	PBSatmega8hva	PBS__AVR_ATmega8-HVA__
avr4	PBSat90pwm1	PBS__AVR_AT90PW-M1__
avr4	PBSat90pwm2	PBS__AVR_AT90PW-M2__
avr4	PBSat90pwm2b	PBS__AVR_AT90PW-M2B__
avr4	PBSat90pwm3	PBS__AVR_AT90PW-M3__
avr4	PBSat90pwm3b	PBS__AVR_AT90PW-M3B__

avr4	PBSat90pwm81	PBS__AVR_AT90PW-M81__
avr5	PBSat90can32	PBS__AVR_AT90CA-N32__
avr5	PBSat90can64	PBS__AVR_AT90CA-N64__
avr5	PBSat90pwm161	PBS__AVR_AT90PW-M161__
avr5	PBSat90pwm216	PBS__AVR_AT90PW-M216__
avr5	PBSat90pwm316	PBS__AVR_AT90PW-M316__
avr5	PBSat90scr100	PBS__AVR_AT90SC-R100__
avr5	PBSat90usb646	PBS__AVR_AT90US-B646__
avr5	PBSat90usb647	PBS__AVR_AT90US-B647__
avr5	PBSat94k	PBS__AVR_AT94K__
avr5	PBSatmega16	PBS__AVR_ATmega16-__
avr5	PBSata5790	PBS__AVR_ATA5790_-__
avr5	PBSata5790n	PBS__AVR_ATA5790N-__
avr5	PBSata5795	PBS__AVR_ATA5795_-__
avr5	PBSatmega161	PBS__AVR_A-Tmega161__
avr5	PBSatmega162	PBS__AVR_A-Tmega162__
avr5	PBSatmega163	PBS__AVR_A-Tmega163__
avr5	PBSatmega164a	PBS__AVR_A-Tmega164A__
avr5	PBSatmega164p	PBS__AVR_A-Tmega164P__
avr5	PBSatmega164pa	PBS__AVR_A-Tmega164PA__
avr5	PBSatmega165	PBS__AVR_A-Tmega165__
avr5	PBSatmega165a	PBS__AVR_A-Tmega165A__
avr5	PBSatmega165p	PBS__AVR_A-Tmega165P__
avr5	PBSatmega165pa	PBS__AVR_A-Tmega165PA__
avr5	PBSatmega168	PBS__AVR_A-Tmega168__
avr5	PBSatmega168a	PBS__AVR_A-Tmega168A__
avr5	PBSatmega168p	PBS__AVR_A-Tmega168P__

avr5	PBSatmega168pa	PBS__AVR_A-Tmega168PA__
avr5	PBSatmega169	PBS__AVR_A-Tmega169__
avr5	PBSatmega169a	PBS__AVR_A-Tmega169A__
avr5	PBSatmega169p	PBS__AVR_A-Tmega169P__
avr5	PBSatmega169pa	PBS__AVR_A-Tmega169PA__
avr5	PBSatmega16a	PBS__AVR_ATmega16-A__
avr5	PBSatmega16hva	PBS__AVR_ATmega16-HVA__
avr5	PBSatmega16hva2	PBS__AVR_ATmega16-HVA2__
avr5	PBSatmega16hvb	PBS__AVR_ATmega16-HVB__
avr5	PBSatmega16hvbrevb	PBS__AVR_ATmega16-HVBREVB__
avr5	PBSatmega16m1	PBS__AVR_ATmega16-M1__
avr5	PBSatmega16u4	PBS__AVR_ATmega16-U4__
avr5	PBSatmega26hvg	PBS__AVR_ATmega26-HVG__
avr5	PBSatmega32	PBS__AVR_ATmega32-__
avr5	PBSatmega32a	PBS__AVR_ATmega32-A__
avr5	PBSatmega323	PBS__AVR_A-Tmega323__
avr5	PBSatmega324a	PBS__AVR_A-Tmega324A__
avr5	PBSatmega324p	PBS__AVR_A-Tmega324P__
avr5	PBSatmega324pa	PBS__AVR_A-Tmega324PA__
avr5	PBSatmega325	PBS__AVR_A-Tmega325__
avr5	PBSatmega325a	PBS__AVR_A-Tmega325A__
avr5	PBSatmega325p	PBS__AVR_A-Tmega325P__
avr5	PBSatmega325pa	PBS__AVR_A-Tmega325PA__
avr5	PBSatmega3250	PBS__AVR_A-Tmega3250__
avr5	PBSatmega3250a	PBS__AVR_A-Tmega3250A__
avr5	PBSatmega3250p	PBS__AVR_A-Tmega3250P__
avr5	PBSatmega3250pa	PBS__AVR_A-Tmega3250PA__

avr5	PBSatmega328	PBS__AVR_A-Tmega328__
avr5	PBSatmega328p	PBS__AVR_A-Tmega328P__
avr5	PBSatmega329	PBS__AVR_A-Tmega329__
avr5	PBSatmega329a	PBS__AVR_A-Tmega329A__
avr5	PBSatmega329p	PBS__AVR_A-Tmega329P__
avr5	PBSatmega329pa	PBS__AVR_A-Tmega329PA__
avr5	PBSatmega3290	PBS__AVR_A-Tmega3290__
avr5	PBSatmega3290a	PBS__AVR_A-Tmega3290A__
avr5	PBSatmega3290p	PBS__AVR_A-Tmega3290P__
avr5	PBSatmega3290pa	PBS__AVR_A-Tmega3290PA__
avr5	PBSatmega32c1	PBS__AVR_ATmega32-C1__
avr5	PBSatmega32hvb	PBS__AVR_ATmega32-HVB__
avr5	PBSatmega32hvbrevb	PBS__AVR_ATmega32-HVBREVB__
avr5	PBSatmega32m1	PBS__AVR_ATmega32-M1__
avr5	PBSatmega32u4	PBS__AVR_ATmega32-U4__
avr5	PBSatmega32u6	PBS__AVR_ATmega32-U6__
avr5	PBSatmega406	PBS__AVR_A-Tmega406__
avr5	PBSatmega48hvf	PBS__AVR_ATmega48-HVF__
avr5	PBSatmega64rfa2	PBS__AVR_ATmega64-RFA2__
avr5	PBSatmega64rfr2	PBS__AVR_ATmega64-RFR2__
avr5	PBSatmega64	PBS__AVR_ATmega64-__
avr5	PBSatmega64a	PBS__AVR_ATmega64-A__
avr5	PBSatmega640	PBS__AVR_A-Tmega640__
avr5	PBSatmega644	PBS__AVR_A-Tmega644__
avr5	PBSatmega644a	PBS__AVR_A-Tmega644A__
avr5	PBSatmega644p	PBS__AVR_A-Tmega644P__
avr5	PBSatmega644pa	PBS__AVR_A-Tmega644PA__

avr5	PBSatmega645	PBS__AVR_A-Tmega645__
avr5	PBSatmega645a	PBS__AVR_A-Tmega645A__
avr5	PBSatmega645p	PBS__AVR_A-Tmega645P__
avr5	PBSatmega6450	PBS__AVR_A-Tmega6450__
avr5	PBSatmega6450a	PBS__AVR_A-Tmega6450A__
avr5	PBSatmega6450p	PBS__AVR_A-Tmega6450P__
avr5	PBSatmega649	PBS__AVR_A-Tmega649__
avr5	PBSatmega649a	PBS__AVR_A-Tmega649A__
avr5	PBSatmega6490	PBS__AVR_A-Tmega6490__
avr5	PBSatmega6490a	PBS__AVR_A-Tmega6490A__
avr5	PBSatmega6490p	PBS__AVR_A-Tmega6490P__
avr5	PBSatmega649p	PBS__AVR_A-Tmega649P__
avr5	PBSatmega64c1	PBS__AVR_ATmega64-C1__
avr5	PBSatmega64hve	PBS__AVR_ATmega64-HVE__
avr5	PBSatmega64m1	PBS__AVR_ATmega64-M1__
avr5	PBSm3000	PBS__AVR_M3000__
avr5/avr51 [3]	PBSat90can128	PBS__AVR_AT90CAN128__
avr5/avr51 [3]	PBSat90usb1286	PBS__AVR_AT90USB1286__
avr5/avr51 [3]	PBSat90usb1287	PBS__AVR_AT90USB1287__
avr5/avr51 [3]	PBSatmega128	PBS__AVR_A-Tmega128__
avr5/avr51 [3]	PBSatmega128a	PBS__AVR_A-Tmega128A__
avr5/avr51 [3]	PBSatmega1280	PBS__AVR_A-Tmega1280__
avr5/avr51 [3]	PBSatmega1281	PBS__AVR_A-Tmega1281__
avr5/avr51 [3]	PBSatmega1284	PBS__AVR_A-Tmega1284__
avr5/avr51 [3]	PBSatmega1284p	PBS__AVR_A-Tmega1284P__
avr5/avr51 [3]	PBSatmega128rfa2	PBS__AVR_A-Tmega128RFA2__

avr5/avr51 [3]	PBSatmega128rfr2	PBS__AVR_A-Tmega128RFR2__
avr6	PBSatmega2560	PBS__AVR_A-Tmega2560__
avr6	PBSatmega2561	PBS__AVR_A-Tmega2561__
avr6	PBSatmega256rfa2	PBS__AVR_A-Tmega256RFA2__
avr6	PBSatmega256rfr2	PBS__AVR_A-Tmega256RFR2__
avr7	PBSata5831	PBS__AVR_ATA5831_- -
avrxmega2	PBSatmxt112sl	PBS__AVR_ATMX-T112SL__
avrxmega2	PBSatmxt224	PBS__AVR_ATMX-T224__
avrxmega2	PBSatmxt224e	PBS__AVR_ATMX-T224E__
avrxmega2	PBSatmxt336s	PBS__AVR_ATMX-T336S__
avrxmega2	PBSatxmega16a4	PBS__AVR_A-Txmega16A4__
avrxmega2	PBSatxmega16a4u	PBS__AVR_A-Txmega16A4U__
avrxmega2	PBSatxmega16c4	PBS__AVR_A-Txmega16C4__
avrxmega2	PBSatxmega16d4	PBS__AVR_A-Txmega16D4__
avrxmega2	PBSatxmega32a4	PBS__AVR_A-Txmega32A4__
avrxmega2	PBSatxmega32a4u	PBS__AVR_A-Txmega32A4U__
avrxmega2	PBSatxmega32c4	PBS__AVR_A-Txmega32C4__
avrxmega2	PBSatxmega32d4	PBS__AVR_A-Txmega32D4__
avrxmega2	PBSatxmega32e5	PBS__AVR_A-Txmega32E5__
avrxmega2	PBSatxmega32x1	PBS__AVR_A-Txmega32X1__
avrxmega4	PBSatxmega64a3	PBS__AVR_A-Txmega64A3__
avrxmega4	PBSatxmega64a3u	PBS__AVR_A-Txmega64A3U__
avrxmega4	PBSatxmega64a4u	PBS__AVR_A-Txmega64A4U__
avrxmega4	PBSatxmega64b1	PBS__AVR_A-Txmega64B1__
avrxmega4	PBSatxmega64b3	PBS__AVR_A-Txmega64B3__

avrxmega4	PBSatxmega64c3	PBS__AVR_A-Txmega64C3__
avrxmega4	PBSatxmega64d3	PBS__AVR_A-Txmega64D3__
avrxmega4	PBSatxmega64d4	PBS__AVR_A-Txmega64D4__
avrxmega5	PBSatxmega64a1	PBS__AVR_A-Txmega64A1__
avrxmega5	PBSatxmega64a1u	PBS__AVR_A-Txmega64A1U__
avrxmega6	PBSatmxt540s	PBS__AVR_ATmxt540-S__
avrxmega6	PBSatmxt540sreva	PBS__AVR_ATmxt540-SREVA__
avrxmega6	PBSatxmega128a3	PBS__AVR_A-Txmega128A3__
avrxmega6	PBSatxmega128a3u	PBS__AVR_A-Txmega128A3U__
avrxmega6	PBSatxmega128b1	PBS__AVR_A-Txmega128B1__
avrxmega6	PBSatxmega128b3	PBS__AVR_A-Txmega128B3__
avrxmega6	PBSatxmega128c3	PBS__AVR_A-Txmega128C3__
avrxmega6	PBSatxmega128d3	PBS__AVR_A-Txmega128D3__
avrxmega6	PBSatxmega128d4	PBS__AVR_A-Txmega128D4__
avrxmega6	PBSatxmega192a3	PBS__AVR_A-Txmega192A3__
avrxmega6	PBSatxmega192a3u	PBS__AVR_A-Txmega192A3U__
avrxmega6	PBSatxmega192c3	PBS__AVR_A-Txmega192C3__
avrxmega6	PBSatxmega192d3	PBS__AVR_A-Txmega192D3__
avrxmega6	PBSatxmega256a3	PBS__AVR_A-Txmega256A3__
avrxmega6	PBSatxmega256a3u	PBS__AVR_A-Txmega256A3U__
avrxmega6	PBSatxmega256a3b	PBS__AVR_A-Txmega256A3B__
avrxmega6	PBSatxmega256a3bu	PBS__AVR_A-Txmega256A3BU__
avrxmega6	PBSatxmega256c3	PBS__AVR_A-Txmega256C3__
avrxmega6	PBSatxmega256d3	PBS__AVR_A-Txmega256D3__
avrxmega6	PBSatxmega384c3	PBS__AVR_A-Txmega384C3__

avrxtmega6	PBSatxtmega384d3	PBS__AVR_A-Txmega384D3__
avrxtmega7	PBSatxtmega128a1	PBS__AVR_A-Txmega128A1__
avrxtmega7	PBSatxtmega128a1u	PBS__AVR_A-Txmega128A1U__
avrxtmega7	PBSatxtmega128a4u	PBS__AVR_A-Txmega128A4U__
avrtiny10	PBSattiny4	PBS__AVR_ATtiny4__
avrtiny10	PBSattiny5	PBS__AVR_ATtiny5__
avrtiny10	PBSattiny9	PBS__AVR_ATtiny9__
avrtiny10	PBSattiny10	PBS__AVR_ATtiny10_- -
avrtiny10	PBSattiny20	PBS__AVR_ATtiny20_- -
avrtiny10	PBSattiny40	PBS__AVR_ATtiny40_- -

[1] 'avr25' architecture is new in GCC 4.2

[2] 'avr35' architecture is new in GCC 4.2.3

[3] 'avr31' and 'avr51' architectures is new in GCC 4.3

- `-morder1`
- `-morder2`

Change the order of register assignment. The default is

r24, r25, r18, r19, r20, r21, r22, r23, r30, r31, r26, r27, r28, r29, r17, r16, r15, r14, r13, r12, r11, r10, r9, r8, r7, r6, r5, r4, r3, r2, r0, r1

Order 1 uses

r18, r19, r20, r21, r22, r23, r24, r25, r30, r31, r26, r27, r28, r29, r17, r16, r15, r14, r13, r12, r11, r10, r9, r8, r7, r6, r5, r4, r3, r2, r0, r1

Order 2 uses

r25, r24, r23, r22, r21, r20, r19, r18, r30, r31, r26, r27, r28, r29, r17, r16, r15, r14, r13, r12, r11, r10, r9, r8, r7, r6, r5, r4, r3, r2, r1, r0

- `-mint8`

Assume `int` to be an 8-bit integer. Note that this is not really supported by `avr-libc`, so it should normally not be used. The default is to use 16-bit integers.

- `-mno-interrupts`

Generates code that changes the stack pointer without disabling interrupts. Normally, the state of the status register `SREG` is saved in a temporary register, interrupts are disabled while changing the stack pointer, and `SREG` is restored.

Specifying this option will define the preprocessor macro `NO_INTERRUPTS` to the value 1.

- `-mcall-prologues`

Use subroutines for function prologue/epilogue. For complex functions that use many registers (that needs to be saved/restored on function entry/exit), this saves some space at the cost of a slightly increased execution time.

- `-mtiny-stack`

Change only the low 8 bits of the stack pointer.

- `-mno-tablejump`

Deprecated, use `-fno-jump-tables` instead.

- `-mshort-calls`

Use `rjmp/rcall` (limited range) on >8K devices. On `avr2` and `avr4` architectures (less than 8 KB of flash memory), this is always the case. On `avr3` and `avr5` architectures, calls and jumps to targets outside the current function will by default use `jmp/call` instructions that can cover the entire address range, but that require more flash ROM and execution time.

- `-mrtl`

Dump the internal compilation result called "RTL" into comments in the generated assembler code. Used for debugging `avr-gcc`.

- `-msize`

Dump the address, size, and relative cost of each statement into comments in the generated assembler code. Used for debugging `avr-gcc`.

- `-mdeb`

Generate lots of debugging information to `stderr`.

12.1.2 Selected general compiler options

The following general gcc options might be of some interest to AVR users.

- `-O n`

Optimization level n . Increasing n is meant to optimize more, an optimization level of 0 means no optimization at all, which is the default if no `-O` option is present. The special option `-Os` is meant to turn on all `-O2` optimizations that are not expected to increase code size.

Note that at `-O3`, gcc attempts to inline all "simple" functions. For the AVR target, this will normally constitute a large pessimization due to the code increasement. The only other optimization turned on with `-O3` is `-frename-registers`, which could rather be enabled manually instead.

A simple `-O` option is equivalent to `-O1`.

Note also that turning off all optimizations will prevent some warnings from being issued since the generation of those warnings depends on code analysis steps that are only performed when optimizing (unreachable code, unused variables).

See also the appropriate FAQ entry for issues regarding debugging optimized code.

- `-Wa, assembler-options`
- `-Wl, linker-options`

Pass the listed options to the assembler, or linker, respectively.

- `-g`

Generate debugging information that can be used by avr-gdb.

- `-ffreestanding`

Assume a "freestanding" environment as per the C standard. This turns off automatic builtin functions (though they can still be reached by prepending `__builtin_` to the actual function name). It also makes the compiler not complain when `main()` is declared with a `void` return type which makes some sense in a microcontroller environment where the application cannot meaningfully provide a return value to its environment (in most cases, `main()` won't even return anyway). However, this also turns off all optimizations normally done by the compiler which assume that functions known by a certain name behave as described by the standard. E. g., applying the function `strlen()` to a literal string will normally cause the compiler to immediately replace that call by the actual length of the string, while with `-ffreestanding`, it will always call `strlen()` at run-time.

- `-funsigned-char`

Make any unqualified `char` type an unsigned char. Without this option, they default to a signed char.

- `-funsigned-bitfields`

Make any unqualified bitfield type unsigned. By default, they are signed.

- `-fshort-enums`

Allocate to an `enum` type only as many bytes as it needs for the declared range of possible values. Specifically, the `enum` type will be equivalent to the smallest integer type which has enough room.

- `-fpack-struct`

Pack all structure members together without holes.

- `-fno-jump-tables`

Do not generate `tablejump` instructions. By default, jump tables can be used to optimize `switch` statements. When turned off, sequences of compare statements are used instead. Jump tables are usually faster to execute on average, but in particular for `switch` statements, where most of the jumps would go to the default label, they might waste a bit of flash memory.

NOTE: The `tablejump` instructions use the LPM assembler instruction for access to jump tables. Always use `-fno-jump-tables` switch, if compiling a bootloader for devices with more than 64 KB of code memory.

12.2 Options for the assembler avr-as

12.2.1 Machine-specific assembler options

- `-mmcu=architecture`
- `-mmcu=MCU name`

avr-as understands the same `-mmcu=` options as [avr-gcc](#). By default, `avr2` is assumed, but this can be altered by using the appropriate `.arch` pseudo-instruction inside the assembler source file.

- `-mall-ops`

Turns off opcode checking for the actual MCU type, and allows any possible AVR opcode to be assembled.

- `-mno-skip-bug`

Don't emit a warning when trying to skip a 2-word instruction with a `CPSE/SBIC/SBIS/SBRC/SBRS` instruction. Early AVR devices suffered from a hardware bug where these instructions could not be properly skipped.

- `-mno-wrap`

For `RJMP/RCALL` instructions, don't allow the target address to wrap around for devices that have more than 8 KB of memory.

- `-gstabs`

Generate `.stabs` debugging symbols for assembler source lines. This enables `avr-gdb` to trace through assembler source files. This option *must not* be used when assembling sources that have been generated by the C compiler; these files already contain the appropriate line number information from the C source files.

- `-a[cdhlmns=file]`

Turn on the assembler listing. The sub-options are:

- `c` omit false conditionals
- `d` omit debugging directives
- `h` include high-level source
- `l` include assembly
- `m` include macro expansions
- `n` omit forms processing
- `s` include symbols
- `=file` set the name of the listing file

The various sub-options can be combined into a single `-a` option list; `=file` must be the last one in that case.

12.2.2 Examples for assembler options passed through the C compiler

Remember that assembler options can be passed from the C compiler frontend using `-Wa` (see [above](#)), so in order to include the C source code into the assembler listing in file `foo.lst`, when compiling `foo.c`, the following compiler command-line can be used:

```
$ avr-gcc -c -O foo.c -o foo.o -Wa,-ahls=foo.lst
```

In order to pass an assembler file through the C preprocessor first, and have the assembler generate line number debugging information for it, the following command can be used:

```
$ avr-gcc -c -x assembler-with-cpp -o foo.o foo.S -Wa,--gstabs
```

Note that on Unix systems that have case-distinguishing file systems, specifying a file name with the suffix `.S` (upper-case letter S) will make the compiler automatically assume `-x assembler-with-cpp`, while using `.s` would pass the file directly to the assembler (no preprocessing done).

12.3 Controlling the linker `avr-ld`

12.3.1 Selected linker options

While there are no machine-specific options for `avr-ld`, a number of the standard options might be of interest to AVR users.

- `-lname`

Locate the archive library named `libname.a`, and use it to resolve currently unresolved symbols from it. The library is searched along a path that consists of builtin pathname entries that have been specified at compile time (e. g. `/usr/local/avr/lib` on Unix systems), possibly extended by pathname entries as specified by `-L` options (that must precede the `-l` options on the command-line).

- `-Lpath`

Additional location to look for archive libraries requested by `-l` options.

- `-defsym symbol=expr`

Define a global symbol `symbol` using `expr` as the value.

- `-M`

Print a linker map to `stdout`.

- `-Map mapfile`

Print a linker map to `mapfile`.

- `-cref`

Output a cross reference table to the map file (in case `-Map` is also present), or to `stdout`.

- `-section-start sectionname=org`

Start section *sectionname* at absolute address *org*.

- `-Tbss org`
- `-Tdata org`
- `-Ttext org`

Start the `bss`, `data`, or `text` section at *org*, respectively.

- `-T scriptfile`

Use *scriptfile* as the linker script, replacing the default linker script. Default linker scripts are stored in a system-specific location (e. g. under `/usr/local/avr/lib/ldscripts` on Unix systems), and consist of the AVR architecture name (`avr2` through `avr5`) with the suffix `.x` appended. They describe how the various [memory sections](#) will be linked together.

12.3.2 Passing linker options from the C compiler

By default, all unknown non-option arguments on the `avr-gcc` command-line (i. e., all filename arguments that don't have a suffix that is handled by `avr-gcc`) are passed straight to the linker. Thus, all files ending in `.o` (object files) and `.a` (object libraries) are provided to the linker.

System libraries are usually not passed by their explicit filename but rather using the `-l` option which uses an abbreviated form of the archive filename (see above). `avr-libc` ships two system libraries, `libc.a`, and `libm.a`. While the standard library `libc.a` will always be searched for unresolved references when the linker is started using the C compiler frontend (i. e., there's always at least one implied `-lc` option), the mathematics library `libm.a` needs to be explicitly requested using `-lm`. See also the entry in the FAQ explaining this.

Conventionally, Makefiles use the `make` macro `LDLIBS` to keep track of `-l` (and possibly `-L`) options that should only be appended to the C compiler command-line when linking the final binary. In contrast, the macro `LD_FLAGS` is used to store other command-line options to the C compiler that should be passed as options during the linking stage. The difference is that options are placed early on the command-line, while libraries are put at the end since they are to be used to resolve global symbols that are still unresolved at this point.

Specific linker flags can be passed from the C compiler command-line using the `-Wl` compiler option, see [above](#). This option requires that there be no spaces in the appended linker option, while some of the linker options above (like `-Map` or `-defsym`) would require a space. In these situations, the space can be replaced by an equal sign as well. For example, the following command-line can be used to compile `foo.c` into an executable, and also produce a link map that contains a cross-reference list in the file `foo.map`:

```
$ avr-gcc -O -o foo.out -Wl,-Map=foo.map -Wl,--cref foo.c
```

Alternatively, a comma as a placeholder will be replaced by a space before passing the option to the linker. So for a device with external SRAM, the following command-line would cause the linker to place the data segment at address `0x2000` in the SRAM:

```
$ avr-gcc -mmcu=atmega128 -o foo.out -Wl,-Tdata,0x802000
```

See the explanation of the [data section](#) for why `0x800000` needs to be added to the actual value. Note that the stack will still remain in internal RAM, through the symbol `__stack` that is provided by the run-time startup code. This is probably a good idea anyway (since internal RAM access is faster), and even required for some early devices that had

hardware bugs preventing them from using a stack in external RAM. Note also that the heap for `malloc()` will still be placed after all the variables in the data section, so in this situation, no stack/heap collision can occur.

In order to relocate the stack from its default location at the top of internal RAM, the value of the symbol `__stack` can be changed on the linker command-line. As the linker is typically called from the compiler frontend, this can be achieved using a compiler option like

```
-Wl,--defsym=__stack=0x8003ff
```

The above will make the code use stack space from RAM address 0x3ff downwards. The amount of stack space available then depends on the bottom address of internal RAM for a particular device. It is the responsibility of the application to ensure the stack does not grow out of bounds, as well as to arrange for the stack to not collide with variable allocations made by the compiler (sections `.data` and `.bss`).

13 Compiler optimization

13.1 Problems with reordering code

Author

Jan Waclawek

Programs contain sequences of statements, and a naive compiler would execute them exactly in the order as they are written. But an optimizing compiler is free to *reorder* the statements - or even parts of them - if the resulting "net effect" is the same. The "measure" of the "net effect" is what the standard calls "side effects", and is accomplished exclusively through accesses (reads and writes) to variables qualified as `volatile`. So, as long as all volatile reads and writes are to the same addresses and in the same order (and writes write the same values), the program is correct, regardless of other operations in it. (One important point to note here is, that time duration between consecutive volatile accesses is not considered at all.)

Unfortunately, there are also operations which are not covered by volatile accesses. An example of this in `avr-gcc/avr-libc` are the `cli()` and `sei()` macros defined in `<avr/interrupt.h>`, which convert directly to the respective assembler mnemonics through the `asm()` statement. These don't constitute a variable access at all, not even volatile, so the compiler is free to move them around. Although there is a "volatile" qualifier which can be attached to the `asm()` statement, its effect on (re)ordering is not clear from the documentation (and is more likely only to prevent complete removal by the optimiser), as it (among other) states:

Note that even a volatile asm instruction can be moved relative to other code, including across jump instructions. [...] Similarly, you can't expect a sequence of volatile asm instructions to remain perfectly consecutive.

See also

<http://gcc.gnu.org/onlinedocs/gcc-4.3.4/gcc/Extended-Asm.html>

There is another mechanism which can be used to achieve something similar: *memory barriers*. This is accomplished through adding a special "memory" clobber to the inline `asm` statement, and ensures that all variables are flushed from registers to memory before the statement, and then re-read after the statement. The purpose of memory barriers is slightly different than to enforce code ordering: it is supposed to ensure that there are no variables "cached" in registers, so that it is safe to change the content of registers e.g. when switching context in a multitasking OS (on "big" processors with out-of-order execution they also imply usage of special instructions which force the processor into "in-order" state (this is not the case of AVR's)).

However, memory barrier works well in ensuring that all volatile accesses before and after the barrier occur in the given order with respect to the barrier. However, it does not ensure the compiler moving non-volatile-related statements across the barrier. Peter Dannegger provided a nice example of this effect:

```

#define cli() __asm volatile( "cli" ::: "memory" )
#define sei() __asm volatile( "sei" ::: "memory" )

unsigned int ivar;

void test2( unsigned int val )
{
    val = 65535U / val;

    cli();

    ivar = val;

    sei();
}

```

compiles with optimisations switched on (-Os) to

```

00000112 <test2>:
112:  bc 01          movw    r22, r24
114:  f8 94          cli
116:  8f ef          ldi     r24, 0xFF      ; 255
118:  9f ef          ldi     r25, 0xFF      ; 255
11a:  0e 94 96 00    call   0x12c ; 0x12c <__udivmodhi4>
11e:  70 93 01 02    sts    0x0201, r23
122:  60 93 00 02    sts    0x0200, r22
126:  78 94          sei
128:  08 95          ret

```

where the potentially slow division is moved across `cli()`, resulting in interrupts to be disabled longer than intended. Note, that the volatile access occurs in order with respect to `cli()` or `sei()`; so the "net effect" required by the standard is achieved as intended, it is "only" the timing which is off. However, for most of embedded applications, timing is an important, sometimes critical factor.

See also

<https://www.mikrocontroller.net/topic/65923>

Unfortunately, at the moment, in `avr-gcc` (nor in the C standard), there is no mechanism to enforce complete match of written and executed code ordering - except maybe of switching the optimization completely off (-O0), or writing all the critical code in assembly.

To sum it up:

- memory barriers ensure proper ordering of volatile accesses
- memory barriers don't ensure statements with no volatile accesses to be reordered across the barrier

14 Using the avrdude program

Note

This section was contributed by Brian Dean [bsd@bsdhome.com].

The `avrdude` program was previously called `avrprog`. The name was changed to avoid confusion with the `avrprog` program that Atmel ships with `AvrStudio`.

`avrdude` is a program that is used to update or read the flash and EEPROM memories of Atmel AVR microcontrollers on FreeBSD Unix. It supports the Atmel serial programming protocol using the PC's parallel port and can upload either a raw binary file or an Intel Hex format file. It can also be used in an interactive mode to individually update EEPROM cells, fuse bits, and/or lock bits (if their access is supported by the Atmel serial programming protocol.) The main flash

instruction memory of the AVR can also be programmed in interactive mode, however this is not very useful because one can only turn bits off. The only way to turn flash bits on is to erase the entire memory (using avrdude's `-e` option).

avrdude is part of the FreeBSD ports system. To install it, simply do the following:

```
# cd /usr/ports/devel/avrdude
# make install
```

Once installed, avrdude can program processors using the contents of the .hex file specified on the command line. In this example, the file `main.hex` is burned into the flash memory:

```
# avrdude -p 2313 -e -m flash -i main.hex

avrdude: AVR device initialized and ready to accept instructions

avrdude: Device signature = 0x1e9101

avrdude: erasing chip
avrdude: done.
avrdude: reading input file "main.hex"
avrdude: input file main.hex auto detected as Intel Hex

avrdude: writing flash:
1749 0x00
avrdude: 1750 bytes of flash written
avrdude: verifying flash memory against main.hex:
avrdude: reading on-chip flash data:
1749 0x00
avrdude: verifying ...
avrdude: 1750 bytes of flash verified

avrdude done. Thank you.
```

The `-p 2313` option lets avrdude know that we are operating on an AT90S2313 chip. This option specifies the device id and is matched up with the device of the same id in avrdude's configuration file (`/usr/local/etc/avrdude.conf`). To list valid parts, specify the `-v` option. The `-e` option instructs avrdude to perform a chip-erase before programming; this is almost always necessary before programming the flash. The `-m flash` option indicates that we want to upload data into the flash memory, while `-i main.hex` specifies the name of the input file.

The EEPROM is uploaded in the same way, the only difference is that you would use `-m eeprom` instead of `-m flash`.

To use interactive mode, use the `-t` option:

```
# avrdude -p 2313 -t
avrdude: AVR device initialized and ready to accept instructions
avrdude: Device signature = 0x1e9101
avrdude>
```

The `'?'` command displays a list of valid commands:

```
avrdude> ?
>>> ?
Valid commands:

dump    : dump memory : dump <memtype> <addr> <N-Bytes>
read    : alias for dump
write   : write memory : write <memtype> <addr> <b1> <b2> ... <bN>
erase   : perform a chip erase
sig     : display device signature bytes
part    : display the current part information
```

```

send      : send a raw command : send <b1> <b2> <b3> <b4>
help      : help
?         : help
quit      : quit

```

Use the 'part' command to display valid memory types for use with the 'dump' and 'write' commands.

```
avrdude>
```

15 Release Numbering and Methodology

15.1 Release Version Numbering Scheme

Release numbers consist of three parts, a major number, a minor number, and a revision number, each separated by a dot.

The major number is currently 1 (and has always been). It will only be bumped in case a new version offers a major change in the API that is not backwards compatible.

In the past (up to 1.6.x), even minor numbers have been used to indicate "stable" releases, and odd minor numbers have been reserved for development branches/versions. As the latter has never really been used, and maintaining a stable branch that eventually became effectively the same as the development version has proven to be just a cumbersome and tedious job, this scheme has given up in early 2010, so starting with 1.7.0, every minor number will be used. Minor numbers will be bumped upon judgement of the development team, whenever it seems appropriate, but at least in cases where some API was changed.

Starting with version 1.4.0, a file [<avr/version.h>](#) indicates the library version of an installed library tree.

15.2 Releasing AVR Libc

The information in this section is only relevant to AVR Libc developers and can be ignored by end users.

Note

In what follows, I assume you know how to use SVN and how to checkout multiple source trees in a single directory without having them clobber each other. If you don't know how to do this, you probably shouldn't be making releases or cutting branches.

15.2.1 Creating an SVN branch

The following steps should be taken to cut a branch in SVN (assuming \$username is set to your savannah username):

1. Check out a fresh source tree from SVN trunk.
2. Update the NEWS file with pending release number and commit to SVN trunk:

Change *Changes since avr-libc-<last_release>*: to *Changes in avr-libc-<this_release>*.

3. Set the branch-point tag (setting <major> and <minor> accordingly):

```
svn copy svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/trunk svn+ssh-
://$username@svn.savannah.nongnu.org/avr-libc/tags/avr-libc-<major>_<minor>-branchpoint
```

4. Create the branch:

```
svn copy svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/trunk svn+ssh-
:/$username@svn.savannah.nongnu.org/avr-libc/branches/avr-libc-<major>_-
<minor>-branch
```

5. Update the package version in configure.ac and commit configure.ac to SVN trunk:
Change minor number to next odd value.
6. Update the NEWS file and commit to SVN trunk:
Add Changes since avr-libc-<this_release>:
7. Check out a new tree for the branch:

```
svn co svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/branches/avr-libc-<major>-
_<minor>-branch
```
8. Update the package version in configure.ac and commit configure.ac to SVN branch:
Change the patch number to 90 to denote that this now a branch leading up to a release. Be sure to leave the <date> part of the version.
9. Bring the build system up to date by running bootstrap and configure.
10. Perform a 'make distcheck' and make sure it succeeds. This will create the snapshot source tarball. This should be considered the first release candidate.
11. Upload the snapshot tarball to savannah.
12. Update the bug tracker interface on Savannah: Bugs —> Edit field values —> Release / Fixed Release
13. Announce the branch and the branch tag to the avr-libc-dev list so other developers can checkout the branch.

15.2.2 Making a release

A stable release will only be done on a branch, not from the SVN trunk.

The following steps should be taken when making a release:

1. Make sure the source tree you are working from is on the correct branch:

```
svn switch svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/branches/avr-libc-<major>-
_<minor>-branch
```
2. Update the package version in configure.ac and commit it to SVN.
3. Update the gnu tool chain version requirements in the README and commit to SVN.
4. Update the ChangeLog file to note the release and commit to SVN on the branch:
Add Released avr-libc-<this_release>.
5. Update the NEWS file with pending release number and commit to SVN:
Change *Changes since avr-libc-<last_release>:* to *Changes in avr-libc-<this_release>:*.
6. Bring the build system up to date by running bootstrap and configure.
7. Perform a 'make distcheck' and make sure it succeeds. This will create the source tarball.

8. Tag the release:

```
svn copy . svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/tags/avr-libc-<major>-
_<minor>_<patch>-release
```

or

```
svn copy svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/branches/avr-libc-<major>-
_<minor>-branch svn+ssh://$username@svn.savannah.nongnu.org/avr-libc/tags/avr-libc-<major>-
_<minor>_<patch>-release
```

9. Upload the tarball to savannah.

10. Update the NEWS file, and commit to SVN:

Add *Changes since avr-libc-<major>_<minor>_<patch>:*

11. Update the bug tracker interface on Savannah: Bugs —> Edit field values —> Release / Fixed Release

12. Generate the latest documentation and upload to savannah.

13. Announce the release.

The following hypothetical diagram should help clarify version and branch relationships.

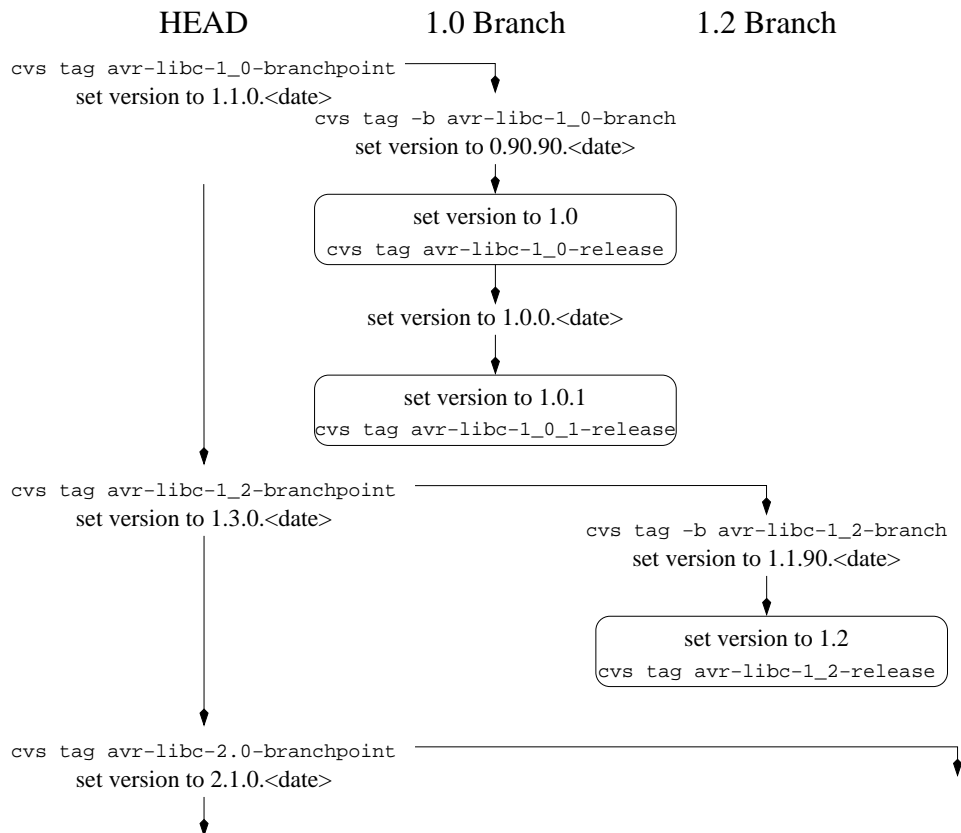


Figure 4: Release tree

16 Acknowledgments

This document tries to tie together the labors of a large group of people. Without these individuals' efforts, we wouldn't have a terrific, **free** set of tools to develop AVR projects. We all owe thanks to:

- The GCC Team, which produced a very capable set of development tools for an amazing number of platforms and processors.
- Denis Chertykov [denisc@overta.ru] for making the AVR-specific changes to the GNU tools.
- Denis Chertykov and Marek Michalkiewicz [marekm@linux.org.pl] for developing the standard libraries and startup code for \b AVR-GCC.
- Uros Platise for developing the AVR programmer tool, \b uisp.
- Joerg Wunsch [joerg@FreeBSD.ORG] for adding all the AVR development tools to the FreeBSD [<http://www.freebsd.org>] ports tree and for providing the basics for the \ref demo_project "demo project".
- Brian Dean [bsd@bsdhome.com] for developing \b avrdude (an alternative to uisp) and for contributing \ref using_avrprog "documentation" which describes how to use it. \b Avrdude was previously called \b avrprog.
- Eric Weddington [eweddington@cs0.atmel.com] for maintaining the \b WinAVR package and thus making the continued improvements to the open source AVR toolchain available to many users.
- Rich Neswold for writing the original avr-tools document (which he graciously allowed to be merged into this document) and his improvements to the \ref demo_project "demo project".
- Theodore A. Roth for having been a long-time maintainer of many of the tools (\b AVR-Libc, the AVR port of \b GDB, \b AVaRICE, \b uisp, \b avrdude).
- All the people who currently maintain the tools, and/or have submitted suggestions, patches and bug reports.

(See the AUTHORS files of the various tools.)

- And lastly, all the users who use the software. If nobody used the software, we would probably not be very motivated to continue to develop it. Keep those bug reports coming. ;-)

17 Todo List

Group **avr_boot**

From email with Marek: On smaller devices (all except ATmega64/128), __SPM_REG is in the I/O space, accessible with the shorter "in" and "out" instructions - since the boot loader has a limited size, this could be an important optimization.

18 Deprecated List

Global **cbi** (port, bit)

Global **enable_external_int** (mask)

Global **inb** (port)

Global **inp** (port)

Global **INTERRUPT** (signame)

Global **ISR_ALIAS** (vector, target_vector)

For new code, the use of `ISR(..., ISR_ALIASOF(...))` is recommended.

Global **outb** (port, val)

Global **outp** (val, port)

Global **sbi** (port, bit)

Global **SIGNAL** (vector)

Do not use `SIGNAL()` in new code. Use `ISR()` instead.

Global **timer_enable_int** (unsigned char ints)

19 Module Index

19.1 Modules

Here is a list of all modules:

<alloca.h>: Allocate space in the stack	90
<assert.h>: Diagnostics	91
<ctype.h>: Character Operations	92
<errno.h>: System Errors	94
<inttypes.h>: Integer Type conversions	95
<math.h>: Mathematics	105
<setjmp.h>: Non-local goto	115
<stdint.h>: Standard Integer Types	117
<stdio.h>: Standard IO facilities	127
<stdlib.h>: General utilities	140
<string.h>: Strings	149
<avr/boot.h>: Bootloader Support Utilities	159

<code><avr/cpufunc.h></code> : Special AVR CPU functions	165
<code><avr/eeprom.h></code> : EEPROM handling	166
<code><avr/fuse.h></code> : Fuse Support	170
<code><avr/interrupt.h></code> : Interrupts	173
<code><avr/io.h></code> : AVR device-specific IO definitions	191
<code><avr/lock.h></code> : Lockbit Support	192
<code><avr/pgmspace.h></code> : Program Space Utilities	195
<code><avr/power.h></code> : Power Reduction Management	207
<code><avr/sfr_defs.h></code> : Special function registers	258
Additional notes from <code><avr/sfr_defs.h></code>	257
<code><avr/signature.h></code> : Signature Support	260
<code><avr/sleep.h></code> : Power Management and Sleep Modes	261
<code><avr/version.h></code> : avr-libc version macros	263
<code><avr/wdt.h></code> : Watchdog timer handling	265
<code><util/atomic.h></code> Atomically and Non-Atomically Executed Code Blocks	268
<code><util/crc16.h></code> : CRC Computations	271
<code><util/delay_basic.h></code> : Basic busy-wait delay loops	274
<code><util/parity.h></code> : Parity bit generation	275
<code><util/setbaud.h></code> : Helper macros for baud rate calculations	276
<code><util/twi.h></code> : TWI bit mask definitions	278
<code><compat/deprecated.h></code> : Deprecated items	282
<code><compat/ina90.h></code> : Compatibility with IAR EWB 3.x	285
Demo projects	286
Combining C and assembly source files	287
A simple project	290
A more sophisticated project	303
Using the standard IO facilities	309
Example using the two-wire interface (TWI)	315

20 Data Structure Index

20.1 Data Structures

Here are the data structures with brief descriptions:

div_t	319
ldiv_t	319

21 File Index

21.1 File List

Here is a list of all documented files with brief descriptions:

alloca.h	??
assert.h	320
atoi.S	320
atol.S	320
atomic.h	320
boot.h	320
cpufunc.h	325
crc16.h	325
ctype.h	325
defines.h	??
delay_basic.h	326
deprecated.h	??
dtoa_conv.h	??
eedef.h	??
eeprom.h	??
errno.h	326
fdevopen.c	326
ffs.S	327
ffsl.S	327
ffsll.S	327

fuse.h	327
hd44780.h	??
ina90.h	??
interrupt.h	327
inttypes.h	328
io.h	330
iocompat.h	??
lcd.h	??
lock.h	330
math.h	330
memccpy.S	332
memchr.S	332
memchr_P.S	332
memcmp.S	332
memcmp_P.S	332
memcmp_PF.S	332
memcpy.S	332
memcpy_P.S	332
memmem.S	332
memmove.S	333
memrchr.S	333
memrchr_P.S	333
memset.S	333
parity.h	333
pgmspace.h	333
portpins.h	??
power.h	343
project.h	??
setbaud.h	343
setjmp.h	343

sfr_defs.h	??
signal.h	??
signature.h	343
sleep.h	344
stdint.h	344
stdio.h	347
stdio_private.h	??
stdlib.h	348
stdlib_private.h	??
strcasecmp.S	350
strcasecmp_P.S	350
strcasestr.S	350
strcat.S	350
strcat_P.S	350
strchr.S	350
strchr_P.S	350
strchrnul.S	350
strchrnul_P.S	350
strcmp.S	350
strcmp_P.S	350
strcpy.S	350
strcpy_P.S	351
strcspn.S	351
strcspn_P.S	351
strdup.c	351
string.h	351
strlcat.S	352
strlcat_P.S	352
strlcpy.S	352
strlcpy_P.S	352

strlen.S	352
strlen_P.S	352
strlwr.S	352
strncasecmp.S	353
strncasecmp_P.S	353
strncat.S	353
strncat_P.S	353
strncmp.S	353
strncmp_P.S	353
strncpy.S	353
strncpy_P.S	353
strnlen.S	353
strnlen_P.S	353
strpbrk.S	353
strpbrk_P.S	353
strchr.S	353
strchr_P.S	354
strrev.S	354
strsep.S	354
strsep_P.S	354
strspn.S	354
strspn_P.S	354
strstr.S	354
strstr_P.S	354
strtok.c	354
strtok_P.c	354
strtok_r.S	355
strtok_rP.S	355
strupr.S	355
util/twi.h	355

<code>compat/twi.h</code>	??
<code>uart.h</code>	??
<code>version.h</code>	??
<code>wdt.h</code>	356
<code>xtoa_fast.h</code>	??

22 Module Documentation

22.1 `<alloca.h>`: Allocate space in the stack

Functions

- void * `alloca` (size_t __size)

22.1.1 Detailed Description

22.1.2 Function Documentation

22.1.2.1 void* `alloca` (size_t __size)

Allocate __size bytes of space in the stack frame of the caller.

This temporary space is automatically freed when the function that called `alloca()` returns to its caller. Avr-libc defines the `alloca()` as a macro, which is translated into the inlined `__builtin_alloca()` function. The fact that the code is inlined, means that it is impossible to take the address of this function, or to change its behaviour by linking with a different library.

Returns

`alloca()` returns a pointer to the beginning of the allocated space. If the allocation causes stack overflow, program behaviour is undefined.

Warning

Avoid use `alloca()` inside the list of arguments of a function call.

22.2 <assert.h>: Diagnostics

Macros

- #define `assert`(expression)

22.2.1 Detailed Description

```
#include <assert.h>
```

This header file defines a debugging aid.

As there is no standard error output stream available for many applications using this library, the generation of a printable error message is not enabled by default. These messages will only be generated if the application defines the macro

```
__ASSERT_USE_STDERR
```

before including the <assert.h> header file. By default, only `abort()` will be called to halt the application.

22.2.2 Macro Definition Documentation

22.2.2.1 #define `assert(expression)`

Parameters

<i>expression</i>	Expression to test for.
-------------------	-------------------------

The `assert()` macro tests the given expression and if it is false, the calling process is terminated. A diagnostic message is written to stderr and the function `abort()` is called, effectively terminating the program.

If expression is true, the `assert()` macro does nothing.

The `assert()` macro may be removed at compile time by defining `NDEBUG` as a macro (e.g., by using the compiler option `-DNDEBUG`).

22.3 <ctype.h>: Character Operations

Character classification routines

These functions perform character classification. They return true or false status depending whether the character passed to the function falls into the function's classification (i.e. `isdigit()` returns true if its argument is any value '0' though '9', inclusive). If the input is not an unsigned char value, all of these functions return false.

- `int isalnum (int __c)`
- `int isalpha (int __c)`
- `int isascii (int __c)`
- `int isblank (int __c)`
- `int iscntrl (int __c)`
- `int isdigit (int __c)`
- `int isgraph (int __c)`
- `int islower (int __c)`
- `int isprint (int __c)`
- `int ispunct (int __c)`
- `int isspace (int __c)`
- `int isupper (int __c)`
- `int isxdigit (int __c)`

Character conversion routines

This realization permits all possible values of integer argument. The `toascii()` function clears all highest bits. The `tolower()` and `toupper()` functions return an input argument as is, if it is not an unsigned char value.

- `int toascii (int __c)`
- `int tolower (int __c)`
- `int toupper (int __c)`

22.3.1 Detailed Description

These functions perform various operations on characters.

```
#include <ctype.h>
```

22.3.2 Function Documentation

22.3.2.1 `int isalnum (int __c)`

Checks for an alphanumeric character. It is equivalent to `(isalpha(c) || isdigit(c))`.

22.3.2.2 `int isalpha (int __c)`

Checks for an alphabetic character. It is equivalent to `(isupper(c) || islower(c))`.

22.3.2.3 `int isascii (int __c)`

Checks whether `c` is a 7-bit unsigned char value that fits into the ASCII character set.

22.3.2.4 `int isblank (int __c)`

Checks for a blank character, that is, a space or a tab.

22.3.2.5 `int iscntrl (int __c)`

Checks for a control character.

22.3.2.6 `int isdigit (int __c)`

Checks for a digit (0 through 9).

22.3.2.7 `int isgraph (int __c)`

Checks for any printable character except space.

22.3.2.8 `int islower (int __c)`

Checks for a lower-case character.

22.3.2.9 `int isprint (int __c)`

Checks for any printable character including space.

22.3.2.10 `int ispunct (int __c)`

Checks for any printable character which is not a space or an alphanumeric character.

22.3.2.11 `int isspace (int __c)`

Checks for white-space characters. For the avr-libc library, these are: space, form-feed ('\f'), newline ('\n'), carriage return ('\r'), horizontal tab ('\t'), and vertical tab ('\v').

22.3.2.12 `int isupper (int __c)`

Checks for an uppercase letter.

22.3.2.13 `int isxdigit (int __c)`

Checks for a hexadecimal digits, i.e. one of 0 1 2 3 4 5 6 7 8 9 a b c d e f A B C D E F.

22.3.2.14 `int toascii (int __c)`

Converts `c` to a 7-bit unsigned char value that fits into the ASCII character set, by clearing the high-order bits.

Warning

Many people will be unhappy if you use this function. This function will convert accented letters into random characters.

22.3.2.15 `int tolower (int __c)`

Converts the letter `c` to lower case, if possible.

22.3.2.16 `int toupper (int __c)`

Converts the letter `c` to upper case, if possible.

22.4 <errno.h>: System Errors

Macros

- #define `EDOM` 33
- #define `ERANGE` 34

22.4.1 Detailed Description

```
#include <errno.h>
```

Some functions in the library set the global variable `errno` when an error occurs. The file, `<errno.h>`, provides symbolic names for various error codes.

Warning

The `errno` global variable is not safe to use in a threaded or multi-task system. A race condition can occur if a task is interrupted between the call which sets `error` and when the task examines `errno`. If another task changes `errno` during this time, the result will be incorrect for the interrupted task.

22.4.2 Macro Definition Documentation

22.4.2.1 #define `EDOM` 33

Domain error.

22.4.2.2 #define `ERANGE` 34

Range error.

22.5 <inttypes.h>: Integer Type conversions

Far pointers for memory access >64K

- typedef `int32_t int_farptr_t`
- typedef `uint32_t uint_farptr_t`

macros for printf and scanf format specifiers

For C++, these are only included if `__STDC_LIMIT_MACROS` is defined before including `<inttypes.h>`.

- #define `PRId8` "d"
- #define `PRIdLEAST8` "d"
- #define `PRIdFAST8` "d"
- #define `PRi8` "i"
- #define `PRiLEAST8` "i"
- #define `PRiFAST8` "i"
- #define `PRId16` "d"
- #define `PRIdLEAST16` "d"
- #define `PRIdFAST16` "d"
- #define `PRi16` "i"
- #define `PRiLEAST16` "i"
- #define `PRiFAST16` "i"
- #define `PRId32` "ld"
- #define `PRIdLEAST32` "ld"
- #define `PRIdFAST32` "ld"
- #define `PRi32` "li"
- #define `PRiLEAST32` "li"
- #define `PRiFAST32` "li"
- #define `PRIdPTR` `PRId16`
- #define `PRiPTR` `PRi16`
- #define `PRIo8` "o"
- #define `PRIoLEAST8` "o"
- #define `PRIoFAST8` "o"
- #define `PRIo8` "u"
- #define `PRIoLEAST8` "u"
- #define `PRIoFAST8` "u"
- #define `PRIx8` "x"
- #define `PRIxLEAST8` "x"
- #define `PRIxFAST8` "x"
- #define `PRIX8` "X"
- #define `PRIXLEAST8` "X"
- #define `PRIXFAST8` "X"
- #define `PRIo16` "o"
- #define `PRIoLEAST16` "o"
- #define `PRIoFAST16` "o"
- #define `PRIo16` "u"
- #define `PRIoLEAST16` "u"
- #define `PRIoFAST16` "u"
- #define `PRIx16` "x"

- #define PRiLEAST16 "x"
- #define PRiFAST16 "x"
- #define PRiX16 "X"
- #define PRiXLEAST16 "X"
- #define PRiXFAST16 "X"
- #define PRio32 "lo"
- #define PRioLEAST32 "lo"
- #define PRioFAST32 "lo"
- #define PRiu32 "lu"
- #define PRiuLEAST32 "lu"
- #define PRiuFAST32 "lu"
- #define PRix32 "lx"
- #define PRixLEAST32 "lx"
- #define PRixFAST32 "lx"
- #define PRiX32 "IX"
- #define PRiXLEAST32 "IX"
- #define PRiXFAST32 "IX"
- #define PRioPTR PRio16
- #define PRiuPTR PRiu16
- #define PRixPTR PRix16
- #define PRiXPTR PRiX16
- #define SCNd16 "d"
- #define SCNdLEAST16 "d"
- #define SCNdFAST16 "d"
- #define SCNi16 "i"
- #define SCNiLEAST16 "i"
- #define SCNiFAST16 "i"
- #define SCNd32 "ld"
- #define SCNdLEAST32 "ld"
- #define SCNdFAST32 "ld"
- #define SCNi32 "li"
- #define SCNiLEAST32 "li"
- #define SCNiFAST32 "li"
- #define SCNdPTR SCNd16
- #define SCNiPTR SCNi16
- #define SCNo16 "o"
- #define SCNoLEAST16 "o"
- #define SCNoFAST16 "o"
- #define SCNu16 "u"
- #define SCNuLEAST16 "u"
- #define SCNuFAST16 "u"
- #define SCNx16 "x"
- #define SCNxLEAST16 "x"
- #define SCNxFAST16 "x"
- #define SCNo32 "lo"
- #define SCNoLEAST32 "lo"
- #define SCNoFAST32 "lo"
- #define SCNu32 "lu"
- #define SCNuLEAST32 "lu"
- #define SCNuFAST32 "lu"
- #define SCNx32 "lx"

- `#define SCNxLEAST32 "lx"`
- `#define SCNxFAST32 "lx"`
- `#define SCNoPTR SCNo16`
- `#define SCNuPTR SCNu16`
- `#define SCNxPTR SCNx16`

22.5.1 Detailed Description

```
#include <inttypes.h>
```

This header file includes the exact-width integer definitions from `<stdint.h>`, and extends them with additional facilities provided by the implementation.

Currently, the extensions include two additional integer types that could hold a "far" pointer (i.e. a code pointer that can address more than 64 KB), as well as standard names for all printf and scanf formatting options that are supported by the `<stdio.h>`: [Standard IO facilities](#). As the library does not support the full range of conversion specifiers from ISO 9899:1999, only those conversions that are actually implemented will be listed here.

The idea behind these conversion macros is that, for each of the types defined by `<stdint.h>`, a macro will be supplied that portably allows formatting an object of that type in `printf()` or `scanf()` operations. Example:

```
#include <inttypes.h>

uint8_t smallval;
int32_t longval;
...
printf("The hexadecimal value of smallval is %" PRIx8
      ", the decimal value of longval is %" PRId32 ".\n",
      smallval, longval);
```

22.5.2 Macro Definition Documentation

22.5.2.1 `#define PRId16 "d"`

decimal printf format for `int16_t`

22.5.2.2 `#define PRId32 "ld"`

decimal printf format for `int32_t`

22.5.2.3 `#define PRId8 "d"`

decimal printf format for `int8_t`

22.5.2.4 `#define PRIdFAST16 "d"`

decimal printf format for `int_fast16_t`

22.5.2.5 `#define PRIdFAST32 "ld"`

decimal printf format for `int_fast32_t`

22.5.2.6 `#define PRIdFAST8 "d"`

decimal printf format for `int_fast8_t`

22.5.2.7 `#define PRIdLEAST16 "d"`

decimal printf format for `int_least16_t`

22.5.2.8 **#define PRIdLEAST32 "ld"**

decimal printf format for int_least32_t

22.5.2.9 **#define PRIdLEAST8 "d"**

decimal printf format for int_least8_t

22.5.2.10 **#define PRIdPTR PRId16**

decimal printf format for intptr_t

22.5.2.11 **#define PRIi16 "i"**

integer printf format for int16_t

22.5.2.12 **#define PRIi32 "li"**

integer printf format for int32_t

22.5.2.13 **#define PRIi8 "i"**

integer printf format for int8_t

22.5.2.14 **#define PRIiFAST16 "i"**

integer printf format for int_fast16_t

22.5.2.15 **#define PRIiFAST32 "li"**

integer printf format for int_fast32_t

22.5.2.16 **#define PRIiFAST8 "i"**

integer printf format for int_fast8_t

22.5.2.17 **#define PRIiLEAST16 "i"**

integer printf format for int_least16_t

22.5.2.18 **#define PRIiLEAST32 "li"**

integer printf format for int_least32_t

22.5.2.19 **#define PRIiLEAST8 "i"**

integer printf format for int_least8_t

22.5.2.20 **#define PRIiPTR PRIi16**

integer printf format for intptr_t

22.5.2.21 **#define PRIo16 "o"**

octal printf format for uint16_t

22.5.2.22 **#define PRIo32 "lo"**

octal printf format for uint32_t

22.5.2.23 **#define PRIo8 "o"**

octal printf format for uint8_t

22.5.2.24 **#define PRIoFAST16 "o"**

octal printf format for uint_fast16_t

22.5.2.25 **#define PRIoFAST32 "lo"**

octal printf format for uint_fast32_t

22.5.2.26 **#define PRIoFAST8 "o"**

octal printf format for uint_fast8_t

22.5.2.27 **#define PRIoLEAST16 "o"**

octal printf format for uint_least16_t

22.5.2.28 **#define PRIoLEAST32 "lo"**

octal printf format for uint_least32_t

22.5.2.29 **#define PRIoLEAST8 "o"**

octal printf format for uint_least8_t

22.5.2.30 **#define PRIoPTR PRIo16**

octal printf format for uintptr_t

22.5.2.31 **#define PRIu16 "u"**

decimal printf format for uint16_t

22.5.2.32 **#define PRIu32 "lu"**

decimal printf format for uint32_t

22.5.2.33 **#define PRIu8 "u"**

decimal printf format for uint8_t

22.5.2.34 **#define PRIuFAST16 "u"**

decimal printf format for uint_fast16_t

22.5.2.35 **#define PRIuFAST32 "lu"**

decimal printf format for uint_fast32_t

22.5.2.36 **#define PRIuFAST8 "u"**

decimal printf format for uint_fast8_t

22.5.2.37 **#define PRIuLEAST16 "u"**

decimal printf format for uint_least16_t

22.5.2.38 **#define PRIuLEAST32 "lu"**

decimal printf format for uint_least32_t

22.5.2.39 **#define PRIuLEAST8 "u"**

decimal printf format for uint_least8_t

22.5.2.40 **#define PRIuPTR PRIu16**

decimal printf format for uintptr_t

22.5.2.41 **#define PRIx16 "x"**

hexadecimal printf format for uint16_t

22.5.2.42 **#define PRIx16 "X"**

uppercase hexadecimal printf format for uint16_t

22.5.2.43 **#define PRIx32 "lx"**

hexadecimal printf format for uint32_t

22.5.2.44 **#define PRIx32 "IX"**

uppercase hexadecimal printf format for uint32_t

22.5.2.45 **#define PRIx8 "x"**

hexadecimal printf format for uint8_t

22.5.2.46 **#define PRIx8 "X"**

uppercase hexadecimal printf format for uint8_t

22.5.2.47 **#define PRIxFAST16 "x"**

hexadecimal printf format for uint_fast16_t

22.5.2.48 **#define PRIxFAST16 "X"**

uppercase hexadecimal printf format for uint_fast16_t

22.5.2.49 **#define PRIxFAST32 "lx"**

hexadecimal printf format for uint_fast32_t

22.5.2.50 **#define PRIxFAST32 "IX"**

uppercase hexadecimal printf format for uint_fast32_t

22.5.2.51 **#define PRIxFAST8 "x"**

hexadecimal printf format for uint_fast8_t

22.5.2.52 **#define PRIxFAST8 "X"**

uppercase hexadecimal printf format for uint_fast8_t

22.5.2.53 **#define PRIxLEAST16 "x"**

hexadecimal printf format for uint_least16_t

22.5.2.54 **#define PRIxLEAST16 "X"**

uppercase hexadecimal printf format for uint_least16_t

22.5.2.55 **#define PRIxLEAST32 "lx"**

hexadecimal printf format for uint_least32_t

22.5.2.56 **#define PRIxLEAST32 "IX"**

uppercase hexadecimal printf format for uint_least32_t

22.5.2.57 **#define PRIxLEAST8 "x"**

hexadecimal printf format for uint_least8_t

22.5.2.58 **#define PRIxLEAST8 "X"**

uppercase hexadecimal printf format for uint_least8_t

22.5.2.59 **#define PRIxPTR PRIx16**

hexadecimal printf format for uintptr_t

22.5.2.60 **#define PRIxPTR PRIX16**

uppercase hexadecimal printf format for uintptr_t

22.5.2.61 **#define SCNd16 "d"**

decimal scanf format for int16_t

22.5.2.62 **#define SCNd32 "ld"**

decimal scanf format for int32_t

22.5.2.63 **#define SCNdFAST16 "d"**

decimal scanf format for int_fast16_t

22.5.2.64 **#define SCNdFAST32 "ld"**

decimal scanf format for int_fast32_t

22.5.2.65 **#define SCNdLEAST16 "d"**

decimal scanf format for int_least16_t

22.5.2.66 **#define SCNdLEAST32 "ld"**

decimal scanf format for int_least32_t

22.5.2.67 **#define SCNdPTR SCNd16**

decimal scanf format for intptr_t

22.5.2.68 **#define SCNi16 "i"**

generic-integer scanf format for int16_t

22.5.2.69 **#define SCNi32 "li"**

generic-integer scanf format for int32_t

22.5.2.70 **#define SCNiFAST16 "i"**

generic-integer scanf format for int_fast16_t

22.5.2.71 **#define SCNiFAST32 "li"**

generic-integer scanf format for int_fast32_t

22.5.2.72 **#define SCNiLEAST16 "i"**

generic-integer scanf format for int_least16_t

22.5.2.73 **#define SCNiLEAST32 "li"**

generic-integer scanf format for int_least32_t

22.5.2.74 **#define SCNiPTR SCNi16**

generic-integer scanf format for intptr_t

22.5.2.75 **#define SCNo16 "o"**

octal scanf format for uint16_t

22.5.2.76 **#define SCNo32 "lo"**

octal scanf format for uint32_t

22.5.2.77 **#define SCNoFAST16 "o"**

octal scanf format for uint_fast16_t

22.5.2.78 **#define SCNoFAST32 "lo"**

octal scanf format for uint_fast32_t

22.5.2.79 **#define SCNoLEAST16 "o"**

octal scanf format for uint_least16_t

22.5.2.80 **#define SCNoLEAST32 "lo"**

octal scanf format for uint_least32_t

22.5.2.81 **#define SCNoPTR SCNo16**

octal scanf format for uintptr_t

22.5.2.82 **#define SCNu16 "u"**

decimal scanf format for uint16_t

22.5.2.83 **#define SCNu32 "lu"**

decimal scanf format for uint32_t

22.5.2.84 **#define SCNuFAST16 "u"**

decimal scanf format for uint_fast16_t

22.5.2.85 **#define SCNuFAST32 "lu"**

decimal scanf format for uint_fast32_t

22.5.2.86 **#define SCNuLEAST16 "u"**

decimal scanf format for uint_least16_t

22.5.2.87 **#define SCNuLEAST32 "lu"**

decimal scanf format for uint_least32_t

22.5.2.88 **#define SCNuPTR SCNu16**

decimal scanf format for uintptr_t

22.5.2.89 **#define SCNx16 "x"**

hexadecimal scanf format for uint16_t

22.5.2.90 **#define SCNx32 "lx"**

hexadecimal scanf format for uint32_t

22.5.2.91 **#define SCNxFAST16 "x"**

hexadecimal scanf format for uint_fast16_t

22.5.2.92 `#define SCNxFAST32 "lx"`

hexadecimal scanf format for `uint_fast32_t`

22.5.2.93 `#define SCNxLEAST16 "x"`

hexadecimal scanf format for `uint_least16_t`

22.5.2.94 `#define SCNxLEAST32 "lx"`

hexadecimal scanf format for `uint_least32_t`

22.5.2.95 `#define SCNxPTR SCNx16`

hexadecimal scanf format for `uintptr_t`

22.5.3 Typedef Documentation

22.5.3.1 `typedef int32_t int_farptr_t`

signed integer type that can hold a pointer > 64 KB

22.5.3.2 `typedef uint32_t uint_farptr_t`

unsigned integer type that can hold a pointer > 64 KB

22.6 <math.h>: Mathematics

Macros

- #define `M_E` 2.7182818284590452354
- #define `M_LOG2E` 1.4426950408889634074 /* log_2 e */
- #define `M_LOG10E` 0.43429448190325182765 /* log_10 e */
- #define `M_LN2` 0.69314718055994530942 /* log_e 2 */
- #define `M_LN10` 2.30258509299404568402 /* log_e 10 */
- #define `M_PI` 3.14159265358979323846 /* pi */
- #define `M_PI_2` 1.57079632679489661923 /* pi/2 */
- #define `M_PI_4` 0.78539816339744830962 /* pi/4 */
- #define `M_1_PI` 0.31830988618379067154 /* 1/pi */
- #define `M_2_PI` 0.63661977236758134308 /* 2/pi */
- #define `M_2_SQRTPI` 1.12837916709551257390 /* 2/sqrt(pi) */
- #define `M_SQRT2` 1.41421356237309504880 /* sqrt(2) */
- #define `M_SQRT1_2` 0.70710678118654752440 /* 1/sqrt(2) */
- #define `NAN` __builtin_nan("")
- #define `INFINITY` __builtin_inf()
- #define `cosf` cos
- #define `sinf` sin
- #define `tanf` tan
- #define `fabsf` fabs
- #define `fmodf` fmod
- #define `sqrtf` sqrt
- #define `cbrtf` cbrt
- #define `hypotf` hypot
- #define `squaref` square
- #define `floorf` floor
- #define `ceilf` ceil
- #define `frexpf` frexp
- #define `ldexpf` ldexp
- #define `expf` exp
- #define `coshf` cosh
- #define `sinhf` sinh
- #define `tanhf` tanh
- #define `acosf` acos
- #define `asinf` asin
- #define `atanf` atan
- #define `atan2f` atan2
- #define `logf` log
- #define `log10f` log10
- #define `powf` pow
- #define `isnanf` isnan
- #define `isinf` isinf
- #define `isfinitef` isfinite
- #define `copysignf` copysign
- #define `signbitf` signbit
- #define `fdimf` fdim
- #define `fmaf` fma
- #define `fmaxf` fmax

- `#define fminf fmin`
- `#define truncf trunc`
- `#define roundf round`
- `#define lroundf lround`
- `#define lrintf lrint`

Functions

- `double cos (double __x)`
- `double sin (double __x)`
- `double tan (double __x)`
- `double fabs (double __x)`
- `double fmod (double __x, double __y)`
- `double modf (double __x, double *__iptr)`
- `float modff (float __x, float *__iptr)`
- `double sqrt (double __x)`
- `double cbrt (double __x)`
- `double hypot (double __x, double __y)`
- `double square (double __x)`
- `double floor (double __x)`
- `double ceil (double __x)`
- `double frexp (double __x, int *__pexp)`
- `double ldexp (double __x, int __exp)`
- `double exp (double __x)`
- `double cosh (double __x)`
- `double sinh (double __x)`
- `double tanh (double __x)`
- `double acos (double __x)`
- `double asin (double __x)`
- `double atan (double __x)`
- `double atan2 (double __y, double __x)`
- `double log (double __x)`
- `double log10 (double __x)`
- `double pow (double __x, double __y)`
- `int isnan (double __x)`
- `int isinf (double __x)`
- `static int isfinite (double __x)`
- `static double copysign (double __x, double __y)`
- `int signbit (double __x)`
- `double fdim (double __x, double __y)`
- `double fma (double __x, double __y, double __z)`
- `double fmax (double __x, double __y)`
- `double fmin (double __x, double __y)`
- `double trunc (double __x)`
- `double round (double __x)`
- `long lround (double __x)`
- `long lrint (double __x)`

22.6.1 Detailed Description

```
#include <math.h>
```

This header file declares basic mathematics constants and functions.

Notes:

- In order to access the functions declared herein, it is usually also required to additionally link against the library `libm.a`. See also the related FAQ entry.
- Math functions do not raise exceptions and do not change the `errno` variable. Therefore the majority of them are declared with `const` attribute, for better optimization by GCC.

22.6.2 Macro Definition Documentation

22.6.2.1 #define acosf acos

The alias for [acos\(\)](#).

22.6.2.2 #define asinf asin

The alias for [asin\(\)](#).

22.6.2.3 #define atan2f atan2

The alias for [atan2\(\)](#).

22.6.2.4 #define atanf atan

The alias for [atan\(\)](#).

22.6.2.5 #define cbrtf cbrt

The alias for [cbrt\(\)](#).

22.6.2.6 #define ceilf ceil

The alias for [ceil\(\)](#).

22.6.2.7 #define copysignf copysign

The alias for [copysign\(\)](#).

22.6.2.8 #define cosf cos

The alias for [cos\(\)](#).

22.6.2.9 #define coshf cosh

The alias for [cosh\(\)](#).

22.6.2.10 #define expf exp

The alias for [exp\(\)](#).

22.6.2.11 #define fabsf fabs

The alias for [fabs\(\)](#).

22.6.2.12 #define fdimf fdim

The alias for [fdim\(\)](#).

22.6.2.13 #define floorf floor

The alias for [floor\(\)](#).

22.6.2.14 #define fmaf fma

The alias for [fma\(\)](#).

22.6.2.15 #define fmaxf fmax

The alias for [fmax\(\)](#).

22.6.2.16 #define fminf fmin

The alias for [fmin\(\)](#).

22.6.2.17 #define fmodf fmod

The alias for [fmod\(\)](#).

22.6.2.18 #define frexpf frexp

The alias for [frexp\(\)](#).

22.6.2.19 #define hypotf hypot

The alias for [hypot\(\)](#).

22.6.2.20 #define INFINITY __builtin_inf()

INFINITY constant.

22.6.2.21 #define isfinitef isfinite

The alias for [isfinite\(\)](#).

22.6.2.22 #define isinff isinf

The alias for [isinf\(\)](#).

22.6.2.23 #define isnanf isnan

The alias for [isnan\(\)](#).

22.6.2.24 #define ldexpf ldexp

The alias for [ldexp\(\)](#).

22.6.2.25 `#define log10f log10`

The alias for `log10()`.

22.6.2.26 `#define logf log`

The alias for `log()`.

22.6.2.27 `#define lrintf lrint`

The alias for `lrint()`.

22.6.2.28 `#define lroundf lround`

The alias for `lround()`.

22.6.2.29 `#define M_1_PI 0.31830988618379067154 /* 1/pi */`

The constant $1/\pi$.

22.6.2.30 `#define M_2_PI 0.63661977236758134308 /* 2/pi */`

The constant $2/\pi$.

22.6.2.31 `#define M_2_SQRTPI 1.12837916709551257390 /* 2/sqrt(pi) */`

The constant $2/\sqrt{\pi}$.

22.6.2.32 `#define M_E 2.7182818284590452354`

The constant e .

22.6.2.33 `#define M_LN10 2.30258509299404568402 /* log_e 10 */`

The natural logarithm of the 10.

22.6.2.34 `#define M_LN2 0.69314718055994530942 /* log_e 2 */`

The natural logarithm of the 2.

22.6.2.35 `#define M_LOG10E 0.43429448190325182765 /* log_10 e */`

The logarithm of the e to base 10.

22.6.2.36 `#define M_LOG2E 1.4426950408889634074 /* log_2 e */`

The logarithm of the e to base 2.

22.6.2.37 `#define M_PI 3.14159265358979323846 /* pi */`

The constant π .

22.6.2.38 `#define M_PI_2 1.57079632679489661923 /* pi/2 */`

The constant $\pi/2$.

22.6.2.39 `#define M_PI_4 0.78539816339744830962 /* pi/4 */`

The constant $\pi/4$.

22.6.2.40 `#define M_SQRT1_2 0.70710678118654752440 /* 1/sqrt(2) */`

The constant $1/\sqrt{2}$.

22.6.2.41 `#define M_SQRT2 1.41421356237309504880 /* sqrt(2) */`

The square root of 2.

22.6.2.42 `#define NAN __builtin_nan("")`

NAN constant.

22.6.2.43 `#define powf pow`

The alias for `pow()`.

22.6.2.44 `#define roundf round`

The alias for `round()`.

22.6.2.45 `#define signbitf signbit`

The alias for `signbit()`.

22.6.2.46 `#define sinf sin`

The alias for `sin()`.

22.6.2.47 `#define sinhf sinh`

The alias for `sinh()`.

22.6.2.48 `#define sqrtf sqrt`

The alias for `sqrt()`.

22.6.2.49 `#define squaref square`

The alias for `square()`.

22.6.2.50 `#define tanf tan`

The alias for `tan()`.

22.6.2.51 `#define tanhf tanh`

The alias for `tanh()`.

22.6.2.52 `#define truncf trunc`

The alias for `trunc()`.

22.6.3 Function Documentation

22.6.3.1 `double acos (double __x)`

The `acos()` function computes the principal value of the arc cosine of `__x`. The returned value is in the range $[0, \pi]$ radians. A domain error occurs for arguments not in the range $[-1, +1]$.

22.6.3.2 `double asin (double __x)`

The `asin()` function computes the principal value of the arc sine of `__x`. The returned value is in the range $[-\pi/2, \pi/2]$ radians. A domain error occurs for arguments not in the range $[-1, +1]$.

22.6.3.3 `double atan (double __x)`

The `atan()` function computes the principal value of the arc tangent of `__x`. The returned value is in the range $[-\pi/2, \pi/2]$ radians.

22.6.3.4 `double atan2 (double __y, double __x)`

The `atan2()` function computes the principal value of the arc tangent of `__y / __x`, using the signs of both arguments to determine the quadrant of the return value. The returned value is in the range $[-\pi, +\pi]$ radians.

22.6.3.5 `double cbrt (double __x)`

The `cbrt()` function returns the cube root of `__x`.

22.6.3.6 `double ceil (double __x)`

The `ceil()` function returns the smallest integral value greater than or equal to `__x`, expressed as a floating-point number.

22.6.3.7 `static double copysign (double __x, double __y) [static]`

The `copysign()` function returns `__x` but with the sign of `__y`. They work even if `__x` or `__y` are NaN or zero.

22.6.3.8 `double cos (double __x)`

The `cos()` function returns the cosine of `__x`, measured in radians.

22.6.3.9 `double cosh (double __x)`

The `cosh()` function returns the hyperbolic cosine of `__x`.

22.6.3.10 `double exp (double __x)`

The `exp()` function returns the exponential value of `__x`.

22.6.3.11 `double fabs (double __x)`

The `fabs()` function computes the absolute value of a floating-point number `__x`.

22.6.3.12 `double fdim (double __x, double __y)`

The `fdim()` function returns $\max(_x - _y, 0)$. If `__x` or `__y` or both are NaN, NaN is returned.

22.6.3.13 double floor (double __x)

The `floor()` function returns the largest integral value less than or equal to `__x`, expressed as a floating-point number.

22.6.3.14 double fma (double __x, double __y, double __z)

The `fma()` function performs floating-point multiply-add. This is the operation $(\text{__x} * \text{__y}) + \text{__z}$, but the intermediate result is not rounded to the destination type. This can sometimes improve the precision of a calculation.

22.6.3.15 double fmax (double __x, double __y)

The `fmax()` function returns the greater of the two values `__x` and `__y`. If an argument is NaN, the other argument is returned. If both arguments are NaN, NaN is returned.

22.6.3.16 double fmin (double __x, double __y)

The `fmin()` function returns the lesser of the two values `__x` and `__y`. If an argument is NaN, the other argument is returned. If both arguments are NaN, NaN is returned.

22.6.3.17 double fmod (double __x, double __y)

The function `fmod()` returns the floating-point remainder of `__x` / `__y`.

22.6.3.18 double frexp (double __x, int * __pexp)

The `frexp()` function breaks a floating-point number into a normalized fraction and an integral power of 2. It stores the integer in the `int` object pointed to by `__pexp`.

If `__x` is a normal float point number, the `frexp()` function returns the value v , such that v has a magnitude in the interval $[1/2, 1)$ or zero, and `__x` equals v times 2 raised to the power `__pexp`. If `__x` is zero, both parts of the result are zero. If `__x` is not a finite number, the `frexp()` returns `__x` as is and stores 0 by `__pexp`.

Note

This implementation permits a zero pointer as a directive to skip a storing the exponent.

22.6.3.19 double hypot (double __x, double __y)

The `hypot()` function returns $\sqrt{x*x + y*y}$. This is the length of the hypotenuse of a right triangle with sides of length `__x` and `__y`, or the distance of the point $(\text{__x}, \text{__y})$ from the origin. Using this function instead of the direct formula is wise, since the error is much smaller. No underflow with small `__x` and `__y`. No overflow if result is in range.

22.6.3.20 static int isfinite (double __x) [static]

The `isfinite()` function returns a nonzero value if `__x` is finite: not plus or minus infinity, and not NaN.

22.6.3.21 int isinf (double __x)

The function `isinf()` returns 1 if the argument `__x` is positive infinity, -1 if `__x` is negative infinity, and 0 otherwise.

Note

The GCC 4.3 can replace this function with inline code that returns the 1 value for both infinities (gcc bug #35509).

22.6.3.22 int isnan (double __x)

The function `isnan()` returns 1 if the argument `__x` represents a "not-a-number" (NaN) object, otherwise 0.

22.6.3.23 `double ldexp (double __x, int __exp)`

The `ldexp()` function multiplies a floating-point number by an integral power of 2. It returns the value of `__x` times 2 raised to the power `__exp`.

22.6.3.24 `double log (double __x)`

The `log()` function returns the natural logarithm of argument `__x`.

22.6.3.25 `double log10 (double __x)`

The `log10()` function returns the logarithm of argument `__x` to base 10.

22.6.3.26 `long lrint (double __x)`

The `lrint()` function rounds `__x` to the nearest integer, rounding the halfway cases to the even integer direction. (That is both 1.5 and 2.5 values are rounded to 2). This function is similar to `rint()` function, but it differs in type of return value and in that an overflow is possible.

Returns

The rounded long integer value. If `__x` is not a finite number or an overflow was, this realization returns the `LONG_MIN` value (0x80000000).

22.6.3.27 `long lround (double __x)`

The `lround()` function rounds `__x` to the nearest integer, but rounds halfway cases away from zero (instead of to the nearest even integer). This function is similar to `round()` function, but it differs in type of return value and in that an overflow is possible.

Returns

The rounded long integer value. If `__x` is not a finite number or an overflow was, this realization returns the `LONG_MIN` value (0x80000000).

22.6.3.28 `double modf (double __x, double * __iptr)`

The `modf()` function breaks the argument `__x` into integral and fractional parts, each of which has the same sign as the argument. It stores the integral part as a double in the object pointed to by `__iptr`.

The `modf()` function returns the signed fractional part of `__x`.

Note

This implementation skips writing by zero pointer. However, the GCC 4.3 can replace this function with inline code that does not permit to use NULL address for the avoiding of storing.

22.6.3.29 `float modff (float __x, float * __iptr)`

The alias for `modf()`.

22.6.3.30 `double pow (double __x, double __y)`

The function `pow()` returns the value of `__x` to the exponent `__y`.

22.6.3.31 double round (double __x)

The `round()` function rounds `__x` to the nearest integer, but rounds halfway cases away from zero (instead of to the nearest even integer). Overflow is impossible.

Returns

The rounded value. If `__x` is an integral or infinite, `__x` itself is returned. If `__x` is NaN, then NaN is returned.

22.6.3.32 int signbit (double __x)

The `signbit()` function returns a nonzero value if the value of `__x` has its sign bit set. This is not the same as '`__x < 0.0`', because IEEE 754 floating point allows zero to be signed. The comparison '`-0.0 < 0.0`' is false, but '`signbit (-0.0)`' will return a nonzero value.

22.6.3.33 double sin (double __x)

The `sin()` function returns the sine of `__x`, measured in radians.

22.6.3.34 double sinh (double __x)

The `sinh()` function returns the hyperbolic sine of `__x`.

22.6.3.35 double sqrt (double __x)

The `sqrt()` function returns the non-negative square root of `__x`.

22.6.3.36 double square (double __x)

The function `square()` returns `__x * __x`.

Note

This function does not belong to the C standard definition.

22.6.3.37 double tan (double __x)

The `tan()` function returns the tangent of `__x`, measured in radians.

22.6.3.38 double tanh (double __x)

The `tanh()` function returns the hyperbolic tangent of `__x`.

22.6.3.39 double trunc (double __x)

The `trunc()` function rounds `__x` to the nearest integer not larger in absolute value.

22.7 <setjmp.h>: Non-local goto

Functions

- int [setjmp](#) (jmp_buf __jmpb)
- void [longjmp](#) (jmp_buf __jmpb, int __ret) __ATTR_NORETURN__

22.7.1 Detailed Description

While the C language has the dreaded `goto` statement, it can only be used to jump to a label in the same (local) function. In order to jump directly to another (non-local) function, the C library provides the [setjmp\(\)](#) and [longjmp\(\)](#) functions. [setjmp\(\)](#) and [longjmp\(\)](#) are useful for dealing with errors and interrupts encountered in a low-level subroutine of a program.

Note

[setjmp\(\)](#) and [longjmp\(\)](#) make programs hard to understand and maintain. If possible, an alternative should be used. [longjmp\(\)](#) can destroy changes made to global register variables (see [faq_rebind](#)).

For a very detailed discussion of [setjmp\(\)](#)/[longjmp\(\)](#), see Chapter 7 of *Advanced Programming in the UNIX Environment*, by W. Richard Stevens.

Example:

```
#include <setjmp.h>

jmp_buf env;

int main (void)
{
    if (setjmp (env))
    {
        ... handle error ...
    }

    while (1)
    {
        ... main processing loop which calls foo() some where ...
    }
}

...

void foo (void)
{
    ... blah, blah, blah ...

    if (err)
    {
        longjmp (env, 1);
    }
}
```

22.7.2 Function Documentation

22.7.2.1 void longjmp (jmp_buf __jmpb, int __ret)

Non-local jump to a saved stack context.

```
#include <setjmp.h>
```

[longjmp\(\)](#) restores the environment saved by the last call of [setjmp\(\)](#) with the corresponding `__jmpb` argument. After [longjmp\(\)](#) is completed, program execution continues as if the corresponding call of [setjmp\(\)](#) had just returned the value `__ret`.

Note

`longjmp()` cannot cause 0 to be returned. If `longjmp()` is invoked with a second argument of 0, 1 will be returned instead.

Parameters

<code>__jmpb</code>	Information saved by a previous call to <code>setjmp()</code> .
<code>__ret</code>	Value to return to the caller of <code>setjmp()</code> .

Returns

This function never returns.

22.7.2.2 int setjmp (jmp_buf __jmpb)

Save stack context for non-local goto.

```
#include <setjmp.h>
```

`setjmp()` saves the stack context/environment in `__jmpb` for later use by `longjmp()`. The stack context will be invalidated if the function which called `setjmp()` returns.

Parameters

<code>__jmpb</code>	Variable of type <code>jmp_buf</code> which holds the stack information such that the environment can be restored.
---------------------	--

Returns

`setjmp()` returns 0 if returning directly, and non-zero when returning from `longjmp()` using the saved context.

22.8 <stdint.h>: Standard Integer Types

Exact-width integer types

Integer types having exactly the specified width

- typedef signed char [int8_t](#)
- typedef unsigned char [uint8_t](#)
- typedef signed int [int16_t](#)
- typedef unsigned int [uint16_t](#)
- typedef signed long int [int32_t](#)
- typedef unsigned long int [uint32_t](#)
- typedef signed long long int [int64_t](#)
- typedef unsigned long long int [uint64_t](#)

Integer types capable of holding object pointers

These allow you to declare variables of the same size as a pointer.

- typedef [int16_t](#) [intptr_t](#)
- typedef [uint16_t](#) [uintptr_t](#)

Minimum-width integer types

Integer types having at least the specified width

- typedef [int8_t](#) [int_least8_t](#)
- typedef [uint8_t](#) [uint_least8_t](#)
- typedef [int16_t](#) [int_least16_t](#)
- typedef [uint16_t](#) [uint_least16_t](#)
- typedef [int32_t](#) [int_least32_t](#)
- typedef [uint32_t](#) [uint_least32_t](#)
- typedef [int64_t](#) [int_least64_t](#)
- typedef [uint64_t](#) [uint_least64_t](#)

Fastest minimum-width integer types

Integer types being usually fastest having at least the specified width

- typedef [int8_t](#) [int_fast8_t](#)
- typedef [uint8_t](#) [uint_fast8_t](#)
- typedef [int16_t](#) [int_fast16_t](#)
- typedef [uint16_t](#) [uint_fast16_t](#)
- typedef [int32_t](#) [int_fast32_t](#)
- typedef [uint32_t](#) [uint_fast32_t](#)
- typedef [int64_t](#) [int_fast64_t](#)
- typedef [uint64_t](#) [uint_fast64_t](#)

Greatest-width integer types

Types designating integer data capable of representing any value of any integer type in the corresponding signed or unsigned category

- typedef `int64_t` `intmax_t`
- typedef `uint64_t` `uintmax_t`

Limits of specified-width integer types

C++ implementations should define these macros only when `__STDC_LIMIT_MACROS` is defined before `<stdint.h>` is included

- #define `INT8_MAX` `0x7f`
- #define `INT8_MIN` `(-INT8_MAX - 1)`
- #define `UINT8_MAX` `(__CONCAT(INT8_MAX, U) * 2U + 1U)`
- #define `INT16_MAX` `0x7fff`
- #define `INT16_MIN` `(-INT16_MAX - 1)`
- #define `UINT16_MAX` `(__CONCAT(INT16_MAX, U) * 2U + 1U)`
- #define `INT32_MAX` `0x7fffffffL`
- #define `INT32_MIN` `(-INT32_MAX - 1L)`
- #define `UINT32_MAX` `(__CONCAT(INT32_MAX, U) * 2UL + 1UL)`
- #define `INT64_MAX` `0x7fffffffffffffffLL`
- #define `INT64_MIN` `(-INT64_MAX - 1LL)`
- #define `UINT64_MAX` `(__CONCAT(INT64_MAX, U) * 2ULL + 1ULL)`

Limits of minimum-width integer types

- #define `INT_LEAST8_MAX` `INT8_MAX`
- #define `INT_LEAST8_MIN` `INT8_MIN`
- #define `UINT_LEAST8_MAX` `UINT8_MAX`
- #define `INT_LEAST16_MAX` `INT16_MAX`
- #define `INT_LEAST16_MIN` `INT16_MIN`
- #define `UINT_LEAST16_MAX` `UINT16_MAX`
- #define `INT_LEAST32_MAX` `INT32_MAX`
- #define `INT_LEAST32_MIN` `INT32_MIN`
- #define `UINT_LEAST32_MAX` `UINT32_MAX`
- #define `INT_LEAST64_MAX` `INT64_MAX`
- #define `INT_LEAST64_MIN` `INT64_MIN`
- #define `UINT_LEAST64_MAX` `UINT64_MAX`

Limits of fastest minimum-width integer types

- #define `INT_FAST8_MAX` `INT8_MAX`
- #define `INT_FAST8_MIN` `INT8_MIN`
- #define `UINT_FAST8_MAX` `UINT8_MAX`
- #define `INT_FAST16_MAX` `INT16_MAX`
- #define `INT_FAST16_MIN` `INT16_MIN`
- #define `UINT_FAST16_MAX` `UINT16_MAX`

- #define INT_FAST32_MAX INT32_MAX
- #define INT_FAST32_MIN INT32_MIN
- #define UINT_FAST32_MAX UINT32_MAX
- #define INT_FAST64_MAX INT64_MAX
- #define INT_FAST64_MIN INT64_MIN
- #define UINT_FAST64_MAX UINT64_MAX

Limits of integer types capable of holding object pointers

- #define INTPTR_MAX INT16_MAX
- #define INTPTR_MIN INT16_MIN
- #define UINTPTR_MAX UINT16_MAX

Limits of greatest-width integer types

- #define INTMAX_MAX INT64_MAX
- #define INTMAX_MIN INT64_MIN
- #define UINTMAX_MAX UINT64_MAX

Limits of other integer types

C++ implementations should define these macros only when __STDC_LIMIT_MACROS is defined before <stdint.h> is included

- #define PTRDIFF_MAX INT16_MAX
- #define PTRDIFF_MIN INT16_MIN
- #define SIG_ATOMIC_MAX INT8_MAX
- #define SIG_ATOMIC_MIN INT8_MIN
- #define SIZE_MAX (__CONCAT(INT16_MAX, U))

Macros for integer constants

C++ implementations should define these macros only when __STDC_CONSTANT_MACROS is defined before <stdint.h> is included.

These definitions are valid for integer constants without suffix and for macros defined as integer constant without suffix

- #define INT8_C(value) ((int8_t) value)
- #define UINT8_C(value) ((uint8_t) __CONCAT(value, U))
- #define INT16_C(value) value
- #define UINT16_C(value) __CONCAT(value, U)
- #define INT32_C(value) __CONCAT(value, L)
- #define UINT32_C(value) __CONCAT(value, UL)
- #define INT64_C(value) __CONCAT(value, LL)
- #define UINT64_C(value) __CONCAT(value, ULL)
- #define INTMAX_C(value) __CONCAT(value, LL)
- #define UINTMAX_C(value) __CONCAT(value, ULL)

22.8.1 Detailed Description

```
#include <stdint.h>
```

Use [u]intN_t if you need exactly N bits.

Since these typedefs are mandated by the C99 standard, they are preferred over rolling your own typedefs.

22.8.2 Macro Definition Documentation

22.8.2.1 #define INT16_C(*value*) *value*

define a constant of type int16_t

22.8.2.2 #define INT16_MAX 0x7fff

largest positive value an int16_t can hold.

22.8.2.3 #define INT16_MIN (-INT16_MAX - 1)

smallest negative value an int16_t can hold.

22.8.2.4 #define INT32_C(*value*) __CONCAT(value, L)

define a constant of type int32_t

22.8.2.5 #define INT32_MAX 0x7fffffffL

largest positive value an int32_t can hold.

22.8.2.6 #define INT32_MIN (-INT32_MAX - 1L)

smallest negative value an int32_t can hold.

22.8.2.7 #define INT64_C(*value*) __CONCAT(value, LL)

define a constant of type int64_t

22.8.2.8 #define INT64_MAX 0x7fffffffffffffffLL

largest positive value an int64_t can hold.

22.8.2.9 #define INT64_MIN (-INT64_MAX - 1LL)

smallest negative value an int64_t can hold.

22.8.2.10 #define INT8_C(*value*) ((int8_t) *value*)

define a constant of type int8_t

22.8.2.11 #define INT8_MAX 0x7f

largest positive value an int8_t can hold.

22.8.2.12 #define INT8_MIN (-INT8_MAX - 1)

smallest negative value an int8_t can hold.

22.8.2.13 **#define INT_FAST16_MAX INT16_MAX**

largest positive value an `int_fast16_t` can hold.

22.8.2.14 **#define INT_FAST16_MIN INT16_MIN**

smallest negative value an `int_fast16_t` can hold.

22.8.2.15 **#define INT_FAST32_MAX INT32_MAX**

largest positive value an `int_fast32_t` can hold.

22.8.2.16 **#define INT_FAST32_MIN INT32_MIN**

smallest negative value an `int_fast32_t` can hold.

22.8.2.17 **#define INT_FAST64_MAX INT64_MAX**

largest positive value an `int_fast64_t` can hold.

22.8.2.18 **#define INT_FAST64_MIN INT64_MIN**

smallest negative value an `int_fast64_t` can hold.

22.8.2.19 **#define INT_FAST8_MAX INT8_MAX**

largest positive value an `int_fast8_t` can hold.

22.8.2.20 **#define INT_FAST8_MIN INT8_MIN**

smallest negative value an `int_fast8_t` can hold.

22.8.2.21 **#define INT_LEAST16_MAX INT16_MAX**

largest positive value an `int_least16_t` can hold.

22.8.2.22 **#define INT_LEAST16_MIN INT16_MIN**

smallest negative value an `int_least16_t` can hold.

22.8.2.23 **#define INT_LEAST32_MAX INT32_MAX**

largest positive value an `int_least32_t` can hold.

22.8.2.24 **#define INT_LEAST32_MIN INT32_MIN**

smallest negative value an `int_least32_t` can hold.

22.8.2.25 **#define INT_LEAST64_MAX INT64_MAX**

largest positive value an `int_least64_t` can hold.

22.8.2.26 **#define INT_LEAST64_MIN INT64_MIN**

smallest negative value an `int_least64_t` can hold.

22.8.2.27 **#define INT_LEAST8_MAX INT8_MAX**

largest positive value an int_least8_t can hold.

22.8.2.28 **#define INT_LEAST8_MIN INT8_MIN**

smallest negative value an int_least8_t can hold.

22.8.2.29 **#define INTMAX_C(value) __CONCAT(value, LL)**

define a constant of type intmax_t

22.8.2.30 **#define INTMAX_MAX INT64_MAX**

largest positive value an intmax_t can hold.

22.8.2.31 **#define INTMAX_MIN INT64_MIN**

smallest negative value an intmax_t can hold.

22.8.2.32 **#define INTPTR_MAX INT16_MAX**

largest positive value an intptr_t can hold.

22.8.2.33 **#define INTPTR_MIN INT16_MIN**

smallest negative value an intptr_t can hold.

22.8.2.34 **#define PTRDIFF_MAX INT16_MAX**

largest positive value a ptrdiff_t can hold.

22.8.2.35 **#define PTRDIFF_MIN INT16_MIN**

smallest negative value a ptrdiff_t can hold.

22.8.2.36 **#define SIG_ATOMIC_MAX INT8_MAX**

largest positive value a sig_atomic_t can hold.

22.8.2.37 **#define SIG_ATOMIC_MIN INT8_MIN**

smallest negative value a sig_atomic_t can hold.

22.8.2.38 **#define SIZE_MAX (__CONCAT(INT16_MAX, U))**

largest value a size_t can hold.

22.8.2.39 **#define UINT16_C(value) __CONCAT(value, U)**

define a constant of type uint16_t

22.8.2.40 **#define UINT16_MAX (__CONCAT(INT16_MAX, U) * 2U + 1U)**

largest value an uint16_t can hold.

22.8.2.41 **#define** `UINT32_C(value)` `__CONCAT(value, UL)`

define a constant of type `uint32_t`

22.8.2.42 **#define** `UINT32_MAX` `(__CONCAT(INT32_MAX, U) * 2UL + 1UL)`

largest value an `uint32_t` can hold.

22.8.2.43 **#define** `UINT64_C(value)` `__CONCAT(value, ULL)`

define a constant of type `uint64_t`

22.8.2.44 **#define** `UINT64_MAX` `(__CONCAT(INT64_MAX, U) * 2ULL + 1ULL)`

largest value an `uint64_t` can hold.

22.8.2.45 **#define** `UINT8_C(value)` `((uint8_t) __CONCAT(value, U))`

define a constant of type `uint8_t`

22.8.2.46 **#define** `UINT8_MAX` `(__CONCAT(INT8_MAX, U) * 2U + 1U)`

largest value an `uint8_t` can hold.

22.8.2.47 **#define** `UINT_FAST16_MAX` `UINT16_MAX`

largest value an `uint_fast16_t` can hold.

22.8.2.48 **#define** `UINT_FAST32_MAX` `UINT32_MAX`

largest value an `uint_fast32_t` can hold.

22.8.2.49 **#define** `UINT_FAST64_MAX` `UINT64_MAX`

largest value an `uint_fast64_t` can hold.

22.8.2.50 **#define** `UINT_FAST8_MAX` `UINT8_MAX`

largest value an `uint_fast8_t` can hold.

22.8.2.51 **#define** `UINT_LEAST16_MAX` `UINT16_MAX`

largest value an `uint_least16_t` can hold.

22.8.2.52 **#define** `UINT_LEAST32_MAX` `UINT32_MAX`

largest value an `uint_least32_t` can hold.

22.8.2.53 **#define** `UINT_LEAST64_MAX` `UINT64_MAX`

largest value an `uint_least64_t` can hold.

22.8.2.54 **#define** `UINT_LEAST8_MAX` `UINT8_MAX`

largest value an `uint_least8_t` can hold.

22.8.2.55 `#define UINTMAX_C(value) __CONCAT(value, ULL)`

define a constant of type `uintmax_t`

22.8.2.56 `#define UINTMAX_MAX UINT64_MAX`

largest value an `uintmax_t` can hold.

22.8.2.57 `#define UINTPTR_MAX UINT16_MAX`

largest value an `uintptr_t` can hold.

22.8.3 Typedef Documentation

22.8.3.1 `typedef signed int int16_t`

16-bit signed type.

22.8.3.2 `typedef signed long int int32_t`

32-bit signed type.

22.8.3.3 `typedef signed long long int int64_t`

64-bit signed type.

Note

This type is not available when the compiler option `-mint8` is in effect.

22.8.3.4 `typedef signed char int8_t`

8-bit signed type.

22.8.3.5 `typedef int16_t int_fast16_t`

fastest signed int with at least 16 bits.

22.8.3.6 `typedef int32_t int_fast32_t`

fastest signed int with at least 32 bits.

22.8.3.7 `typedef int64_t int_fast64_t`

fastest signed int with at least 64 bits.

Note

This type is not available when the compiler option `-mint8` is in effect.

22.8.3.8 `typedef int8_t int_fast8_t`

fastest signed int with at least 8 bits.

22.8.3.9 `typedef int16_t int_least16_t`

signed int with at least 16 bits.

22.8.3.10 `typedef int32_t int_least32_t`

signed int with at least 32 bits.

22.8.3.11 `typedef int64_t int_least64_t`

signed int with at least 64 bits.

Note

This type is not available when the compiler option `-mint8` is in effect.

22.8.3.12 `typedef int8_t int_least8_t`

signed int with at least 8 bits.

22.8.3.13 `typedef int64_t intmax_t`

largest signed int available.

22.8.3.14 `typedef int16_t intptr_t`

Signed pointer compatible type.

22.8.3.15 `typedef unsigned int uint16_t`

16-bit unsigned type.

22.8.3.16 `typedef unsigned long int uint32_t`

32-bit unsigned type.

22.8.3.17 `typedef unsigned long long int uint64_t`

64-bit unsigned type.

Note

This type is not available when the compiler option `-mint8` is in effect.

22.8.3.18 `typedef unsigned char uint8_t`

8-bit unsigned type.

22.8.3.19 `typedef uint16_t uint_fast16_t`

fastest unsigned int with at least 16 bits.

22.8.3.20 `typedef uint32_t uint_fast32_t`

fastest unsigned int with at least 32 bits.

22.8.3.21 `typedef uint64_t uint_fast64_t`

fastest unsigned int with at least 64 bits.

Note

This type is not available when the compiler option `-mint8` is in effect.

22.8.3.22 typedef uint8_t uint_fast8_t

fastest unsigned int with at least 8 bits.

22.8.3.23 typedef uint16_t uint_least16_t

unsigned int with at least 16 bits.

22.8.3.24 typedef uint32_t uint_least32_t

unsigned int with at least 32 bits.

22.8.3.25 typedef uint64_t uint_least64_t

unsigned int with at least 64 bits.

Note

This type is not available when the compiler option `-mint8` is in effect.

22.8.3.26 typedef uint8_t uint_least8_t

unsigned int with at least 8 bits.

22.8.3.27 typedef uint64_t uintmax_t

largest unsigned int available.

22.8.3.28 typedef uint16_t uintptr_t

Unsigned pointer compatible type.

22.9 <stdio.h>: Standard IO facilities

Macros

- #define `FILE` struct __file
- #define `stdin` (__iob[0])
- #define `stdout` (__iob[1])
- #define `stderr` (__iob[2])
- #define `EOF` (-1)
- #define `fdev_set_udata`(stream, u) do { (stream)->udata = u; } while(0)
- #define `fdev_get_udata`(stream) ((stream)->udata)
- #define `fdev_setup_stream`(stream, put, get, rflag)
- #define `_FDEV_SETUP_READ` __SRD
- #define `_FDEV_SETUP_WRITE` __SWR
- #define `_FDEV_SETUP_RW` (__SRD|__SWR)
- #define `_FDEV_ERR` (-1)
- #define `_FDEV_EOF` (-2)
- #define `FDEV_SETUP_STREAM`(put, get, rflag)
- #define `fdev_close`()
- #define `putc`(__c, __stream) `fputc`(__c, __stream)
- #define `putchar`(__c) `fputc`(__c, `stdout`)
- #define `getc`(__stream) `fgetc`(__stream)
- #define `getchar`() `fgetc`(`stdin`)

Functions

- int `fclose` (`FILE` * __stream)
- int `vfprintf` (`FILE` * __stream, const char * __fmt, va_list __ap)
- int `vfprintf_P` (`FILE` * __stream, const char * __fmt, va_list __ap)
- int `fputc` (int __c, `FILE` * __stream)
- int `printf` (const char * __fmt,...)
- int `printf_P` (const char * __fmt,...)
- int `vprintf` (const char * __fmt, va_list __ap)
- int `sprintf` (char * __s, const char * __fmt,...)
- int `sprintf_P` (char * __s, const char * __fmt,...)
- int `snprintf` (char * __s, size_t __n, const char * __fmt,...)
- int `snprintf_P` (char * __s, size_t __n, const char * __fmt,...)
- int `vsprintf` (char * __s, const char * __fmt, va_list ap)
- int `vsprintf_P` (char * __s, const char * __fmt, va_list ap)
- int `vsprintf_P` (char * __s, size_t __n, const char * __fmt, va_list ap)
- int `vsprintf_P` (char * __s, size_t __n, const char * __fmt, va_list ap)
- int `fprintf` (`FILE` * __stream, const char * __fmt,...)
- int `fprintf_P` (`FILE` * __stream, const char * __fmt,...)
- int `fputs` (const char * __str, `FILE` * __stream)
- int `fputs_P` (const char * __str, `FILE` * __stream)
- int `puts` (const char * __str)
- int `puts_P` (const char * __str)
- size_t `fwrite` (const void * __ptr, size_t __size, size_t __nmemb, `FILE` * __stream)
- int `fgetc` (`FILE` * __stream)
- int `ungetc` (int __c, `FILE` * __stream)
- char * `fgets` (char * __str, int __size, `FILE` * __stream)

- `char * gets (char *__str)`
- `size_t fread (void *__ptr, size_t __size, size_t __nmemb, FILE *__stream)`
- `void clearerr (FILE *__stream)`
- `int feof (FILE *__stream)`
- `int ferror (FILE *__stream)`
- `int vfscanf (FILE *__stream, const char *__fmt, va_list __ap)`
- `int vfscanf_P (FILE *__stream, const char *__fmt, va_list __ap)`
- `int fscanf (FILE *__stream, const char *__fmt,...)`
- `int fscanf_P (FILE *__stream, const char *__fmt,...)`
- `int scanf (const char *__fmt,...)`
- `int scanf_P (const char *__fmt,...)`
- `int vscanf (const char *__fmt, va_list __ap)`
- `int sscanf (const char *__buf, const char *__fmt,...)`
- `int sscanf_P (const char *__buf, const char *__fmt,...)`
- `int fflush (FILE *stream)`
- `FILE * fdopen (int(*put)(char, FILE *), int(*get)(FILE *))`

22.9.1 Detailed Description

```
#include <stdio.h>
```

Introduction to the Standard IO facilities

This file declares the standard IO facilities that are implemented in `avr-libc`. Due to the nature of the underlying hardware, only a limited subset of standard IO is implemented. There is no actual file implementation available, so only device IO can be performed. Since there's no operating system, the application needs to provide enough details about their devices in order to make them usable by the standard IO facilities.

Due to space constraints, some functionality has not been implemented at all (like some of the `printf` conversions that have been left out). Nevertheless, potential users of this implementation should be warned: the `printf` and `scanf` families of functions, although usually associated with presumably simple things like the famous "Hello, world!" program, are actually fairly complex which causes their inclusion to eat up a fair amount of code space. Also, they are not fast due to the nature of interpreting the format string at run-time. Whenever possible, resorting to the (sometimes non-standard) predetermined conversion facilities that are offered by `avr-libc` will usually cost much less in terms of speed and code size.

Tunable options for code size vs. feature set

In order to allow programmers a code size vs. functionality tradeoff, the function `vfprintf()` which is the heart of the `printf` family can be selected in different flavours using linker options. See the documentation of `vfprintf()` for a detailed description. The same applies to `vfscanf()` and the `scanf` family of functions.

Outline of the chosen API

The standard streams `stdin`, `stdout`, and `stderr` are provided, but contrary to the C standard, since `avr-libc` has no knowledge about applicable devices, these streams are not already pre-initialized at application startup. Also, since there is no notion of "file" whatsoever to `avr-libc`, there is no function `fopen()` that could be used to associate a stream to some device. (See [note 1](#).) Instead, the function `fdopen()` is provided to associate a stream to a device, where the device needs to provide a function to send a character, to receive a character, or both. There is no differentiation between "text" and "binary" streams inside `avr-libc`. Character `\n` is sent literally down to the device's `put()` function. If the device requires a carriage return (`\r`) character to be sent before the linefeed, its `put()` routine must implement this (see [note 2](#)).

As an alternative method to `fdopen()`, the macro `fdev_setup_stream()` might be used to setup a user-supplied `FILE` structure.

It should be noted that the automatic conversion of a newline character into a carriage return - newline sequence breaks binary transfers. If binary transfers are desired, no automatic conversion should be performed, but instead any string that aims to issue a CR-LF sequence must use `"\r\n"` explicitly.

For convenience, the first call to `fdevopen()` that opens a stream for reading will cause the resulting stream to be aliased to `stdin`. Likewise, the first call to `fdevopen()` that opens a stream for writing will cause the resulting stream to be aliased to both, `stdout`, and `stderr`. Thus, if the open was done with both, read and write intent, all three standard streams will be identical. Note that these aliases are indistinguishable from each other, thus calling `fclose()` on such a stream will also effectively close all of its aliases (note 3).

It is possible to tie additional user data to a stream, using `fdev_set_udata()`. The backend put and get functions can then extract this user data using `fdev_get_udata()`, and act appropriately. For example, a single put function could be used to talk to two different UARTs that way, or the put and get functions could keep internal state between calls there.

Format strings in flash ROM

All the `printf` and `scanf` family functions come in two flavours: the standard name, where the format string is expected to be in SRAM, as well as a version with the suffix `"_P"` where the format string is expected to reside in the flash ROM. The macro `PSTR` (explained in <avr/pgmspace.h>: Program Space Utilities) becomes very handy for declaring these format strings.

Running stdio without malloc()

By default, `fdevopen()` requires `malloc()`. As this is often not desired in the limited environment of a microcontroller, an alternative option is provided to run completely without `malloc()`.

The macro `fdev_setup_stream()` is provided to prepare a user-supplied FILE buffer for operation with stdio.

Example

```
#include <stdio.h>

static int uart_putchar(char c, FILE *stream);

static FILE mystdout = FDEV_SETUP_STREAM(uart_putchar,
                                         NULL,
                                         _FDEV_SETUP_WRITE
);

static int
uart_putchar(char c, FILE *stream)
{
    if (c == '\n')
        uart_putchar('\r', stream);
    loop_until_bit_is_set(UCSRA, UDRE);
    UDR = c;
    return 0;
}

int
main(void)
{
    init_uart();
    stdout = &mystdout;
    printf("Hello, world!\n");

    return 0;
}
```

This example uses the initializer form `FDEV_SETUP_STREAM()` rather than the function-like `fdev_setup_stream()`, so all data initialization happens during C start-up.

If streams initialized that way are no longer needed, they can be destroyed by first calling the macro `fdev_close()`, and then destroying the object itself. No call to `fclose()` should be issued for these streams. While calling `fclose()` itself is harmless, it will cause an undefined reference to `free()` and thus cause the linker to link the malloc module into the application.

Notes

Note 1:

It might have been possible to implement a device abstraction that is compatible with `fopen()` but since this would have required to parse a string, and to take all the information needed either out of this string, or out of an additional table that would need to be provided by the application, this approach was not taken.

Note 2:

This basically follows the Unix approach: if a device such as a terminal needs special handling, it is in the domain of the terminal device driver to provide this functionality. Thus, a simple function suitable as `put()` for `fdevopen()` that talks to a UART interface might look like this:

```
int
uart_putchar(char c, FILE *stream)
{
    if (c == '\n')
        uart_putchar('\r');
    loop_until_bit_is_set(UCSRA, UDRE);
    UDR = c;
    return 0;
}
```

Note 3:

This implementation has been chosen because the cost of maintaining an alias is considerably smaller than the cost of maintaining full copies of each stream. Yet, providing an implementation that offers the complete set of standard streams was deemed to be useful. Not only that writing `printf()` instead of `fprintf(mystream, ...)` saves typing work, but since `avr-gcc` needs to resort to pass all arguments of variadic functions on the stack (as opposed to passing them in registers for functions that take a fixed number of parameters), the ability to pass one parameter less by implying `stdin` or `stdout` will also save some execution time.

22.9.2 Macro Definition Documentation

22.9.2.1 `#define _FDEV_EOF (-2)`

Return code for an end-of-file condition during device read.

To be used in the get function of `fdevopen()`.

22.9.2.2 `#define _FDEV_ERR (-1)`

Return code for an error condition during device read.

To be used in the get function of `fdevopen()`.

22.9.2.3 `#define _FDEV_SETUP_READ __SRD`

`fdev_setup_stream()` with read intent

22.9.2.4 `#define _FDEV_SETUP_RW (__SRD|__SWR)`

`fdev_setup_stream()` with read/write intent

22.9.2.5 `#define _FDEV_SETUP_WRITE __SWR`

`fdev_setup_stream()` with write intent

22.9.2.6 `#define EOF (-1)`

`EOF` declares the value that is returned by various standard IO functions in case of an error. Since the AVR platform (currently) doesn't contain an abstraction for actual files, its origin as "end of file" is somewhat meaningless here.

22.9.2.7 `#define fdev_close()`

This macro frees up any library resources that might be associated with `stream`. It should be called if `stream` is no longer needed, right before the application is going to destroy the `stream` object itself.

(Currently, this macro evaluates to nothing, but this might change in future versions of the library.)

22.9.2.8 `#define fdev_get_udata(stream) ((stream)->udata)`

This macro retrieves a pointer to user defined data from a FILE stream object.

22.9.2.9 `#define fdev_set_udata(stream, u) do { (stream)->udata = u; } while(0)`

This macro inserts a pointer to user defined data into a FILE stream object.

The user data can be useful for tracking state in the put and get functions supplied to the [fdevopen\(\)](#) function.

22.9.2.10 `#define fdev_setup_stream(stream, put, get, rwflag)`

Setup a user-supplied buffer as an stdio stream.

This macro takes a user-supplied buffer `stream`, and sets it up as a stream that is valid for stdio operations, similar to one that has been obtained dynamically from [fdevopen\(\)](#). The buffer to setup must be of type FILE.

The arguments `put` and `get` are identical to those that need to be passed to [fdevopen\(\)](#).

The `rwflag` argument can take one of the values `_FDEV_SETUP_READ`, `_FDEV_SETUP_WRITE`, or `_FDEV_SETUP_RW`, for read, write, or read/write intent, respectively.

Note

No assignments to the standard streams will be performed by [fdev_setup_stream\(\)](#). If standard streams are to be used, these need to be assigned by the user. See also under [Running stdio without malloc\(\)](#).

22.9.2.11 `#define FDEV_SETUP_STREAM(put, get, rwflag)`

Initializer for a user-supplied stdio stream.

This macro acts similar to [fdev_setup_stream\(\)](#), but it is to be used as the initializer of a variable of type FILE.

The remaining arguments are to be used as explained in [fdev_setup_stream\(\)](#).

22.9.2.12 `#define FILE struct _file`

FILE is the opaque structure that is passed around between the various standard IO functions.

22.9.2.13 `#define getc(__stream) fgetc(__stream)`

The macro `getc` used to be a "fast" macro implementation with a functionality identical to [fgetc\(\)](#). For space constraints, in `avr-libc`, it is just an alias for [fgetc\(\)](#).

22.9.2.14 `#define getchar(void) fgetc(stdin)`

The macro `getchar` reads a character from `stdin`. Return values and error handling is identical to [fgetc\(\)](#).

22.9.2.15 `#define putc(__c, __stream) fputc(__c, __stream)`

The macro `putc` used to be a "fast" macro implementation with a functionality identical to `fputc()`. For space constraints, in `avr-libc`, it is just an alias for `fputc`.

22.9.2.16 `#define putchar(__c) fputc(__c, stdout)`

The macro `putchar` sends character `c` to `stdout`.

22.9.2.17 `#define stderr (__iob[2])`

Stream destined for error output. Unless specifically assigned, identical to `stdout`.

If `stderr` should point to another stream, the result of another `fdevopen()` must be explicitly assigned to it without closing the previous `stderr` (since this would also close `stdout`).

22.9.2.18 `#define stdin (__iob[0])`

Stream that will be used as an input stream by the simplified functions that don't take a `stream` argument.

The first stream opened with read intent using `fdevopen()` will be assigned to `stdin`.

22.9.2.19 `#define stdout (__iob[1])`

Stream that will be used as an output stream by the simplified functions that don't take a `stream` argument.

The first stream opened with write intent using `fdevopen()` will be assigned to both, `stdin`, and `stderr`.

22.9.3 Function Documentation**22.9.3.1** `void clearerr (FILE * __stream)`

Clear the error and end-of-file flags of `stream`.

22.9.3.2 `int fclose (FILE * __stream)`

This function closes `stream`, and disallows and further IO to and from it.

When using `fdevopen()` to setup the stream, a call to `fclose()` is needed in order to free the internal resources allocated.

If the stream has been set up using `fdev_setup_stream()` or `FDEV_SETUP_STREAM()`, use `fdev_close()` instead.

It currently always returns 0 (for success).

22.9.3.3 `FILE* fdevopen (int(*)(char, FILE *) put, int(*)(FILE *) get)`

This function is a replacement for `fopen()`.

It opens a stream for a device where the actual device implementation needs to be provided by the application. If successful, a pointer to the structure for the opened stream is returned. Reasons for a possible failure currently include that neither the `put` nor the `get` argument have been provided, thus attempting to open a stream with no IO intent at all, or that insufficient dynamic memory is available to establish a new stream.

If the `put` function pointer is provided, the stream is opened with write intent. The function passed as `put` shall take two arguments, the first a character to write to the device, and the second a pointer to `FILE`, and shall return 0 if the output was successful, and a nonzero value if the character could not be sent to the device.

If the `get` function pointer is provided, the stream is opened with read intent. The function passed as `get` shall take a pointer to `FILE` as its single argument, and return one character from the device, passed as an `int` type. If an error occurs when trying to read from the device, it shall return `_FDEV_ERR`. If an end-of-file condition was reached while

reading from the device, `_FDEV_EOF` shall be returned.

If both functions are provided, the stream is opened with read and write intent.

The first stream opened with read intent is assigned to `stdin`, and the first one opened with write intent is assigned to both, `stdout` and `stderr`.

`fdevopen()` uses `calloc()` (and thus `malloc()`) in order to allocate the storage for the new stream.

Note

If the macro `__STDIO_FDEVOPEN_COMPAT_12` is declared before including `<stdio.h>`, a function prototype for `fdevopen()` will be chosen that is backwards compatible with `avr-libc` version 1.2 and before. This is solely intended for providing a simple migration path without the need to immediately change all source code. Do not use for new code.

22.9.3.4 `int feof (FILE * __stream)`

Test the end-of-file flag of `stream`. This flag can only be cleared by a call to `clearerr()`.

22.9.3.5 `int ferror (FILE * __stream)`

Test the error flag of `stream`. This flag can only be cleared by a call to `clearerr()`.

22.9.3.6 `int fflush (FILE * stream)`

Flush `stream`.

This is a null operation provided for source-code compatibility only, as the standard IO implementation currently does not perform any buffering.

22.9.3.7 `int fgetc (FILE * __stream)`

The function `fgetc` reads a character from `stream`. It returns the character, or `EOF` in case end-of-file was encountered or an error occurred. The routines `feof()` or `ferror()` must be used to distinguish between both situations.

22.9.3.8 `char* fgets (char * __str, int __size, FILE * __stream)`

Read at most `size - 1` bytes from `stream`, until a newline character was encountered, and store the characters in the buffer pointed to by `str`. Unless an error was encountered while reading, the string will then be terminated with a NUL character.

If an error was encountered, the function returns `NULL` and sets the error flag of `stream`, which can be tested using `ferror()`. Otherwise, a pointer to the string will be returned.

22.9.3.9 `int fprintf (FILE * __stream, const char * __fmt, ...)`

The function `fprintf` performs formatted output to `stream`. See `vfprintf()` for details.

22.9.3.10 `int fprintf_P (FILE * __stream, const char * __fmt, ...)`

Variant of `fprintf()` that uses a `fmt` string that resides in program memory.

22.9.3.11 `int fputc (int __c, FILE * __stream)`

The function `fputc` sends the character `c` (though given as type `int`) to `stream`. It returns the character, or `EOF` in case an error occurred.

22.9.3.12 `int fputs (const char * __str, FILE * __stream)`

Write the string pointed to by `str` to stream `stream`.

Returns 0 on success and EOF on error.

22.9.3.13 `int fputs_P (const char * __str, FILE * __stream)`

Variant of `fputs()` where `str` resides in program memory.

22.9.3.14 `size_t fread (void * __ptr, size_t __size, size_t __nmemb, FILE * __stream)`

Read `nmemb` objects, `size` bytes each, from `stream`, to the buffer pointed to by `ptr`.

Returns the number of objects successfully read, i. e. `nmemb` unless an input error occurred or end-of-file was encountered. `feof()` and `ferror()` must be used to distinguish between these two conditions.

22.9.3.15 `int fscanf (FILE * __stream, const char * __fmt, ...)`

The function `fscanf` performs formatted input, reading the input data from `stream`.

See `vfscanf()` for details.

22.9.3.16 `int fscanf_P (FILE * __stream, const char * __fmt, ...)`

Variant of `fscanf()` using a `fmt` string in program memory.

22.9.3.17 `size_t fwrite (const void * __ptr, size_t __size, size_t __nmemb, FILE * __stream)`

Write `nmemb` objects, `size` bytes each, to `stream`. The first byte of the first object is referenced by `ptr`.

Returns the number of objects successfully written, i. e. `nmemb` unless an output error occurred.

22.9.3.18 `char* gets (char * __str)`

Similar to `fgets()` except that it will operate on stream `stdin`, and the trailing newline (if any) will not be stored in the string. It is the caller's responsibility to provide enough storage to hold the characters read.

22.9.3.19 `int printf (const char * __fmt, ...)`

The function `printf` performs formatted output to stream `stdout`. See `vfprintf()` for details.

22.9.3.20 `int printf_P (const char * __fmt, ...)`

Variant of `printf()` that uses a `fmt` string that resides in program memory.

22.9.3.21 `int puts (const char * __str)`

Write the string pointed to by `str`, and a trailing newline character, to `stdout`.

22.9.3.22 `int puts_P (const char * __str)`

Variant of `puts()` where `str` resides in program memory.

22.9.3.23 `int scanf (const char * __fmt, ...)`

The function `scanf` performs formatted input from stream `stdin`.

See `vfscanf()` for details.

22.9.3.24 `int scanf_P (const char * __fmt, ...)`

Variant of `scanf()` where `fmt` resides in program memory.

22.9.3.25 `int snprintf (char * __s, size_t __n, const char * __fmt, ...)`

Like `sprintf()`, but instead of assuming `s` to be of infinite size, no more than `n` characters (including the trailing NUL character) will be converted to `s`.

Returns the number of characters that would have been written to `s` if there were enough space.

22.9.3.26 `int snprintf_P (char * __s, size_t __n, const char * __fmt, ...)`

Variant of `snprintf()` that uses a `fmt` string that resides in program memory.

22.9.3.27 `int sprintf (char * __s, const char * __fmt, ...)`

Variant of `printf()` that sends the formatted characters to string `s`.

22.9.3.28 `int sprintf_P (char * __s, const char * __fmt, ...)`

Variant of `sprintf()` that uses a `fmt` string that resides in program memory.

22.9.3.29 `int sscanf (const char * __buf, const char * __fmt, ...)`

The function `sscanf` performs formatted input, reading the input data from the buffer pointed to by `buf`.

See `vfscanf()` for details.

22.9.3.30 `int sscanf_P (const char * __buf, const char * __fmt, ...)`

Variant of `sscanf()` using a `fmt` string in program memory.

22.9.3.31 `int ungetc (int __c, FILE * __stream)`

The `ungetc()` function pushes the character `c` (converted to an unsigned char) back onto the input stream pointed to by `stream`. The pushed-back character will be returned by a subsequent read on the stream.

Currently, only a single character can be pushed back onto the stream.

The `ungetc()` function returns the character pushed back after the conversion, or `EOF` if the operation fails. If the value of the argument `c` character equals `EOF`, the operation will fail and the stream will remain unchanged.

22.9.3.32 `int vfprintf (FILE * __stream, const char * __fmt, va_list __ap)`

`vfprintf` is the central facility of the `printf` family of functions. It outputs values to `stream` under control of a format string passed in `fmt`. The actual values to print are passed as a variable argument list `ap`.

`vfprintf` returns the number of characters written to `stream`, or `EOF` in case of an error. Currently, this will only happen if `stream` has not been opened with write intent.

The format string is composed of zero or more directives: ordinary characters (not `%`), which are copied unchanged to the output stream; and conversion specifications, each of which results in fetching zero or more subsequent arguments. Each conversion specification is introduced by the `%` character. The arguments must properly correspond (after type promotion) with the conversion specifier. After the `%`, the following appear in sequence:

- Zero or more of the following flags:
 - `#` The value should be converted to an "alternate form". For `c`, `d`, `i`, `s`, and `u` conversions, this option has no effect. For `o` conversions, the precision of the number is increased to force the first character of the output

string to a zero (except if a zero value is printed with an explicit precision of zero). For `x` and `X` conversions, a non-zero result has the string `'0x'` (or `'0X'` for `X` conversions) prepended to it.

- 0 (zero) Zero padding. For all conversions, the converted value is padded on the left with zeros rather than blanks. If a precision is given with a numeric conversion (`d`, `i`, `o`, `u`, `i`, `x`, and `X`), the 0 flag is ignored.
 - - A negative field width flag; the converted value is to be left adjusted on the field boundary. The converted value is padded on the right with blanks, rather than on the left with blanks or zeros. A - overrides a 0 if both are given.
 - ' ' (space) A blank should be left before a positive number produced by a signed conversion (`d`, or `i`).
 - + A sign must always be placed before a number produced by a signed conversion. A + overrides a space if both are used.
- An optional decimal digit string specifying a minimum field width. If the converted value has fewer characters than the field width, it will be padded with spaces on the left (or right, if the left-adjustment flag has been given) to fill out the field width.
 - An optional precision, in the form of a period . followed by an optional digit string. If the digit string is omitted, the precision is taken as zero. This gives the minimum number of digits to appear for `d`, `i`, `o`, `u`, `x`, and `X` conversions, or the maximum number of characters to be printed from a string for `s` conversions.
 - An optional `l` or `h` length modifier, that specifies that the argument for the `d`, `i`, `o`, `u`, `x`, or `X` conversion is a `"long int"` rather than `int`. The `h` is ignored, as `"short int"` is equivalent to `int`.
 - A character that specifies the type of conversion to be applied.

The conversion specifiers and their meanings are:

- `dioouxX` The `int` (or appropriate variant) argument is converted to signed decimal (`d` and `i`), unsigned octal (`o`), unsigned decimal (`u`), or unsigned hexadecimal (`x` and `X`) notation. The letters `"abcdef"` are used for `x` conversions; the letters `"ABCDEF"` are used for `X` conversions. The precision, if any, gives the minimum number of digits that must appear; if the converted value requires fewer digits, it is padded on the left with zeros.
- `p` The `void *` argument is taken as an unsigned integer, and converted similarly as a `%#x` command would do.
- `c` The `int` argument is converted to an `"unsigned char"`, and the resulting character is written.
- `s` The `"char *"` argument is expected to be a pointer to an array of character type (pointer to a string). Characters from the array are written up to (but not including) a terminating NUL character; if a precision is specified, no more than the number specified are written. If a precision is given, no null character need be present; if the precision is not specified, or is greater than the size of the array, the array must contain a terminating NUL character.
- `%` A `%` is written. No argument is converted. The complete conversion specification is `"%%"`.
- `eE` The double argument is rounded and converted in the format `"[-]d.ddde±dd"` where there is one digit before the decimal-point character and the number of digits after it is equal to the precision; if the precision is missing, it is taken as 6; if the precision is zero, no decimal-point character appears. An `E` conversion uses the letter `'E'` (rather than `'e'`) to introduce the exponent. The exponent always contains two digits; if the value is zero, the exponent is 00.
- `fF` The double argument is rounded and converted to decimal notation in the format `"[-]ddd.ddd"`, where the number of digits after the decimal-point character is equal to the precision specification. If the precision is missing, it is taken as 6; if the precision is explicitly zero, no decimal-point character appears. If a decimal point appears, at least one digit appears before it.

- **gG** The double argument is converted in style **f** or **e** (or **F** or **E** for **G** conversions). The precision specifies the number of significant digits. If the precision is missing, 6 digits are given; if the precision is zero, it is treated as 1. Style **e** is used if the exponent from its conversion is less than -4 or greater than or equal to the precision. Trailing zeros are removed from the fractional part of the result; a decimal point appears only if it is followed by at least one digit.
- **S** Similar to the **s** format, except the pointer is expected to point to a program-memory (ROM) string instead of a RAM string.

In no case does a non-existent or small field width cause truncation of a numeric field; if the result of a conversion is wider than the field width, the field is expanded to contain the conversion result.

Since the full implementation of all the mentioned features becomes fairly large, three different flavours of `vfprintf()` can be selected using linker options. The default `vfprintf()` implements all the mentioned functionality except floating point conversions. A minimized version of `vfprintf()` is available that only implements the very basic integer and string conversion facilities, but only the **#** additional option can be specified using conversion flags (these flags are parsed correctly from the format specification, but then simply ignored). This version can be requested using the following compiler options:

```
-Wl,-u,vfprintf -lprintf_min
```

If the full functionality including the floating point conversions is required, the following options should be used:

```
-Wl,-u,vfprintf -lprintf_flt -lm
```

Limitations:

- The specified width and precision can be at most 255.

Notes:

- For floating-point conversions, if you link default or minimized version of `vfprintf()`, the symbol `?` will be output and double argument will be skipped. So you output below will not be crashed. For default version the width field and the "pad to left" (symbol minus) option will work in this case.
- The **hh** length modifier is ignored (`char` argument is promoted to `int`). More exactly, this realization does not check the number of **h** symbols.
- But the **ll** length modifier will abort the output, as this realization does not operate `long long` arguments.
- The variable width or precision field (an asterisk `*` symbol) is not realized and will abort the output.

22.9.3.33 `int vfprintf_P (FILE * __stream, const char * __fmt, va_list __ap)`

Variant of `vfprintf()` that uses a `fmt` string that resides in program memory.

22.9.3.34 `int vfscanf (FILE * stream, const char * fmt, va_list ap)`

Formatted input. This function is the heart of the **scanf** family of functions.

Characters are read from `stream` and processed in a way described by `fmt`. Conversion results will be assigned to the parameters passed via `ap`.

The format string `fmt` is scanned for conversion specifications. Anything that doesn't comprise a conversion specification is taken as text that is matched literally against the input. White space in the format string will match any white space in the data (including none), all other characters match only itself. Processing is aborted as soon as the data and format string no longer match, or there is an error or end-of-file condition on `stream`.

Most conversions skip leading white space before starting the actual conversion.

Conversions are introduced with the character `%`. Possible options can follow the `%`:

- a `*` indicating that the conversion should be performed but the conversion result is to be discarded; no parameters will be processed from `ap`,
- the character `h` indicating that the argument is a pointer to `short int` (rather than `int`),
- the 2 characters `hh` indicating that the argument is a pointer to `char` (rather than `int`).
- the character `l` indicating that the argument is a pointer to `long int` (rather than `int`, for integer type conversions), or a pointer to `double` (for floating point conversions),

In addition, a maximal field width may be specified as a nonzero positive decimal integer, which will restrict the conversion to at most this many characters from the input stream. This field width is limited to at most 255 characters which is also the default value (except for the `c` conversion that defaults to 1).

The following conversion flags are supported:

- `%` Matches a literal `%` character. This is not a conversion.
- `d` Matches an optionally signed decimal integer; the next pointer must be a pointer to `int`.
- `i` Matches an optionally signed integer; the next pointer must be a pointer to `int`. The integer is read in base 16 if it begins with `0x` or `0X`, in base 8 if it begins with `0`, and in base 10 otherwise. Only characters that correspond to the base are used.
- `o` Matches an octal integer; the next pointer must be a pointer to `unsigned int`.
- `u` Matches an optionally signed decimal integer; the next pointer must be a pointer to `unsigned int`.
- `x` Matches an optionally signed hexadecimal integer; the next pointer must be a pointer to `unsigned int`.
- `f` Matches an optionally signed floating-point number; the next pointer must be a pointer to `float`.
- `e`, `g`, `F`, `E`, `G` Equivalent to `f`.
- `s` Matches a sequence of non-white-space characters; the next pointer must be a pointer to `char`, and the array must be large enough to accept all the sequence and the terminating NUL character. The input string stops at white space or at the maximum field width, whichever occurs first.
- `c` Matches a sequence of width count characters (default 1); the next pointer must be a pointer to `char`, and there must be enough room for all the characters (no terminating NUL is added). The usual skip of leading white space is suppressed. To skip white space first, use an explicit space in the format.
- `[` Matches a nonempty sequence of characters from the specified set of accepted characters; the next pointer must be a pointer to `char`, and there must be enough room for all the characters in the string, plus a terminating NUL character. The usual skip of leading white space is suppressed. The string is to be made up of characters in (or not in) a particular set; the set is defined by the characters between the open bracket `[` character and a close bracket `]` character. The set excludes those characters if the first character after the open bracket is a circumflex `^`. To include a close bracket in the set, make it the first character after the open bracket or the circumflex; any other position will end the set. The hyphen character `-` is also special; when placed between two other characters, it adds all intervening characters to the set. To include a hyphen, make it the last character before the final close bracket. For instance, `[^]0-9-]` means the set of *everything except close bracket, zero through nine, and hyphen*. The string ends with the appearance of a character not in the (or, with a circumflex, in) set or when the field width runs out. Note that usage of this conversion enlarges the stack expense.
- `p` Matches a pointer value (as printed by `p` in `printf()`); the next pointer must be a pointer to `void`.
- `n` Nothing is expected; instead, the number of characters consumed thus far from the input is stored through the next pointer, which must be a pointer to `int`. This is not a conversion, although it can be suppressed with the `*` flag.

These functions return the number of input items assigned, which can be fewer than provided for, or even zero, in the event of a matching failure. Zero indicates that, while there was input available, no conversions were assigned; typically this is due to an invalid input character, such as an alphabetic character for a `d` conversion. The value `EOF` is returned if an input failure occurs before any conversion such as an end-of-file occurs. If an error or end-of-file occurs after conversion has begun, the number of conversions which were successfully completed is returned.

By default, all the conversions described above are available except the floating-point conversions and the width is limited to 255 characters. The float-point conversion will be available in the extended version provided by the library `libscanf_flt.a`. Also in this case the width is not limited (exactly, it is limited to 65535 characters). To link a program against the extended version, use the following compiler flags in the link stage:

```
-Wl,-u,vfscanf -lscanf_flt -lm
```

A third version is available for environments that are tight on space. In addition to the restrictions of the standard one, this version implements no `%[` specification. This version is provided in the library `libscanf_min.a`, and can be requested using the following options in the link stage:

```
-Wl,-u,vfscanf -lscanf_min -lm
```

22.9.3.35 `int vfscanf_P (FILE * __stream, const char * __fmt, va_list __ap)`

Variant of `vfscanf()` using a `fmt` string in program memory.

22.9.3.36 `int vprintf (const char * __fmt, va_list __ap)`

The function `vprintf` performs formatted output to stream `stdout`, taking a variable argument list as in `fprintf()`.

See `fprintf()` for details.

22.9.3.37 `int vscanf (const char * __fmt, va_list __ap)`

The function `vscanf` performs formatted input from stream `stdin`, taking a variable argument list as in `vfscanf()`.

See `vfscanf()` for details.

22.9.3.38 `int vsnprintf (char * __s, size_t __n, const char * __fmt, va_list ap)`

Like `vsprintf()`, but instead of assuming `s` to be of infinite size, no more than `n` characters (including the trailing NUL character) will be converted to `s`.

Returns the number of characters that would have been written to `s` if there were enough space.

22.9.3.39 `int vsnprintf_P (char * __s, size_t __n, const char * __fmt, va_list ap)`

Variant of `vsnprintf()` that uses a `fmt` string that resides in program memory.

22.9.3.40 `int vsprintf (char * __s, const char * __fmt, va_list ap)`

Like `sprintf()` but takes a variable argument list for the arguments.

22.9.3.41 `int vsprintf_P (char * __s, const char * __fmt, va_list ap)`

Variant of `vsprintf()` that uses a `fmt` string that resides in program memory.

22.10 <stdlib.h>: General utilities

Data Structures

- struct [div_t](#)
- struct [ldiv_t](#)

Macros

- #define [RAND_MAX](#) 0x7FFF

Typedefs

- typedef int(* [__compar_fn_t](#))(const void *, const void *)

Functions

- void [abort](#) (void) [__ATTR_NORETURN__](#)
- int [abs](#) (int __i)
- long [labs](#) (long __i)
- void * [bsearch](#) (const void *__key, const void *__base, size_t __nmemb, size_t __size, int(*__compar)(const void *, const void *))
- [div_t](#) [div](#) (int __num, int __denom) [__asm__](#)("__divmodhi4")
- [ldiv_t](#) [ldiv](#) (long __num, long __denom) [__asm__](#)("__divmodsi4")
- void [qsort](#) (void *__base, size_t __nmemb, size_t __size, [__compar_fn_t](#) __compar)
- long [strtol](#) (const char *__nptr, char **__endptr, int __base)
- unsigned long [strtoul](#) (const char *__nptr, char **__endptr, int __base)
- long [atol](#) (const char *__s) [__ATTR_PURE__](#)
- int [atoi](#) (const char *__s) [__ATTR_PURE__](#)
- void [exit](#) (int __status) [__ATTR_NORETURN__](#)
- void * [malloc](#) (size_t __size) [__ATTR_MALLOC__](#)
- void [free](#) (void *__ptr)
- void * [calloc](#) (size_t __nele, size_t __size) [__ATTR_MALLOC__](#)
- void * [realloc](#) (void *__ptr, size_t __size) [__ATTR_MALLOC__](#)
- double [strtod](#) (const char *__nptr, char **__endptr)
- double [atof](#) (const char *__nptr)
- int [rand](#) (void)
- void [srand](#) (unsigned int __seed)
- int [rand_r](#) (unsigned long *__ctx)

Variables

- size_t [__malloc_margin](#)
- char * [__malloc_heap_start](#)
- char * [__malloc_heap_end](#)

Non-standard (i.e. non-ISO C) functions.

- char * [ltoa](#) (long int __val, char *__s, int __radix)
- char * [utoa](#) (unsigned int __val, char *__s, int __radix)
- char * [ultoa](#) (unsigned long int __val, char *__s, int __radix)
- long [random](#) (void)
- void [srandom](#) (unsigned long __seed)
- long [random_r](#) (unsigned long *__ctx)
- char * [itoa](#) (int __val, char *__s, int __radix)
- #define [RANDOM_MAX](#) 0x7FFFFFFF

Conversion functions for double arguments.

Note that these functions are not located in the default library, `libc.a`, but in the mathematical library, `libm.a`. So when linking the application, the `-lm` option needs to be specified.

- char * [dtostre](#) (double __val, char *__s, unsigned char __prec, unsigned char __flags)
- char * [dtoa](#) (double __val, signed char __width, unsigned char __prec, char *__s)
- #define [DTOSTR_ALWAYS_SIGN](#) 0x01 /* put '+' or '-' for positives */
- #define [DTOSTR_PLUS_SIGN](#) 0x02 /* put '+' rather than '-' */
- #define [DTOSTR_UPPERCASE](#) 0x04 /* put 'E' rather than 'e' */

22.10.1 Detailed Description

```
#include <stdlib.h>
```

This file declares some basic C macros and functions as defined by the ISO standard, plus some AVR-specific extensions.

22.10.2 Macro Definition Documentation

22.10.2.1 #define DTOSTR_ALWAYS_SIGN 0x01 /* put '+' or '-' for positives */

Bit value that can be passed in `flags` to [dtostre\(\)](#).

22.10.2.2 #define DTOSTR_PLUS_SIGN 0x02 /* put '+' rather than '-' */

Bit value that can be passed in `flags` to [dtostre\(\)](#).

22.10.2.3 #define DTOSTR_UPPERCASE 0x04 /* put 'E' rather than 'e' */

Bit value that can be passed in `flags` to [dtostre\(\)](#).

22.10.2.4 #define RAND_MAX 0x7FFF

Highest number that can be generated by [rand\(\)](#).

22.10.2.5 #define RANDOM_MAX 0x7FFFFFFF

Highest number that can be generated by [random\(\)](#).

22.10.3 Typedef Documentation

22.10.3.1 typedef int(* __compar_fn_t)(const void *, const void *)

Comparison function type for `qsort()`, just for convenience.

22.10.4 Function Documentation

22.10.4.1 void abort (void)

The `abort()` function causes abnormal program termination to occur. This realization disables interrupts and jumps to `_exit()` function with argument equal to 1. In the limited AVR environment, execution is effectively halted by entering an infinite loop.

22.10.4.2 int abs (int *i*)

The `abs()` function computes the absolute value of the integer *i*.

Note

The `abs()` and `labs()` functions are builtins of gcc.

22.10.4.3 double atof (const char * *nptr*)

The `atof()` function converts the initial portion of the string pointed to by *nptr* to double representation.

It is equivalent to calling

```
strtod(nptr, (char **)0);
```

22.10.4.4 int atoi (const char * *s*)

Convert a string to an integer.

The `atoi()` function converts the initial portion of the string pointed to by *s* to integer representation. In contrast to

```
(int)strtoul(s, (char **)NULL, 10);
```

this function does not detect overflow (`errno` is not changed and the result value is not predictable), uses smaller memory (flash and stack) and works more quickly.

22.10.4.5 long atol (const char * *s*)

Convert a string to a long integer.

The `atol()` function converts the initial portion of the string pointed to by *s* to long integer representation. In contrast to

```
strtoul(s, (char **)NULL, 10);
```

this function does not detect overflow (`errno` is not changed and the result value is not predictable), uses smaller memory (flash and stack) and works more quickly.

22.10.4.6 void* bsearch (const void * __key, const void * __base, size_t __nmem, size_t __size, int(*)(const void *, const void *) __compar)

The `bsearch()` function searches an array of *nmem* objects, the initial member of which is pointed to by *base*, for a member that matches the object pointed to by *key*. The size of each member of the array is specified by *size*.

The contents of the array should be in ascending sorted order according to the comparison function referenced by `compar`. The `compar` routine is expected to have two arguments which point to the key object and to an array member, in that order, and should return an integer less than, equal to, or greater than zero if the key object is found, respectively, to be less than, to match, or be greater than the array member.

The `bsearch()` function returns a pointer to a matching member of the array, or a null pointer if no match is found. If two members compare as equal, which member is matched is unspecified.

22.10.4.7 `void* calloc (size_t __nele, size_t __size)`

Allocate `nele` elements of `size` each. Identical to calling `malloc()` using `nele * size` as argument, except the allocated memory will be cleared to zero.

22.10.4.8 `div_t div (int __num, int __denom)`

The `div()` function computes the value `num/denom` and returns the quotient and remainder in a structure named `div_t` that contains two `int` members named `quot` and `rem`.

22.10.4.9 `char* dtostre (double __val, char * __s, unsigned char __prec, unsigned char __flags)`

The `dtostre()` function converts the double value passed in `val` into an ASCII representation that will be stored under `s`. The caller is responsible for providing sufficient storage in `s`.

Conversion is done in the format "`[-]d.ddde±dd`" where there is one digit before the decimal-point character and the number of digits after it is equal to the precision `prec`; if the precision is zero, no decimal-point character appears. If `flags` has the `DTOSTRE_UPPERCASE` bit set, the letter '`E`' (rather than '`e`') will be used to introduce the exponent. The exponent always contains two digits; if the value is zero, the exponent is "`00`".

If `flags` has the `DTOSTRE_ALWAYS_SIGN` bit set, a space character will be placed into the leading position for positive numbers.

If `flags` has the `DTOSTRE_PLUS_SIGN` bit set, a plus sign will be used instead of a space character in this case.

The `dtostre()` function returns the pointer to the converted string `s`.

22.10.4.10 `char* dtostrf (double __val, signed char __width, unsigned char __prec, char * __s)`

The `dtostrf()` function converts the double value passed in `val` into an ASCII representation that will be stored under `s`. The caller is responsible for providing sufficient storage in `s`.

Conversion is done in the format "`[-]d.ddd`". The minimum field width of the output string (including the '`.`' and the possible sign for negative values) is given in `width`, and `prec` determines the number of digits after the decimal sign. `width` is signed value, negative for left adjustment.

The `dtostrf()` function returns the pointer to the converted string `s`.

22.10.4.11 `void exit (int __status)`

The `exit()` function terminates the application. Since there is no environment to return to, `status` is ignored, and code execution will eventually reach an infinite loop, thereby effectively halting all code processing. Before entering the infinite loop, interrupts are globally disabled.

In a C++ context, global destructors will be called before halting execution.

22.10.4.12 `void free (void * __ptr)`

The `free()` function causes the allocated memory referenced by `ptr` to be made available for future allocations. If `ptr` is `NULL`, no action occurs.

22.10.4.13 `char* itoa (int __val, char * __s, int __radix)`

Convert an integer to a string.

The function `itoa()` converts the integer value from `val` into an ASCII representation that will be stored under `s`. The caller is responsible for providing sufficient storage in `s`.

Note

The minimal size of the buffer `s` depends on the choice of `radix`. For example, if the `radix` is 2 (binary), you need to supply a buffer with a minimal length of $8 * \text{sizeof}(\text{int}) + 1$ characters, i.e. one character for each bit plus one for the string terminator. Using a larger `radix` will require a smaller minimal buffer size.

Warning

If the buffer is too small, you risk a buffer overflow.

Conversion is done using the `radix` as base, which may be a number between 2 (binary conversion) and up to 36. If `radix` is greater than 10, the next digit after '9' will be the letter 'a'.

If `radix` is 10 and `val` is negative, a minus sign will be prepended.

The `itoa()` function returns the pointer passed as `s`.

22.10.4.14 `long labs (long __i)`

The `labs()` function computes the absolute value of the long integer `i`.

Note

The `abs()` and `labs()` functions are builtins of gcc.

22.10.4.15 `ldiv_t ldiv (long __num, long __denom)`

The `ldiv()` function computes the value `num/denom` and returns the quotient and remainder in a structure named `ldiv_t` that contains two long integer members named `quot` and `rem`.

22.10.4.16 `char* ltoa (long int __val, char * __s, int __radix)`

Convert a long integer to a string.

The function `ltoa()` converts the long integer value from `val` into an ASCII representation that will be stored under `s`. The caller is responsible for providing sufficient storage in `s`.

Note

The minimal size of the buffer `s` depends on the choice of `radix`. For example, if the `radix` is 2 (binary), you need to supply a buffer with a minimal length of $8 * \text{sizeof}(\text{long int}) + 1$ characters, i.e. one character for each bit plus one for the string terminator. Using a larger `radix` will require a smaller minimal buffer size.

Warning

If the buffer is too small, you risk a buffer overflow.

Conversion is done using the `radix` as base, which may be a number between 2 (binary conversion) and up to 36. If `radix` is greater than 10, the next digit after '9' will be the letter 'a'.

If `radix` is 10 and `val` is negative, a minus sign will be prepended.

The `ltoa()` function returns the pointer passed as `s`.

22.10.4.17 void* malloc (size_t __size)

The `malloc()` function allocates `size` bytes of memory. If `malloc()` fails, a NULL pointer is returned.

Note that `malloc()` does *not* initialize the returned memory to zero bytes.

See the chapter about [malloc\(\) usage](#) for implementation details.

22.10.4.18 void qsort (void * __base, size_t __nmemb, size_t __size, __compar_fn_t __compar)

The `qsort()` function is a modified partition-exchange sort, or quicksort.

The `qsort()` function sorts an array of `nmemb` objects, the initial member of which is pointed to by `base`. The size of each object is specified by `size`. The contents of the array `base` are sorted in ascending order according to a comparison function pointed to by `compar`, which requires two arguments pointing to the objects being compared.

The comparison function must return an integer less than, equal to, or greater than zero if the first argument is considered to be respectively less than, equal to, or greater than the second.

22.10.4.19 int rand (void)

The `rand()` function computes a sequence of pseudo-random integers in the range of 0 to `RAND_MAX` (as defined by the header file `<stdlib.h>`).

The `srand()` function sets its argument `seed` as the seed for a new sequence of pseudo-random numbers to be returned by `rand()`. These sequences are repeatable by calling `srand()` with the same seed value.

If no seed value is provided, the functions are automatically seeded with a value of 1.

In compliance with the C standard, these functions operate on `int` arguments. Since the underlying algorithm already uses 32-bit calculations, this causes a loss of precision. See [random\(\)](#) for an alternate set of functions that retains full 32-bit precision.

22.10.4.20 int rand_r (unsigned long * __ctx)

Variant of `rand()` that stores the context in the user-supplied variable located at `ctx` instead of a static library variable so the function becomes re-entrant.

22.10.4.21 long random (void)

The `random()` function computes a sequence of pseudo-random integers in the range of 0 to `RANDOM_MAX` (as defined by the header file `<stdlib.h>`).

The `srandom()` function sets its argument `seed` as the seed for a new sequence of pseudo-random numbers to be returned by `rand()`. These sequences are repeatable by calling `srandom()` with the same seed value.

If no seed value is provided, the functions are automatically seeded with a value of 1.

22.10.4.22 long random_r (unsigned long * __ctx)

Variant of `random()` that stores the context in the user-supplied variable located at `ctx` instead of a static library variable so the function becomes re-entrant.

22.10.4.23 void* realloc (void * __ptr, size_t __size)

The `realloc()` function tries to change the size of the region allocated at `ptr` to the new `size` value. It returns a pointer to the new region. The returned pointer might be the same as the old pointer, or a pointer to a completely different region.

The contents of the returned region up to either the old or the new size value (whatever is less) will be identical to the contents of the old region, even in case a new region had to be allocated.

It is acceptable to pass `ptr` as `NULL`, in which case `realloc()` will behave identical to `malloc()`.

If the new memory cannot be allocated, `realloc()` returns `NULL`, and the region at `ptr` will not be changed.

22.10.4.24 `void srand (unsigned int __seed)`

Pseudo-random number generator seeding; see `rand()`.

22.10.4.25 `void srandom (unsigned long __seed)`

Pseudo-random number generator seeding; see `random()`.

22.10.4.26 `double strtod (const char * nptr, char ** endptr)`

The `strtod()` function converts the initial portion of the string pointed to by `nptr` to double representation.

The expected form of the string is an optional plus ('+') or minus sign ('-') followed by a sequence of digits optionally containing a decimal-point character, optionally followed by an exponent. An exponent consists of an 'E' or 'e', followed by an optional plus or minus sign, followed by a sequence of digits.

Leading white-space characters in the string are skipped.

The `strtod()` function returns the converted value, if any.

If `endptr` is not `NULL`, a pointer to the character after the last character used in the conversion is stored in the location referenced by `endptr`.

If no conversion is performed, zero is returned and the value of `nptr` is stored in the location referenced by `endptr`.

If the correct value would cause overflow, plus or minus `INFINITY` is returned (according to the sign of the value), and `ERANGE` is stored in `errno`. If the correct value would cause underflow, zero is returned and `ERANGE` is stored in `errno`.

22.10.4.27 `long strtol (const char * __nptr, char ** __endptr, int __base)`

The `strtol()` function converts the string in `nptr` to a long value. The conversion is done according to the given base, which must be between 2 and 36 inclusive, or be the special value 0.

The string may begin with an arbitrary amount of white space (as determined by `isspace()`) followed by a single optional '+' or '-' sign. If `base` is zero or 16, the string may then include a "0x" prefix, and the number will be read in base 16; otherwise, a zero base is taken as 10 (decimal) unless the next character is '0', in which case it is taken as 8 (octal).

The remainder of the string is converted to a long value in the obvious manner, stopping at the first character which is not a valid digit in the given base. (In bases above 10, the letter 'A' in either upper or lower case represents 10, 'B' represents 11, and so forth, with 'Z' representing 35.)

If `endptr` is not `NULL`, `strtol()` stores the address of the first invalid character in `*endptr`. If there were no digits at all, however, `strtol()` stores the original value of `nptr` in `*endptr`. (Thus, if `*nptr` is not '\0' but `**endptr` is '\0' on return, the entire string was valid.)

The `strtol()` function returns the result of the conversion, unless the value would underflow or overflow. If no conversion could be performed, 0 is returned. If an overflow or underflow occurs, `errno` is set to `ERANGE` and the function return value is clamped to `LONG_MIN` or `LONG_MAX`, respectively.

22.10.4.28 `unsigned long strtoul (const char * __nptr, char ** __endptr, int __base)`

The `strtoul()` function converts the string in `nptr` to an unsigned long value. The conversion is done according to the given base, which must be between 2 and 36 inclusive, or be the special value 0.

The string may begin with an arbitrary amount of white space (as determined by `isspace()`) followed by a single optional '+' or '-' sign. If `base` is zero or 16, the string may then include a "0x" prefix, and the number will be read in

base 16; otherwise, a zero base is taken as 10 (decimal) unless the next character is '0', in which case it is taken as 8 (octal).

The remainder of the string is converted to an unsigned long value in the obvious manner, stopping at the first character which is not a valid digit in the given base. (In bases above 10, the letter 'A' in either upper or lower case represents 10, 'B' represents 11, and so forth, with 'Z' representing 35.)

If `endptr` is not NULL, `strtoul()` stores the address of the first invalid character in `*endptr`. If there were no digits at all, however, `strtoul()` stores the original value of `nptr` in `*endptr`. (Thus, if `*nptr` is not '\0' but `**endptr` is '\0' on return, the entire string was valid.)

The `strtoul()` function return either the result of the conversion or, if there was a leading minus sign, the negation of the result of the conversion, unless the original (non-negated) value would overflow; in the latter case, `strtoul()` returns `ULONG_MAX`, and `errno` is set to `ERANGE`. If no conversion could be performed, 0 is returned.

22.10.4.29 `char* ultoa (unsigned long int __val, char * __s, int __radix)`

Convert an unsigned long integer to a string.

The function `ultoa()` converts the unsigned long integer value from `val` into an ASCII representation that will be stored under `s`. The caller is responsible for providing sufficient storage in `s`.

Note

The minimal size of the buffer `s` depends on the choice of `radix`. For example, if the `radix` is 2 (binary), you need to supply a buffer with a minimal length of `8 * sizeof (unsigned long int) + 1` characters, i.e. one character for each bit plus one for the string terminator. Using a larger `radix` will require a smaller minimal buffer size.

Warning

If the buffer is too small, you risk a buffer overflow.

Conversion is done using the `radix` as base, which may be a number between 2 (binary conversion) and up to 36. If `radix` is greater than 10, the next digit after '9' will be the letter 'a'.

The `ultoa()` function returns the pointer passed as `s`.

22.10.4.30 `char* utoa (unsigned int __val, char * __s, int __radix)`

Convert an unsigned integer to a string.

The function `utoa()` converts the unsigned integer value from `val` into an ASCII representation that will be stored under `s`. The caller is responsible for providing sufficient storage in `s`.

Note

The minimal size of the buffer `s` depends on the choice of `radix`. For example, if the `radix` is 2 (binary), you need to supply a buffer with a minimal length of `8 * sizeof (unsigned int) + 1` characters, i.e. one character for each bit plus one for the string terminator. Using a larger `radix` will require a smaller minimal buffer size.

Warning

If the buffer is too small, you risk a buffer overflow.

Conversion is done using the `radix` as base, which may be a number between 2 (binary conversion) and up to 36. If `radix` is greater than 10, the next digit after '9' will be the letter 'a'.

The `utoa()` function returns the pointer passed as `s`.

22.10.5 Variable Documentation

22.10.5.1 char* __malloc_heap_end

`malloc()` tunable.

22.10.5.2 char* __malloc_heap_start

`malloc()` tunable.

22.10.5.3 size_t __malloc_margin

`malloc()` tunable.

22.11 <string.h>: Strings

Macros

- `#define _FFS(x)`

Functions

- `int ffs (int __val)`
- `int ffs_l (long __val)`
- `int ffsll (long long __val)`
- `void * memccpy (void *, const void *, int, size_t)`
- `void * memchr (const void *, int, size_t) __ATTR_PURE__`
- `int memcmp (const void *, const void *, size_t) __ATTR_PURE__`
- `void * memcpy (void *, const void *, size_t)`
- `void * memmem (const void *, size_t, const void *, size_t) __ATTR_PURE__`
- `void * memmove (void *, const void *, size_t)`
- `void * memrchr (const void *, int, size_t) __ATTR_PURE__`
- `void * memset (void *, int, size_t)`
- `int strcasecmp (const char *, const char *) __ATTR_PURE__`
- `char * strcasestr (const char *, const char *) __ATTR_PURE__`
- `char * strcat (char *, const char *)`
- `char * strchr (const char *, int) __ATTR_PURE__`
- `char * strchrnul (const char *, int) __ATTR_PURE__`
- `int strcmp (const char *, const char *) __ATTR_PURE__`
- `char * strcpy (char *, const char *)`
- `size_t strcspn (const char *__s, const char *__reject) __ATTR_PURE__`
- `char * strdup (const char *s1)`
- `size_t strlcat (char *, const char *, size_t)`
- `size_t strlcpy (char *, const char *, size_t)`
- `size_t strlen (const char *) __ATTR_PURE__`
- `char * strlwr (char *)`
- `int strncasecmp (const char *, const char *, size_t) __ATTR_PURE__`
- `char * strncat (char *, const char *, size_t)`
- `int strncmp (const char *, const char *, size_t) __ATTR_PURE__`
- `char * strncpy (char *, const char *, size_t)`
- `size_t strnlen (const char *, size_t) __ATTR_PURE__`
- `char * strpbrk (const char *__s, const char *__accept) __ATTR_PURE__`
- `char * strrchr (const char *, int) __ATTR_PURE__`
- `char * strrev (char *)`
- `char * strsep (char **, const char *)`
- `size_t strspn (const char *__s, const char *__accept) __ATTR_PURE__`
- `char * strstr (const char *, const char *) __ATTR_PURE__`
- `char * strtok (char *, const char *)`
- `char * strtok_r (char *, const char *, char **)`
- `char * strupr (char *)`

22.11.1 Detailed Description

```
#include <string.h>
```

The string functions perform string operations on NULL terminated strings.

Note

If the strings you are working on resident in program space (flash), you will need to use the string functions described in [<avr/pgmspace.h>: Program Space Utilities](#).

22.11.2 Macro Definition Documentation

22.11.2.1 #define _FFS(x)

This macro finds the first (least significant) bit set in the input value.

This macro is very similar to the function [ffs\(\)](#) except that it evaluates its argument at compile-time, so it should only be applied to compile-time constant expressions where it will reduce to a constant itself. Application of this macro to expressions that are not constant at compile-time is not recommended, and might result in a huge amount of code generated.

Returns

The [_FFS\(\)](#) macro returns the position of the first (least significant) bit set in the word *val*, or 0 if no bits are set. The least significant bit is position 1. Only 16 bits of argument are evaluated.

22.11.3 Function Documentation

22.11.3.1 int ffs (int *val*)

This function finds the first (least significant) bit set in the input value.

Returns

The [ffs\(\)](#) function returns the position of the first (least significant) bit set in the word *val*, or 0 if no bits are set. The least significant bit is position 1.

Note

For expressions that are constant at compile time, consider using the [_FFS](#) macro instead.

22.11.3.2 int ffsl (long __*val*)

Same as [ffs\(\)](#), for an argument of type long.

22.11.3.3 int ffsll (long long __*val*)

Same as [ffs\(\)](#), for an argument of type long long.

22.11.3.4 void * memccpy (void * *dest*, const void * *src*, int *val*, size_t *len*)

Copy memory area.

The [memccpy\(\)](#) function copies no more than *len* bytes from memory area *src* to memory area *dest*, stopping when the character *val* is found.

Returns

The `memccpy()` function returns a pointer to the next character in `dest` after `val`, or `NULL` if `val` was not found in the first `len` characters of `src`.

22.11.3.5 void * memchr (const void * src, int val, size_t len)

Scan memory for a character.

The `memchr()` function scans the first `len` bytes of the memory area pointed to by `src` for the character `val`. The first byte to match `val` (interpreted as an unsigned character) stops the operation.

Returns

The `memchr()` function returns a pointer to the matching byte or `NULL` if the character does not occur in the given memory area.

22.11.3.6 int memcmp (const void * s1, const void * s2, size_t len)

Compare memory areas.

The `memcmp()` function compares the first `len` bytes of the memory areas `s1` and `s2`. The comparison is performed using unsigned char operations.

Returns

The `memcmp()` function returns an integer less than, equal to, or greater than zero if the first `len` bytes of `s1` is found, respectively, to be less than, to match, or be greater than the first `len` bytes of `s2`.

Note

Be sure to store the result in a 16 bit variable since you may get incorrect results if you use an unsigned char or char due to truncation.

Warning

This function is not -mint8 compatible, although if you only care about testing for equality, this function should be safe to use.

22.11.3.7 void * memcpy (void * dest, const void * src, size_t len)

Copy a memory area.

The `memcpy()` function copies `len` bytes from memory area `src` to memory area `dest`. The memory areas may not overlap. Use `memmove()` if the memory areas do overlap.

Returns

The `memcpy()` function returns a pointer to `dest`.

22.11.3.8 void * memmem (const void * s1, size_t len1, const void * s2, size_t len2)

The `memmem()` function finds the start of the first occurrence of the substring `s2` of length `len2` in the memory area `s1` of length `len1`.

Returns

The `memmem()` function returns a pointer to the beginning of the substring, or `NULL` if the substring is not found. If `len2` is zero, the function returns `s1`.

22.11.3.9 void * memmove (void * dest, const void * src, size_t len)

Copy memory area.

The `memmove()` function copies `len` bytes from memory area `src` to memory area `dest`. The memory areas may overlap.

Returns

The `memmove()` function returns a pointer to `dest`.

22.11.3.10 void * memrchr (const void * src, int val, size_t len)

The `memrchr()` function is like the `memchr()` function, except that it searches backwards from the end of the `len` bytes pointed to by `src` instead of forwards from the front. (Glibc, GNU extension.)

Returns

The `memrchr()` function returns a pointer to the matching byte or `NULL` if the character does not occur in the given memory area.

22.11.3.11 void * memset (void * dest, int val, size_t len)

Fill memory with a constant byte.

The `memset()` function fills the first `len` bytes of the memory area pointed to by `dest` with the constant byte `val`.

Returns

The `memset()` function returns a pointer to the memory area `dest`.

22.11.3.12 int strcasecmp (const char * s1, const char * s2)

Compare two strings ignoring case.

The `strcasecmp()` function compares the two strings `s1` and `s2`, ignoring the case of the characters.

Returns

The `strcasecmp()` function returns an integer less than, equal to, or greater than zero if `s1` is found, respectively, to be less than, to match, or be greater than `s2`. A consequence of the ordering used by `strcasecmp()` is that if `s1` is an initial substring of `s2`, then `s1` is considered to be "less than" `s2`.

22.11.3.13 char * strcasestr (const char * s1, const char * s2)

The `strcasestr()` function finds the first occurrence of the substring `s2` in the string `s1`. This is like `strstr()`, except that it ignores case of alphabetic symbols in searching for the substring. (Glibc, GNU extension.)

Returns

The `strcasestr()` function returns a pointer to the beginning of the substring, or `NULL` if the substring is not found. If `s2` points to a string of zero length, the function returns `s1`.

22.11.3.14 char * strcat (char * dest, const char * src)

Concatenate two strings.

The `strcat()` function appends the `src` string to the `dest` string overwriting the `'\0'` character at the end of `dest`, and then adds a terminating `'\0'` character. The strings may not overlap, and the `dest` string must have enough space for the result.

Returns

The `strcat()` function returns a pointer to the resulting string `dest`.

22.11.3.15 `char * strchr (const char * src, int val)`

Locate character in string.

The `strchr()` function returns a pointer to the first occurrence of the character `val` in the string `src`.

Here "character" means "byte" - these functions do not work with wide or multi-byte characters.

Returns

The `strchr()` function returns a pointer to the matched character or `NULL` if the character is not found.

22.11.3.16 `char * strchrnul (const char * s, int c)`

The `strchrnul()` function is like `strchr()` except that if `c` is not found in `s`, then it returns a pointer to the null byte at the end of `s`, rather than `NULL`. (Glibc, GNU extension.)

Returns

The `strchrnul()` function returns a pointer to the matched character, or a pointer to the null byte at the end of `s` (i.e., `s+strlen(s)`) if the character is not found.

22.11.3.17 `int strcmp (const char * s1, const char * s2)`

Compare two strings.

The `strcmp()` function compares the two strings `s1` and `s2`.

Returns

The `strcmp()` function returns an integer less than, equal to, or greater than zero if `s1` is found, respectively, to be less than, to match, or be greater than `s2`. A consequence of the ordering used by `strcmp()` is that if `s1` is an initial substring of `s2`, then `s1` is considered to be "less than" `s2`.

22.11.3.18 `char * strcpy (char * dest, const char * src)`

Copy a string.

The `strcpy()` function copies the string pointed to by `src` (including the terminating `'\0'` character) to the array pointed to by `dest`. The strings may not overlap, and the destination string `dest` must be large enough to receive the copy.

Returns

The `strcpy()` function returns a pointer to the destination string `dest`.

Note

If the destination string of a `strcpy()` is not large enough (that is, if the programmer was stupid/lazy, and failed to check the size before copying) then anything might happen. Overflowing fixed length strings is a favourite cracker technique.

22.11.3.19 `size_t strcspn (const char * s, const char * reject)`

The `strcspn()` function calculates the length of the initial segment of `s` which consists entirely of characters not in `reject`.

Returns

The `strcspn()` function returns the number of characters in the initial segment of `s` which are not in the string `reject`. The terminating zero is not considered as a part of string.

22.11.3.20 `char * strdup (const char * s1)`

Duplicate a string.

The `strdup()` function allocates memory and copies into it the string addressed by `s1`, including the terminating null character.

Warning

The `strdup()` function calls `malloc()` to allocate the memory for the duplicated string! The user is responsible for freeing the memory by calling `free()`.

Returns

The `strdup()` function returns a pointer to the resulting string `dest`. If `malloc()` cannot allocate enough storage for the string, `strdup()` will return `NULL`.

Warning

Be sure to check the return value of the `strdup()` function to make sure that the function has succeeded in allocating the memory!

22.11.3.21 `size_t strlcat (char * dst, const char * src, size_t siz)`

Concatenate two strings.

Appends `src` to string `dst` of size `siz` (unlike `strncat()`, `siz` is the full size of `dst`, not space left). At most `siz-1` characters will be copied. Always `NULL` terminates (unless `siz <= strlen(dst)`).

Returns

The `strlcat()` function returns `strlen(src) + MIN(siz, strlen(initial dst))`. If `retval >= siz`, truncation occurred.

Appends `src` to string `dst` of size `siz` (unlike `strncat()`, `siz` is the full size of `dst`, not space left). At most `siz-1` characters will be copied. Always `NULL` terminates (unless `siz <= strlen(dst)`).

Returns

The `strlcat()` function returns `strlen(src) + MIN(siz, strlen(initial dst))`. If `retval >= siz`, truncation occurred.

22.11.3.22 `size_t strlcpy (char * dst, const char * src, size_t siz)`

Copy a string.

Copy `src` to string `dst` of size `siz`. At most `siz-1` characters will be copied. Always `NULL` terminates (unless `siz == 0`).

Returns

The `strcpy()` function returns `strlen(src)`. If `retval >= siz`, truncation occurred.

Copy `src` to string `dst` of size `siz`. At most `siz-1` characters will be copied. Always NULL terminates (unless `siz == 0`).

Returns

The `strcpy()` function returns `strlen(src)`. If `retval >= siz`, truncation occurred.

22.11.3.23 `size_t strlen (const char * src)`

Calculate the length of a string.

The `strlen()` function calculates the length of the string `src`, not including the terminating `'\0'` character.

Returns

The `strlen()` function returns the number of characters in `src`.

22.11.3.24 `char * strlwr (char * s)`

Convert a string to lower case.

The `strlwr()` function will convert a string to lower case. Only the upper case alphabetic characters [A .. Z] are converted. Non-alphabetic characters will not be changed.

Returns

The `strlwr()` function returns a pointer to the converted string.

22.11.3.25 `int strncasecmp (const char * s1, const char * s2, size_t len)`

Compare two strings ignoring case.

The `strncasecmp()` function is similar to `strcasecmp()`, except it only compares the first `len` characters of `s1`.

Returns

The `strncasecmp()` function returns an integer less than, equal to, or greater than zero if `s1` (or the first `len` bytes thereof) is found, respectively, to be less than, to match, or be greater than `s2`. A consequence of the ordering used by `strncasecmp()` is that if `s1` is an initial substring of `s2`, then `s1` is considered to be "less than" `s2`.

22.11.3.26 `char * strncat (char * dest, const char * src, size_t len)`

Concatenate two strings.

The `strncat()` function is similar to `strcat()`, except that only the first `n` characters of `src` are appended to `dest`.

Returns

The `strncat()` function returns a pointer to the resulting string `dest`.

22.11.3.27 `int strcmp (const char * s1, const char * s2, size_t len)`

Compare two strings.

The `strcmp()` function is similar to `strncmp()`, except it only compares the first (at most) *n* characters of *s1* and *s2*.

Returns

The `strcmp()` function returns an integer less than, equal to, or greater than zero if *s1* (or the first *n* bytes thereof) is found, respectively, to be less than, to match, or be greater than *s2*.

22.11.3.28 `char * strncpy (char * dest, const char * src, size_t len)`

Copy a string.

The `strncpy()` function is similar to `strcpy()`, except that not more than *n* bytes of *src* are copied. Thus, if there is no null byte among the first *n* bytes of *src*, the result will not be null-terminated.

In the case where the length of *src* is less than that of *n*, the remainder of *dest* will be padded with nulls.

Returns

The `strncpy()` function returns a pointer to the destination string *dest*.

22.11.3.29 `size_t strlen (const char * src, size_t len)`

Determine the length of a fixed-size string.

The `strlen` function returns the number of characters in the string pointed to by *src*, not including the terminating `'\0'` character, but at most *len*. In doing this, `strlen` looks only at the first *len* characters at *src* and never beyond *src+len*.

Returns

The `strlen` function returns `strlen(src)`, if that is less than *len*, or *len* if there is no `'\0'` character among the first *len* characters pointed to by *src*.

22.11.3.30 `char * strpbrk (const char * s, const char * accept)`

The `strpbrk()` function locates the first occurrence in the string *s* of any of the characters in the string *accept*.

Returns

The `strpbrk()` function returns a pointer to the character in *s* that matches one of the characters in *accept*, or `NULL` if no such character is found. The terminating zero is not considered as a part of string: if one or both args are empty, the result will `NULL`.

22.11.3.31 `char * strrchr (const char * src, int val)`

Locate character in string.

The `strrchr()` function returns a pointer to the last occurrence of the character *val* in the string *src*.

Here "character" means "byte" - these functions do not work with wide or multi-byte characters.

Returns

The `strrchr()` function returns a pointer to the matched character or `NULL` if the character is not found.

22.11.3.32 `char * strrev (char * s)`

Reverse a string.

The `strrev()` function reverses the order of the string.

Returns

The `strrev()` function returns a pointer to the beginning of the reversed string.

22.11.3.33 `char * strsep (char ** sp, const char * delim)`

Parse a string into tokens.

The `strsep()` function locates, in the string referenced by `*sp`, the first occurrence of any character in the string `delim` (or the terminating `'\0'` character) and replaces it with a `'\0'`. The location of the next character after the delimiter character (or `NULL`, if the end of the string was reached) is stored in `*sp`. An “empty” field, i.e. one caused by two adjacent delimiter characters, can be detected by comparing the location referenced by the pointer returned in `*sp` to `'\0'`.

Returns

The `strsep()` function returns a pointer to the original value of `*sp`. If `*sp` is initially `NULL`, `strsep()` returns `NULL`.

22.11.3.34 `size_t strspn (const char * s, const char * accept)`

The `strspn()` function calculates the length of the initial segment of `s` which consists entirely of characters in `accept`.

Returns

The `strspn()` function returns the number of characters in the initial segment of `s` which consist only of characters from `accept`. The terminating zero is not considered as a part of string.

22.11.3.35 `char * strstr (const char * s1, const char * s2)`

Locate a substring.

The `strstr()` function finds the first occurrence of the substring `s2` in the string `s1`. The terminating `'\0'` characters are not compared.

Returns

The `strstr()` function returns a pointer to the beginning of the substring, or `NULL` if the substring is not found. If `s2` points to a string of zero length, the function returns `s1`.

22.11.3.36 `char * strtok (char * s, const char * delim)`

Parses the string `s` into tokens.

`strtok` parses the string `s` into tokens. The first call to `strtok` should have `s` as its first argument. Subsequent calls should have the first argument set to `NULL`. If a token ends with a delimiter, this delimiting character is overwritten with a `'\0'` and a pointer to the next character is saved for the next call to `strtok`. The delimiter string `delim` may be different for each call.

Returns

The `strtok()` function returns a pointer to the next token or `NULL` when no more tokens are found.

Note

[strtok\(\)](#) is NOT reentrant. For a reentrant version of this function see [strtok_r\(\)](#).

22.11.3.37 `char * strtok_r (char * string, const char * delim, char ** last)`

Parses string into tokens.

`strtok_r` parses `string` into tokens. The first call to `strtok_r` should have `string` as its first argument. Subsequent calls should have the first argument set to `NULL`. If a token ends with a delimiter, this delimiting character is overwritten with a `'\0'` and a pointer to the next character is saved for the next call to `strtok_r`. The delimiter string `delim` may be different for each call. `last` is a user allocated `char*` pointer. It must be the same while parsing the same string. `strtok_r` is a reentrant version of [strtok\(\)](#).

Returns

The [strtok_r\(\)](#) function returns a pointer to the next token or `NULL` when no more tokens are found.

22.11.3.38 `char * strupr (char * s)`

Convert a string to upper case.

The [strupr\(\)](#) function will convert a string to upper case. Only the lower case alphabetic characters [a .. z] are converted. Non-alphabetic characters will not be changed.

Returns

The [strupr\(\)](#) function returns a pointer to the converted string. The pointer is the same as that passed in since the operation is performed in place.

22.12 <avr/boot.h>: Bootloader Support Utilities

Macros

- #define `BOOTLOADER_SECTION` `__attribute__((section(".bootloader")))`
- #define `boot_spm_interrupt_enable()` `(__SPM_REG |= (uint8_t)_BV(SPMIE))`
- #define `boot_spm_interrupt_disable()` `(__SPM_REG &= (uint8_t)~_BV(SPMIE))`
- #define `boot_is_spm_interrupt()` `(__SPM_REG & (uint8_t)_BV(SPMIE))`
- #define `boot_rww_busy()` `(__SPM_REG & (uint8_t)_BV(__COMMON_ASB))`
- #define `boot_spm_busy()` `(__SPM_REG & (uint8_t)_BV(__SPM_ENABLE))`
- #define `boot_spm_busy_wait()` `do{}while(boot_spm_busy())`
- #define `GET_LOW_FUSE_BITS` `(0x0000)`
- #define `GET_LOCK_BITS` `(0x0001)`
- #define `GET_EXTENDED_FUSE_BITS` `(0x0002)`
- #define `GET_HIGH_FUSE_BITS` `(0x0003)`
- #define `boot_lock_fuse_bits_get(address)`
- #define `boot_signature_byte_get(addr)`
- #define `boot_page_fill(address, data)` `__boot_page_fill_normal(address, data)`
- #define `boot_page_erase(address)` `__boot_page_erase_normal(address)`
- #define `boot_page_write(address)` `__boot_page_write_normal(address)`
- #define `boot_rww_enable()` `__boot_rww_enable()`
- #define `boot_lock_bits_set(lock_bits)` `__boot_lock_bits_set(lock_bits)`
- #define `boot_page_fill_safe(address, data)`
- #define `boot_page_erase_safe(address)`
- #define `boot_page_write_safe(address)`
- #define `boot_rww_enable_safe()`
- #define `boot_lock_bits_set_safe(lock_bits)`

22.12.1 Detailed Description

```
#include <avr/io.h>
#include <avr/boot.h>
```

The macros in this module provide a C language interface to the bootloader support functionality of certain AVR processors. These macros are designed to work with all sizes of flash memory.

Global interrupts are not automatically disabled for these macros. It is left up to the programmer to do this. See the code example below. Also see the processor datasheet for caveats on having global interrupts enabled during writing of the Flash.

Note

Not all AVR processors provide bootloader support. See your processor datasheet to see if it provides bootloader support.

Todo From email with Marek: On smaller devices (all except ATmega64/128), `__SPM_REG` is in the I/O space, accessible with the shorter "in" and "out" instructions - since the boot loader has a limited size, this could be an important optimization.

API Usage Example

The following code shows typical usage of the boot API.

```

#include <inttypes.h>
#include <avr/interrupt.h>
#include <avr/pgmspace.h>

void boot_program_page (uint32_t page, uint8_t *buf)
{
    uint16_t i;
    uint8_t sreg;

    // Disable interrupts.

    sreg = SREG;
    cli();

    eeprom_busy_wait ();

    boot_page_erase (page);
    boot_spm_busy_wait ();      // Wait until the memory
    is erased.

    for (i=0; i<SPM_PAGESIZE; i+=2)
    {
        // Set up little-endian word.

        uint16_t w = *buf++;
        w += (*buf++) << 8;

        boot_page_fill (page + i, w);
    }

    boot_page_write (page);      // Store buffer in flash
    page.
    boot_spm_busy_wait();        // Wait until the memory
    is written.

    // Reenable RWW-section again. We need this if we want to jump back
    // to the application after bootloading.

    boot_rww_enable ();

    // Re-enable interrupts (if they were ever enabled).

    SREG = sreg;
}

```

22.12.2 Macro Definition Documentation

22.12.2.1 #define boot_is_spm_interrupt() (_SPM_REG & (uint8_t)_BV(SPMIE))

Check if the SPM interrupt is enabled.

22.12.2.2 #define boot_lock_bits_set(lock_bits) _boot_lock_bits_set(lock_bits)

Set the bootloader lock bits.

Parameters

<i>lock_bits</i>	A mask of which Boot Loader Lock Bits to set.
------------------	---

Note

In this context, a 'set bit' will be written to a zero value. Note also that only BLBxx bits can be programmed by this command.

For example, to disallow the SPM instruction from writing to the Boot Loader memory section of flash, you would use this macro as such:

```
boot_lock_bits_set (_BV (BLB11));
```

Note

Like any lock bits, the Boot Loader Lock Bits, once set, cannot be cleared again except by a chip erase which will in turn also erase the boot loader itself.

22.12.2.3 #define boot_lock_bits_set_safe(lock_bits)**Value:**

```
do { \
    boot_spm_busy_wait();           \
    eeprom_busy_wait();             \
    boot_lock_bits_set (lock_bits); \
} while (0)
```

Same as [boot_lock_bits_set\(\)](#) except waits for eeprom and spm operations to complete before setting the lock bits.

22.12.2.4 #define boot_lock_fuse_bits_get(address)**Value:**

```
(__extension__({
    uint8_t __result;
    __asm__ __volatile__
    (
        "sts %1, %2\n\t"
        "lpm %0, Z\n\t"
        : "=r" (__result)
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_LOCK_BITS_SET)),
          "z" ((uint16_t) (address))
        );
    __result;
}))
```

Read the lock or fuse bits at address.

Parameter *address* can be any of GET_LOW_FUSE_BITS, GET_LOCK_BITS, GET_EXTENDED_FUSE_BITS, or GET_HIGH_FUSE_BITS.

Note

The lock and fuse bits returned are the physical values, i.e. a bit returned as 0 means the corresponding fuse or lock bit is programmed.

22.12.2.5 #define boot_page_erase(address) __boot_page_erase_normal(address)

Erase the flash page that contains address.

Note

address is a byte address in flash, not a word address.

22.12.2.6 #define boot_page_erase_safe(address)**Value:**

```
do { \
    boot_spm_busy_wait();           \
    eeprom_busy_wait();             \
    boot_page_erase (address);       \
} while (0)
```

Same as [boot_page_erase\(\)](#) except it waits for eeprom and spm operations to complete before erasing the page.

22.12.2.7 `#define boot_page_fill(address, data) __boot_page_fill_normal(address, data)`

Fill the bootloader temporary page buffer for flash address with data word.

Note

The address is a byte address. The data is a word. The AVR writes data to the buffer a word at a time, but addresses the buffer per byte! So, increment your address by 2 between calls, and send 2 data bytes in a word format! The LSB of the data is written to the lower address; the MSB of the data is written to the higher address.

22.12.2.8 `#define boot_page_fill_safe(address, data)`**Value:**

```
do { \
    boot_spm_busy_wait();           \
    eeprom_busy_wait();            \
    boot_page_fill(address, data);  \
} while (0)
```

Same as `boot_page_fill()` except it waits for eeprom and spm operations to complete before filling the page.

22.12.2.9 `#define boot_page_write(address) __boot_page_write_normal(address)`

Write the bootloader temporary page buffer to flash page that contains address.

Note

address is a byte address in flash, not a word address.

22.12.2.10 `#define boot_page_write_safe(address)`**Value:**

```
do { \
    boot_spm_busy_wait();           \
    eeprom_busy_wait();            \
    boot_page_write (address);      \
} while (0)
```

Same as `boot_page_write()` except it waits for eeprom and spm operations to complete before writing the page.

22.12.2.11 `#define boot_rww_busy() (_SPM_REG & (uint8_t)_BV(_COMMON_ASB))`

Check if the RWW section is busy.

22.12.2.12 `#define boot_rww_enable() __boot_rww_enable()`

Enable the Read-While-Write memory section.

22.12.2.13 `#define boot_rww_enable_safe()`**Value:**

```
do { \
    boot_spm_busy_wait();           \
    eeprom_busy_wait();            \
    boot_rww_enable();              \
} while (0)
```

Same as `boot_rww_enable()` except waits for eeprom and spm operations to complete before enabling the RWW memory.

22.12.2.14 #define boot_signature_byte_get(addr)

Value:

```
(__extension__({
    uint8_t __result;
    __asm__ __volatile__
    (
        "sts %1, %2\n\t"
        "lpm %0, Z" "\n\t"
        : "=r" (__result)
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_SIGROW_READ)),
          "z" ((uint16_t) (addr))
        );
    __result;
}))
```

Read the Signature Row byte at `address`. For some MCU types, this function can also retrieve the factory-stored oscillator calibration bytes.

Parameter `address` can be 0-0x1f as documented by the datasheet.

Note

The values are MCU type dependent.

22.12.2.15 #define boot_spm_busy() (_SPM_REG & (uint8_t)_BV(_SPM_ENABLE))

Check if the SPM instruction is busy.

22.12.2.16 #define boot_spm_busy_wait() do{ }while(boot_spm_busy())

Wait while the SPM instruction is busy.

22.12.2.17 #define boot_spm_interrupt_disable() (_SPM_REG &= (uint8_t)~_BV(SPMIE))

Disable the SPM interrupt.

22.12.2.18 #define boot_spm_interrupt_enable() (_SPM_REG |= (uint8_t)_BV(SPMIE))

Enable the SPM interrupt.

22.12.2.19 #define BOOTLOADER_SECTION __attribute__((section(".bootloader")))

Used to declare a function or variable to be placed into a new section called `.bootloader`. This section and its contents can then be relocated to any address (such as the bootloader NRWW area) at link-time.

22.12.2.20 #define GET_EXTENDED_FUSE_BITS (0x0002)

address to read the extended fuse bits, using `boot_lock_fuse_bits_get`

22.12.2.21 #define GET_HIGH_FUSE_BITS (0x0003)

address to read the high fuse bits, using `boot_lock_fuse_bits_get`

22.12.2.22 #define GET_LOCK_BITS (0x0001)

address to read the lock bits, using `boot_lock_fuse_bits_get`

22.12.2.23 #define GET_LOW_FUSE_BITS (0x0000)

address to read the low fuse bits, using boot_lock_fuse_bits_get

22.13 <avr/cpufunc.h>: Special AVR CPU functions

Macros

- `#define _NOP()`
- `#define _MemoryBarrier()`

22.13.1 Detailed Description

```
#include <avr/cpufunc.h>
```

This header file contains macros that access special functions of the AVR CPU which do not fit into any of the other header files.

22.13.2 Macro Definition Documentation

22.13.2.1 `#define _MemoryBarrier()`

Implement a read/write *memory barrier*. A memory barrier instructs the compiler to not cache any memory data in registers beyond the barrier. This can sometimes be more effective than blocking certain optimizations by declaring some object with a `volatile` qualifier.

See [Problems with reordering code](#) for things to be taken into account with respect to compiler optimizations.

22.13.2.2 `#define _NOP()`

Execute a *no operation* (NOP) CPU instruction. This should not be used to implement delays, better use the functions from [<util/delay_basic.h>](#) or [<util/delay.h>](#) for this. For debugging purposes, a NOP can be useful to have an instruction that is guaranteed to be not optimized away by the compiler, so it can always become a breakpoint in the debugger.

22.14 <avr/eeprom.h>: EEPROM handling

Macros

- #define `EEMEM __attribute__((section(".eeprom")))`
- #define `eeprom_is_ready()`
- #define `eeprom_busy_wait()` do {} while (!`eeprom_is_ready()`)

Functions

- `uint8_t eeprom_read_byte (const uint8_t *__p) __ATTR_PURE__`
- `uint16_t eeprom_read_word (const uint16_t *__p) __ATTR_PURE__`
- `uint32_t eeprom_read_dword (const uint32_t *__p) __ATTR_PURE__`
- `float eeprom_read_float (const float *__p) __ATTR_PURE__`
- `void eeprom_read_block (void *__dst, const void *__src, size_t __n)`
- `void eeprom_write_byte (uint8_t *__p, uint8_t __value)`
- `void eeprom_write_word (uint16_t *__p, uint16_t __value)`
- `void eeprom_write_dword (uint32_t *__p, uint32_t __value)`
- `void eeprom_write_float (float *__p, float __value)`
- `void eeprom_write_block (const void *__src, void *__dst, size_t __n)`
- `void eeprom_update_byte (uint8_t *__p, uint8_t __value)`
- `void eeprom_update_word (uint16_t *__p, uint16_t __value)`
- `void eeprom_update_dword (uint32_t *__p, uint32_t __value)`
- `void eeprom_update_float (float *__p, float __value)`
- `void eeprom_update_block (const void *__src, void *__dst, size_t __n)`

IAR C compatibility defines

- #define `_EEPUT(addr, val) eeprom_write_byte ((uint8_t*)(addr), (uint8_t)(val))`
- #define `__EEPUT(addr, val) eeprom_write_byte ((uint8_t*)(addr), (uint8_t)(val))`
- #define `_EEGET(var, addr) (var) = eeprom_read_byte ((const uint8_t*)(addr))`
- #define `__EEGET(var, addr) (var) = eeprom_read_byte ((const uint8_t*)(addr))`

22.14.1 Detailed Description

```
#include <avr/eeprom.h>
```

This header file declares the interface to some simple library routines suitable for handling the data EEPROM contained in the AVR microcontrollers. The implementation uses a simple polled mode interface. Applications that require interrupt-controlled EEPROM access to ensure that no time will be wasted in spinloops will have to deploy their own implementation.

Notes:

- In addition to the write functions there is a set of update ones. This functions read each byte first and skip the burning if the old value is the same with new. The scanning direction is from high address to low, to obtain quick return in common cases.

- All of the read/write functions first make sure the EEPROM is ready to be accessed. Since this may cause long delays if a write operation is still pending, time-critical applications should first poll the EEPROM e. g. using `eeprom_is_ready()` before attempting any actual I/O. But this functions are not wait until SELFPRGEN in SPMCSR becomes zero. Do this manually, if your software contains the Flash burning.
- As these functions modify IO registers, they are known to be non-reentrant. If any of these functions are used from both, standard and interrupt context, the applications must ensure proper protection (e.g. by disabling interrupts before accessing them).
- All write functions force `erase_and_write` programming mode.
- For Xmega the EEPROM start address is 0, like other architectures. The reading functions add the 0x2000 value to use EEPROM mapping into data space.

22.14.2 Macro Definition Documentation

22.14.2.1 `#define __EEGET(var, addr) (var) = eeprom_read_byte ((const uint8_t *) (addr))`

Read a byte from EEPROM. Compatibility define for IAR C.

22.14.2.2 `#define __EEPUT(addr, val) eeprom_write_byte ((uint8_t *) (addr), (uint8_t) (val))`

Write a byte to EEPROM. Compatibility define for IAR C.

22.14.2.3 `#define _EEGET(var, addr) (var) = eeprom_read_byte ((const uint8_t *) (addr))`

Read a byte from EEPROM. Compatibility define for IAR C.

22.14.2.4 `#define _EEPUT(addr, val) eeprom_write_byte ((uint8_t *) (addr), (uint8_t) (val))`

Write a byte to EEPROM. Compatibility define for IAR C.

22.14.2.5 `#define EEMEM __attribute__((section(".eeprom")))`

Attribute expression causing a variable to be allocated within the `.eeprom` section.

22.14.2.6 `#define eeprom_busy_wait() do { } while (!eeprom_is_ready())`

Loops until the eeprom is no longer busy.

Returns

Nothing.

22.14.2.7 `#define eeprom_is_ready()`

Returns

1 if EEPROM is ready for a new read/write operation, 0 if not.

22.14.3 Function Documentation

22.14.3.1 `void eeprom_read_block (void * __dst, const void * __src, size_t __n)`

Read a block of `__n` bytes from EEPROM address `__src` to SRAM `__dst`.

22.14.3.2 `uint8_t eeprom_read_byte (const uint8_t * __p)`

Read one byte from EEPROM address `__p`.

22.14.3.3 `uint32_t eeprom_read_dword (const uint32_t * __p)`

Read one 32-bit double word (little endian) from EEPROM address `__p`.

22.14.3.4 `float eeprom_read_float (const float * __p)`

Read one float value (little endian) from EEPROM address `__p`.

22.14.3.5 `uint16_t eeprom_read_word (const uint16_t * __p)`

Read one 16-bit word (little endian) from EEPROM address `__p`.

22.14.3.6 `void eeprom_update_block (const void * __src, void * __dst, size_t __n)`

Update a block of `__n` bytes to EEPROM address `__dst` from `__src`.

Note

The argument order is mismatch with common functions like [strcpy\(\)](#).

22.14.3.7 `void eeprom_update_byte (uint8_t * __p, uint8_t __value)`

Update a byte `__value` to EEPROM address `__p`.

22.14.3.8 `void eeprom_update_dword (uint32_t * __p, uint32_t __value)`

Update a 32-bit double word `__value` to EEPROM address `__p`.

22.14.3.9 `void eeprom_update_float (float * __p, float __value)`

Update a float `__value` to EEPROM address `__p`.

22.14.3.10 `void eeprom_update_word (uint16_t * __p, uint16_t __value)`

Update a word `__value` to EEPROM address `__p`.

22.14.3.11 `void eeprom_write_block (const void * __src, void * __dst, size_t __n)`

Write a block of `__n` bytes to EEPROM address `__dst` from `__src`.

Note

The argument order is mismatch with common functions like [strcpy\(\)](#).

22.14.3.12 `void eeprom_write_byte (uint8_t * __p, uint8_t __value)`

Write a byte `__value` to EEPROM address `__p`.

22.14.3.13 `void eeprom_write_dword (uint32_t * __p, uint32_t __value)`

Write a 32-bit double word `__value` to EEPROM address `__p`.

22.14.3.14 void eeprom_write_float (float * __p, float __value)

Write a float __value to EEPROM address __p.

22.14.3.15 void eeprom_write_word (uint16_t * __p, uint16_t __value)

Write a word __value to EEPROM address __p.

22.15 <avr/fuse.h>: Fuse Support

Introduction

The Fuse API allows a user to specify the fuse settings for the specific AVR device they are compiling for. These fuse settings will be placed in a special section in the ELF output file, after linking.

Programming tools can take advantage of the fuse information embedded in the ELF file, by extracting this information and determining if the fuses need to be programmed before programming the Flash and EEPROM memories. This also allows a single ELF file to contain all the information needed to program an AVR.

To use the Fuse API, include the <avr/io.h> header file, which in turn automatically includes the individual I/O header file and the <avr/fuse.h> file. These other two files provides everything necessary to set the AVR fuses.

Fuse API

Each I/O header file must define the FUSE_MEMORY_SIZE macro which is defined to the number of fuse bytes that exist in the AVR device.

A new type, `__fuse_t`, is defined as a structure. The number of fields in this structure are determined by the number of fuse bytes in the FUSE_MEMORY_SIZE macro.

If FUSE_MEMORY_SIZE == 1, there is only a single field: `byte`, of type unsigned char.

If FUSE_MEMORY_SIZE == 2, there are two fields: `low`, and `high`, of type unsigned char.

If FUSE_MEMORY_SIZE == 3, there are three fields: `low`, `high`, and `extended`, of type unsigned char.

If FUSE_MEMORY_SIZE > 3, there is a single field: `byte`, which is an array of unsigned char with the size of the array being FUSE_MEMORY_SIZE.

A convenience macro, FUSEMEM, is defined as a GCC attribute for a custom-named section of ".fuse".

A convenience macro, FUSES, is defined that declares a variable, `__fuse`, of type `__fuse_t` with the attribute defined by FUSEMEM. This variable allows the end user to easily set the fuse data.

Note

If a device-specific I/O header file has previously defined FUSEMEM, then FUSEMEM is not redefined. If a device-specific I/O header file has previously defined FUSES, then FUSES is not redefined.

Each AVR device I/O header file has a set of defined macros which specify the actual fuse bits available on that device. The AVR fuses have inverted values, logical 1 for an unprogrammed (disabled) bit and logical 0 for a programmed (enabled) bit. The defined macros for each individual fuse bit represent this in their definition by a bit-wise inversion of a mask. For example, the FUSE_EESAVE fuse in the ATmega128 is defined as:

```
#define FUSE_EESAVE    ~_BV(3)
```

Note

The `_BV` macro creates a bit mask from a bit number. It is then inverted to represent logical values for a fuse memory byte.

To combine the fuse bits macros together to represent a whole fuse byte, use the bitwise AND operator, like so:

```
(FUSE_BOOTSZ0 & FUSE_BOOTSZ1 & FUSE_EESAVE & FUSE_SPIEN & FUSE_JTAGEN)
```

Each device I/O header file also defines macros that provide default values for each fuse byte that is available. LFUSE_DEFAULT is defined for a Low Fuse byte. HFUSE_DEFAULT is defined for a High Fuse byte. EFUSE_DEFAULT is defined for an Extended Fuse byte.

If FUSE_MEMORY_SIZE > 3, then the I/O header file defines macros that provide default values for each fuse byte like so: FUSE0_DEFAULT FUSE1_DEFAULT FUSE2_DEFAULT FUSE3_DEFAULT FUSE4_DEFAULT

API Usage Example

Putting all of this together is easy. Using C99's designated initializers:

```
#include <avr/io.h>

FUSES =
{
    .low = LFUSE_DEFAULT,
    .high = (FUSE_BOOTSZ0 & FUSE_BOOTSZ1 & FUSE_EESAVE & FUSE_SPIEN &
    FUSE_JTAGEN),
    .extended = EFUSE_DEFAULT,
};

int main(void)
{
    return 0;
}
```

Or, using the variable directly instead of the FUSES macro,

```
#include <avr/io.h>

__fuse_t __fuse __attribute__((section ("fuse"))) =
{
    .low = LFUSE_DEFAULT,
    .high = (FUSE_BOOTSZ0 & FUSE_BOOTSZ1 & FUSE_EESAVE & FUSE_SPIEN &
    FUSE_JTAGEN),
    .extended = EFUSE_DEFAULT,
};

int main(void)
{
    return 0;
}
```

If you are compiling in C++, you cannot use the designated initializers so you must do:

```
#include <avr/io.h>

FUSES =
{
    LFUSE_DEFAULT, // .low
    (FUSE_BOOTSZ0 & FUSE_BOOTSZ1 & FUSE_EESAVE & FUSE_SPIEN & FUSE_JTAGEN),
    // .high
    EFUSE_DEFAULT, // .extended
};

int main(void)
{
    return 0;
}
```

However there are a number of caveats that you need to be aware of to use this API properly.

Be sure to include <avr/io.h> to get all of the definitions for the API. The FUSES macro defines a global variable to store the fuse data. This variable is assigned to its own linker section. Assign the desired fuse values immediately in the variable initialization.

The `.fuse` section in the ELF file will get its values from the initial variable assignment ONLY. This means that you can NOT assign values to this variable in functions and the new values will not be put into the ELF `.fuse` section.

The global variable declared in the `FUSES` macro has two leading underscores, which means that it is reserved for the "implementation", meaning the library, so it will not conflict with a user-named variable.

You must initialize ALL fields in the `__fuse_t` structure. This is because the fuse bits in all bytes default to a logical 1, meaning unprogrammed. Normal uninitialized data defaults to all logical zeros. So it is vital that all fuse bytes are initialized, even with default data. If they are not, then the fuse bits may not be programmed to the desired settings.

Be sure to have the `-mmcu=device` flag in your compile command line and your linker command line to have the correct device selected and to have the correct I/O header file included when you include `<avr/io.h>`.

You can print out the contents of the `.fuse` section in the ELF file by using this command line:

```
avr-objdump -s -j .fuse <ELF file>
```

The section contents shows the address on the left, then the data going from lower address to a higher address, left to right.

22.16 <avr/interrupt.h>: Interrupts

Global manipulation of the interrupt flag

The global interrupt flag is maintained in the I bit of the status register (SREG).

Handling interrupts frequently requires attention regarding atomic access to objects that could be altered by code running within an interrupt context, see <util/atomic.h>.

Frequently, interrupts are being disabled for periods of time in order to perform certain operations without being disturbed; see [Problems with reordering code](#) for things to be taken into account with respect to compiler optimizations.

- `#define sei()`
- `#define cli()`

Macros for writing interrupt handler functions

- `#define ISR(vector, attributes)`
- `#define SIGNAL(vector)`
- `#define EMPTY_INTERRUPT(vector)`
- `#define ISR_ALIAS(vector, target_vector)`
- `#define reti()`
- `#define BADISR_vect`

ISR attributes

- `#define ISR_BLOCK`
- `#define ISR_NOBLOCK`
- `#define ISR_NAKED`
- `#define ISR_ALIASOF(target_vector)`

22.16.1 Detailed Description

Note

This discussion of interrupts was originally taken from Rich Neswold's document. See [Acknowledgments](#).

Introduction to avr-libc's interrupt handling

It's nearly impossible to find compilers that agree on how to handle interrupt code. Since the C language tries to stay away from machine dependent details, each compiler writer is forced to design their method of support.

In the AVR-GCC environment, the vector table is predefined to point to interrupt routines with predetermined names. By using the appropriate name, your routine will be called when the corresponding interrupt occurs. The device library provides a set of default interrupt routines, which will get used if you don't define your own.

Patching into the vector table is only one part of the problem. The compiler uses, by convention, a set of registers when it's normally executing compiler-generated code. It's important that these registers, as well as the status register, get saved and restored. The extra code needed to do this is enabled by tagging the interrupt function with `__attribute__((signal))`.

These details seem to make interrupt routines a little messy, but all these details are handled by the Interrupt API. An interrupt routine is defined with `ISR()`. This macro registers and marks the routine as an interrupt handler for the specified peripheral. The following is an example definition of a handler for the ADC interrupt.

```
#include <avr/interrupt.h>

ISR(ADC_vect)
{
    // user code here
}
```

Refer to the chapter explaining [assembler programming](#) for an explanation about interrupt routines written solely in assembler language.

Catch-all interrupt vector

If an unexpected interrupt occurs (interrupt is enabled and no handler is installed, which usually indicates a bug), then the default action is to reset the device by jumping to the reset vector. You can override this by supplying a function named `BADISR_vect` which should be defined with `ISR()` as such. (The name `BADISR_vect` is actually an alias for `__vector_default`. The latter must be used inside assembly code in case `<avr/interrupt.h>` is not included.)

```
#include <avr/interrupt.h>

ISR(BADISR_vect)
{
    // user code here
}
```

Nested interrupts

The AVR hardware clears the global interrupt flag in `SREG` before entering an interrupt vector. Thus, normally interrupts will remain disabled inside the handler until the handler exits, where the `RETI` instruction (that is emitted by the compiler as part of the normal function epilogue for an interrupt handler) will eventually re-enable further interrupts. For that reason, interrupt handlers normally do not nest. For most interrupt handlers, this is the desired behaviour, for some it is even required in order to prevent infinitely recursive interrupts (like UART interrupts, or level-triggered external interrupts). In rare circumstances though it might be desired to re-enable the global interrupt flag as early as possible in the interrupt handler, in order to not defer any other interrupt more than absolutely needed. This could be done using an `sei()` instruction right at the beginning of the interrupt handler, but this still leaves few instructions inside the compiler-generated function prologue to run with global interrupts disabled. The compiler can be instructed to insert an `SEI` instruction right at the beginning of an interrupt handler by declaring the handler the following way:

```
ISR(XXX_vect, ISR_NOBLOCK)
{
    ...
}
```

where `XXX_vect` is the name of a valid interrupt vector for the MCU type in question, as explained below.

Two vectors sharing the same code

In some circumstances, the actions to be taken upon two different interrupts might be completely identical so a single implementation for the ISR would suffice. For example, pin-change interrupts arriving from two different ports could logically signal an event that is independent from the actual port (and thus interrupt vector) where it happened. Sharing interrupt vector code can be accomplished using the `ISR_ALIASOF()` attribute to the `ISR` macro:

```
ISR(PCINT0_vect)
{
    ...
    // Code to handle the event.
}

ISR(PCINT1_vect, ISR_ALIASOF(PCINT0_vect));
```

Note

There is no body to the aliased ISR.

Note that the `ISR_ALIASOF()` feature requires GCC 4.2 or above (or a patched version of GCC 4.1.x). See the documentation of the `ISR_ALIAS()` macro for an implementation which is less elegant but could be applied to all compiler versions.

Empty interrupt service routines

In rare circumstances, in interrupt vector does not need any code to be implemented at all. The vector must be declared anyway, so when the interrupt triggers it won't execute the `BADISR_vect` code (which by default restarts the application).

This could for example be the case for interrupts that are solely enabled for the purpose of getting the controller out of `sleep_mode()`.

A handler for such an interrupt vector can be declared using the `EMPTY_INTERRUPT()` macro:

```
EMPTY_INTERRUPT (ADC_vect);
```

Note

There is no body to this macro.

Manually defined ISRs

In some circumstances, the compiler-generated prologue and epilogue of the ISR might not be optimal for the job, and a manually defined ISR could be considered particularly to speedup the interrupt handling.

One solution to this could be to implement the entire ISR as manual assembly code in a separate (assembly) file. See [Combining C and assembly source files](#) for an example of how to implement it that way.

Another solution is to still implement the ISR in C language but take over the compiler's job of generating the prologue and epilogue. This can be done using the `ISR_NAKED` attribute to the `ISR()` macro. Note that the compiler does not generate *anything* as prologue or epilogue, so the final `reti()` must be provided by the actual implementation. `SREG` must be manually saved if the ISR code modifies it, and the compiler-implied assumption of `zero_reg` always being 0 could be wrong (e. g. when interrupting right after of a `MUL` instruction).

```
ISR(TIMER1_OVF_vect, ISR_NAKED)
{
    PORTB |= _BV(0); // results in SBI which does not affect SREG
    reti();
}
```

Choosing the vector: Interrupt vector names

The interrupt is chosen by supplying one of the symbols in following table.

There are currently two different styles present for naming the vectors. One form uses names starting with `SIG_`, followed by a relatively verbose but arbitrarily chosen name describing the interrupt vector. This has been the only available style in `avr-libc` up to version 1.2.x.

Starting with `avr-libc` version 1.4.0, a second style of interrupt vector names has been added, where a short phrase for the vector description is followed by `_vect`. The short phrase matches the vector name as described in the datasheet of the respective device (and in Atmel's XML files), with spaces replaced by an underscore and other non-alphanumeric characters dropped. Using the suffix `_vect` is intended to improve portability to other C compilers available for the AVR that use a similar naming convention.

The historical naming style might become deprecated in a future release, so it is not recommended for new projects.

Note

The `ISR()` macro cannot really spell-check the argument passed to them. Thus, by misspelling one of the names below in a call to `ISR()`, a function will be created that, while possibly being usable as an interrupt function, is not actually wired into the interrupt vector table. The compiler will generate a warning if it detects a suspiciously looking name of a `ISR()` function (i.e. one that after macro replacement does not start with `"__vector_"`).

Vector name	Old vector name	Description	Applicable for device
ADC_vect	SIG_ADC	ADC Conversion Complete	AT90S2333, AT90S4433, AT90S4434, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny13, ATtiny15, ATtiny26, ATtiny43U, ATtiny48, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85, ATtiny261, ATtiny461, ATtiny861, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
ANALOG_COMP_0_vect	SIG_COMPARATOR0	Analog Comparator 0	AT90PWM3, AT90PWM2, AT90PWM1
ANALOG_COMP_1_vect	SIG_COMPARATOR1	Analog Comparator 1	AT90PWM3, AT90PWM2, AT90PWM1
ANALOG_COMP_2_vect	SIG_COMPARATOR2	Analog Comparator 2	AT90PWM3, AT90PWM2, AT90PWM1
ANALOG_COMP_vect	SIG_COMPARATOR	Analog Comparator	AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
ANA_COMP_vect	SIG_COMPARATOR	Analog Comparator	AT90S1200, AT90S2313, AT90S2333, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, ATmega16, ATmega161, ATmega162, ATmega163, ATmega32, ATmega323, ATmega8, ATmega8515, ATmega8535, ATtiny11, ATtiny12, ATtiny13, ATtiny15, ATtiny2313, ATtiny26, ATtiny28, ATtiny43U, ATtiny48, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85, ATtiny261, ATtiny461, ATtiny861
CANIT_vect	SIG_CAN_INTERRUPT1	CAN Transfer Complete or Error	AT90CAN128, AT90CAN32, AT90CAN64

EEPROM_READY_vect	SIG_EEPROM_READY, SIG_EE_READY		ATtiny2313
EE_RDY_vect	SIG_EEPROM_READY	EEPROM Ready	AT90S2333, AT90S4433, AT90S4434, AT90S8535, ATmega16, ATmega161, ATmega162, ATmega163, ATmega32, ATmega323, ATmega8, ATmega8515, ATmega8535, ATtiny12, ATtiny13, ATtiny15, ATtiny26, ATtiny43U, ATtiny48, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85, ATtiny261, ATtiny461, ATtiny861
EE_READY_vect	SIG_EEPROM_READY	EEPROM Ready	AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega406, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
EXT_INT0_vect	SIG_INTERRUPT0	External Interrupt Request 0	ATtiny24, ATtiny44, ATtiny84
INT0_vect	SIG_INTERRUPT0	External Interrupt 0	AT90S1200, AT90S2313, AT90S2323, AT90S2333, AT90S2343, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega406, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny11, ATtiny12, ATtiny13, ATtiny15, ATtiny22, ATtiny2313, ATtiny26, ATtiny28, ATtiny43U, ATtiny48, ATtiny45, ATtiny25, ATtiny85, ATtiny261, ATtiny461, ATtiny861, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646

INT1_vect	SIG_INTERRUPT1	External Interrupt Request 1	AT90S2313, AT90S2333, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega168P, ATmega32, ATmega323, ATmega328P, ATmega32HVB, ATmega406, ATmega48P, ATmega64, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny2313, ATtiny28, ATtiny48, ATtiny261, ATtiny461, ATtiny861, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
INT2_vect	SIG_INTERRUPT2	External Interrupt Request 2	AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega32, ATmega323, ATmega32HVB, ATmega406, ATmega64, ATmega8515, ATmega8535, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
INT3_vect	SIG_INTERRUPT3	External Interrupt Request 3	AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega32HVB, ATmega406, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
INT4_vect	SIG_INTERRUPT4	External Interrupt Request 4	AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
INT5_vect	SIG_INTERRUPT5	External Interrupt Request 5	AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
INT6_vect	SIG_INTERRUPT6	External Interrupt Request 6	AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
INT7_vect	SIG_INTERRUPT7	External Interrupt Request 7	AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
IO_PINS_vect	SIG_PIN, SIG_PIN_CHANGE	External Interrupt Request 0	ATtiny11, ATtiny12, ATtiny15, ATtiny26

LCD_vect	SIG_LCD	LCD Start of Frame	ATmega169, ATmega169P, ATmega329, ATmega3290, ATmega3290P, ATmega649, ATmega6490
LOWLEVEL_I-O_PINS_vect	SIG_PIN	Low-level Input on Port B	ATtiny28
OVRIT_vect	SIG_CAN_OVERFLOW1	CAN Timer Over-run	AT90CAN128, AT90CAN32, AT90CAN64
PCINT0_vect	SIG_PIN_CHANGE0	Pin Change Interrupt Request 0	ATmega162, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega406, ATmega48P, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny13, ATtiny43U, ATtiny48, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
PCINT1_vect	SIG_PIN_CHANGE1	Pin Change Interrupt Request 1	ATmega162, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega406, ATmega48P, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny43U, ATtiny48, ATtiny24, ATtiny44, ATtiny84, AT90USB162, AT90USB82
PCINT2_vect	SIG_PIN_CHANGE2	Pin Change Interrupt Request 2	ATmega3250, ATmega3250P, ATmega328P, ATmega3290, ATmega3290P, ATmega48P, ATmega6450, ATmega6490, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny48
PCINT3_vect	SIG_PIN_CHANGE3	Pin Change Interrupt Request 3	ATmega3250, ATmega3250P, ATmega3290, ATmega3290P, ATmega6450, ATmega6490, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny48
PCINT_vect	SIG_PIN_CHANGE, SIG_PCINT		ATtiny2313, ATtiny261, ATtiny461, ATtiny861
PSC0_CAPT_vect	SIG_PSC0_CAPTURE	PSC0 Capture Event	AT90PWM3, AT90PWM2, AT90PWM1
PSC0_EC_vect	SIG_PSC0_END_CYCLE	PSC0 End Cycle	AT90PWM3, AT90PWM2, AT90PWM1
PSC1_CAPT_vect	SIG_PSC1_CAPTURE	PSC1 Capture Event	AT90PWM3, AT90PWM2, AT90PWM1
PSC1_EC_vect	SIG_PSC1_END_CYCLE	PSC1 End Cycle	AT90PWM3, AT90PWM2, AT90PWM1
PSC2_CAPT_vect	SIG_PSC2_CAPTURE	PSC2 Capture Event	AT90PWM3, AT90PWM2, AT90PWM1
PSC2_EC_vect	SIG_PSC2_END_CYCLE	PSC2 End Cycle	AT90PWM3, AT90PWM2, AT90PWM1

SPI_STC_vect	SIG_SPI	Serial Transfer Complete	AT90S2333, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny48, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
SPM_RDY_vect	SIG_SPM_READY	Store Program Memory Ready	ATmega16, ATmega162, ATmega32, ATmega323, ATmega8, ATmega8515, ATmega8535
SPM_READY_vect	SIG_SPM_READY	Store Program Memory Read	AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega406, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIM0_COMP-A_vect	SIG_OUTPUT_COMPAR-E0A	Timer/Counter Compare Match A	ATtiny13, ATtiny43U, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85
TIM0_COMP-B_vect	SIG_OUTPUT_COMPAR-E0B	Timer/Counter Compare Match B	ATtiny13, ATtiny43U, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85
TIM0_OVF_vect	SIG_OVERFLOW0	Timer/Counter0 Overflow	ATtiny13, ATtiny43U, ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85
TIM1_CAPT_vect	SIG_INPUT_CAPTURE1	Timer/Counter1 Capture Event	ATtiny24, ATtiny44, ATtiny84
TIM1_COMP-A_vect	SIG_OUTPUT_COMPAR-E1A	Timer/Counter1 Compare Match A	ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85
TIM1_COMP-B_vect	SIG_OUTPUT_COMPAR-E1B	Timer/Counter1 Compare Match B	ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85
TIM1_OVF_vect	SIG_OVERFLOW1	Timer/Counter1 Overflow	ATtiny24, ATtiny44, ATtiny84, ATtiny45, ATtiny25, ATtiny85
TIMER0_CAPT_vect	SIG_INPUT_CAPTURE0	ADC Conversion Complete	ATtiny261, ATtiny461, ATtiny861

TIMER0_CO- MPA_vect	SIG_OUTPU- T_COMPAR- E0A	TimerCounter0 Compare Match A	ATmega168, ATmega48, ATmega88, A- Tmega640, ATmega1280, ATmega1281, A- Tmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny2313, ATtiny48, A- Ttiny261, ATtiny461, ATtiny861, AT90US- B162, AT90USB82, AT90USB1287, AT90U- SB1286, AT90USB647, AT90USB646
TIMER0_CO- MPB_vect	SIG_OUT- PUT_CO- MPARE0B, SIG_OUTPU- T_COMPAR- E0_B	Timer Counter 0 Compare Match B	AT90PWM3, AT90PWM2, AT90PWM1, A- Tmega1284P, ATmega168P, ATmega328P, ATmega32HVB, ATmega48P, ATmega88P, ATmega168, ATmega48, ATmega88, A- Tmega640, ATmega1280, ATmega1281, A- Tmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny2313, ATtiny48, A- Ttiny261, ATtiny461, ATtiny861, AT90US- B162, AT90USB82, AT90USB1287, AT90U- SB1286, AT90USB647, AT90USB646
TIMER0_CO- MP_A_vect	SIG_OUT- PUT_CO- MPARE0A, SIG_OUTPU- T_COMPAR- E0_A	Timer/Counter0 Compare Match A	AT90PWM3, AT90PWM2, AT90PWM1
TIMER0_CO- MP_vect	SIG_OUTPU- T_COMPAR- E0	Timer/Counter0 Compare Match	AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega16, A- Tmega161, ATmega162, ATmega165, A- Tmega165P, ATmega169, ATmega169P, A- Tmega32, ATmega323, ATmega325, A- Tmega3250, ATmega3250P, ATmega329, ATmega3290, ATmega3290P, ATmega64, ATmega645, ATmega6450, ATmega649, A- Tmega6490, ATmega8515, ATmega8535
TIMER0_OV- F0_vect	SIG_OVERFL- OW0	Timer/Counter0 Overflow	AT90S2313, AT90S2323, AT90S2343, A- Ttiny22, ATtiny26
TIMER0_OVF- _vect	SIG_OVERFL- OW0	Timer/Counter0 Overflow	AT90S1200, AT90S2333, AT90S4414, A- T90S4433, AT90S4434, AT90S8515, AT90- S8535, AT90PWM216, AT90PWM2B, AT90- PWM316, AT90PWM3B, AT90PWM3, A- T90PWM2, AT90PWM1, AT90CAN128, A- T90CAN32, AT90CAN64, ATmega103, A- Tmega128, ATmega1284P, ATmega16, A- Tmega161, ATmega162, ATmega163, A- Tmega165, ATmega165P, ATmega168P, A- Tmega169, ATmega169P, ATmega32, A- Tmega323, ATmega325, ATmega3250, A- Tmega3250P, ATmega328P, ATmega329, A- Tmega3290, ATmega3290P, ATmega32HV- B, ATmega48P, ATmega64, ATmega645, A- Tmega6450, ATmega649, ATmega6490, A- Tmega8, ATmega8515, ATmega8535, A- Tmega88P, ATmega168, ATmega48, A- Tmega88, ATmega640, ATmega1280, A- Tmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny11, A- Ttiny12, ATtiny15, ATtiny2313, ATtiny28, A- Ttiny48, ATtiny261, ATtiny461, ATtiny861, A- T90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90US- B646
TIMER1_CAP- T1_vect	SIG_INPUT_- CAPTURE1	Timer/Counter1 Capture Event	AT90S2313

TIMER1_CAPT_vect	SIG_INPUT_CAPTURE1	Timer/Counter Capture Event	AT90S2333, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny2313, ATtiny48, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER1_CMPA_vect	SIG_OUTPUT_COMPARE1A	Timer/Counter1 Compare Match 1A	ATtiny26
TIMER1_CMPB_vect	SIG_OUTPUT_COMPARE1B	Timer/Counter1 Compare Match 1B	ATtiny26
TIMER1_COMP1_vect	SIG_OUTPUT_COMPARE1A	Timer/Counter1 Compare Match	AT90S2313
TIMER1_COMP1_vect	SIG_OUTPUT_COMPARE1A	Timer/Counter1 Compare Match A	AT90S4414, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HV-B, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny2313, ATtiny48, ATtiny261, ATtiny461, ATtiny861, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646

TIMER1_CO- MPB_vect	SIG_OUTPU- T_COMPAR- E1B	Timer/Counter1 Compare MatchB	AT90S4414, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny2313, ATtiny48, ATtiny261, ATtiny461, ATtiny861, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER1_CO- MPC_vect	SIG_OUTPU- T_COMPAR- E1C	Timer/Counter1 Compare Match C	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER1_CO- MPD_vect	SIG_OUTPU- T_COMPAR- E0D	Timer/Counter1 Compare Match D	ATtiny261, ATtiny461, ATtiny861
TIMER1_CO- MP_vect	SIG_OUTPU- T_COMPAR- E1A	Timer/Counter1 Compare Match	AT90S2333, AT90S4433, ATtiny15
TIMER1_OV- F1_vect	SIG_OVERFL- OW1	Timer/Counter1 Overflow	AT90S2313, ATtiny26
TIMER1_OVF- _vect	SIG_OVERFL- OW1	Timer/Counter1 Overflow	AT90S2333, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, AT90PWM216, AT90PWM2B, AT90PWM316, AT90PWM3B, AT90PWM3, AT90PWM2, AT90PWM1, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega32HVB, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8515, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny15, ATtiny2313, ATtiny48, ATtiny261, ATtiny461, ATtiny861, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646

TIMER2_CO-MPA_vect	SIG_OUTPU-T_COMPAR-E2A	Timer/Counter2 Compare Match A	ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER2_CO-MPB_vect	SIG_OUTPU-T_COMPAR-E2B	Timer/Counter2 Compare Match A	ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER2_CO-MP_vect	SIG_OUTPU-T_COMPAR-E2	Timer/Counter2 Compare Match	AT90S4434, AT90S8535, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega329, ATmega3290, ATmega3290P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8535
TIMER2_OVF-_vect	SIG_OVERFLOW2	Timer/Counter2 Overflow	AT90S4434, AT90S8535, AT90CAN128, AT90CAN32, AT90CAN64, ATmega103, ATmega128, ATmega1284P, ATmega16, ATmega161, ATmega162, ATmega163, ATmega165, ATmega165P, ATmega168P, ATmega169, ATmega169P, ATmega32, ATmega323, ATmega325, ATmega3250, ATmega3250P, ATmega328P, ATmega329, ATmega3290, ATmega3290P, ATmega48P, ATmega64, ATmega645, ATmega6450, ATmega649, ATmega6490, ATmega8, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER3_CAP-T_vect	SIG_INPUT_CAPTURE3	Timer/Counter3 Capture Event	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega162, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER3_CO-MPA_vect	SIG_OUTPU-T_COMPAR-E3A	Timer/Counter3 Compare Match A	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega162, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER3_CO-MPB_vect	SIG_OUTPU-T_COMPAR-E3B	Timer/Counter3 Compare Match B	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega162, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER3_CO-MPC_vect	SIG_OUTPU-T_COMPAR-E3C	Timer/Counter3 Compare Match C	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646

TIMER3_OVF_vect	SIG_OVERFLOW3	Timer/Counter3 Overflow	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega162, ATmega64, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TIMER4_CAPT_vect	SIG_INPUT_CAPTURE4	Timer/Counter4 Capture Event	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER4_COMPACT_vect	SIG_OUTPUT_COMPARE4A	Timer/Counter4 Compare Match A	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER4_COMPB_vect	SIG_OUTPUT_COMPARE4B	Timer/Counter4 Compare Match B	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER4_COMPC_vect	SIG_OUTPUT_COMPARE4C	Timer/Counter4 Compare Match C	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER4_OVF_vect	SIG_OVERFLOW4	Timer/Counter4 Overflow	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER5_CAPT_vect	SIG_INPUT_CAPTURE5	Timer/Counter5 Capture Event	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER5_COMPACT_vect	SIG_OUTPUT_COMPARE5A	Timer/Counter5 Compare Match A	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER5_COMPB_vect	SIG_OUTPUT_COMPARE5B	Timer/Counter5 Compare Match B	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER5_COMPC_vect	SIG_OUTPUT_COMPARE5C	Timer/Counter5 Compare Match C	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TIMER5_OVF_vect	SIG_OVERFLOW5	Timer/Counter5 Overflow	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
TWI_vect	SIG_2WIRE_SERIAL	2-wire Serial Interface	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega16, ATmega163, ATmega168P, ATmega32, ATmega323, ATmega328P, ATmega32HVB, ATmega406, ATmega48P, ATmega64, ATmega8, ATmega8535, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATtiny48, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
TXDONE_vect	SIG_TXDONE	Transmission Done, Bit Timer Flag 2 Interrupt	AT86RF401
TXEMPTY_vect	SIG_TXBE	Transmit Buffer Empty, Bit Timer Flag 0 Interrupt	AT86RF401
UART0_RX_vect	SIG_UART0_RECV	UART0, Rx Complete	ATmega161
UART0_TX_vect	SIG_UART0_TRANS	UART0, Tx Complete	ATmega161
UART0_UDRE_vect	SIG_UART0_DATA	UART0 Data Register Empty	ATmega161
UART1_RX_vect	SIG_UART1_RECV	UART1, Rx Complete	ATmega161
UART1_TX_vect	SIG_UART1_TRANS	UART1, Tx Complete	ATmega161
UART1_UDRE_vect	SIG_UART1_DATA	UART1 Data Register Empty	ATmega161
UART_RX_vect	SIG_UART_RECV	UART, Rx Complete	AT90S2313, AT90S2333, AT90S4414, AT90S4433, AT90S4434, AT90S8515, AT90S8535, ATmega103, ATmega163, ATmega8515

UART_TX_ _vect	SIG_UART_T- RANS	UART, Tx Com- plete	AT90S2313, AT90S2333, AT90S4414, A- T90S4433, AT90S4434, AT90S8515, A- T90S8535, ATmega103, ATmega163, A- Tmega8515
UART_UDRE- _vect	SIG_UART_D- ATA	UART Data Reg- ister Empty	AT90S2313, AT90S2333, AT90S4414, A- T90S4433, AT90S4434, AT90S8515, A- T90S8535, ATmega103, ATmega163, A- Tmega8515
USART0_RX- C_vect	SIG_USART0- _RECV	USART0, Rx Complete	ATmega162
USART0_RX- _vect	SIG_USART0- _RECV	USART0, Rx Complete	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega165, ATmega165P, ATmega169, ATmega169P, ATmega325, ATmega329, ATmega64, A- Tmega645, ATmega649, ATmega640, A- Tmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644
USART0_TX- C_vect	SIG_USART0- _TRANS	USART0, Tx Complete	ATmega162
USART0_TX- _vect	SIG_USART0- _TRANS	USART0, Tx Complete	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega165, ATmega165P, ATmega169, ATmega169P, ATmega325, ATmega3250, ATmega3250P, ATmega329, ATmega3290, ATmega3290P, ATmega64, ATmega645, ATmega6450, A- Tmega649, ATmega6490, ATmega640, A- Tmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644
USART0_UD- RE_vect	SIG_USART0- _DATA	USART0 Data Register Empty	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega162, ATmega165, ATmega165P, ATmega169, A- Tmega169P, ATmega325, ATmega329, A- Tmega64, ATmega645, ATmega649, A- Tmega640, ATmega1280, ATmega1281, A- Tmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644
USART1_RX- C_vect	SIG_USART1- _RECV	USART1, Rx Complete	ATmega162
USART1_RX- _vect	SIG_USART1- _RECV	USART1, Rx Complete	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega64, A- Tmega640, ATmega1280, ATmega1281, A- Tmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90US- B646
USART1_TX- C_vect	SIG_USART1- _TRANS	USART1, Tx Complete	ATmega162
USART1_TX- _vect	SIG_USART1- _TRANS	USART1, Tx Complete	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega64, A- Tmega640, ATmega1280, ATmega1281, A- Tmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90US- B646
USART1_UD- RE_vect	SIG_USART1- _DATA	USART1, Data Register Empty	AT90CAN128, AT90CAN32, AT90CAN64, ATmega128, ATmega1284P, ATmega162, ATmega64, ATmega640, ATmega1280, A- Tmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644- P, ATmega644, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90US- B647, AT90USB646
USART2_RX- _vect	SIG_USART2- _RECV	USART2, Rx Complete	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561

USART2_TX_ vect	SIG_USART2- _TRANS	USART2, Tx Complete	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
USART2_UD- RE_vect	SIG_USART2- _DATA	USART2 Data register Empty	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
USART3_RX_ vect	SIG_USART3- _RECV	USART3, Rx Complete	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
USART3_TX_ vect	SIG_USART3- _TRANS	USART3, Tx Complete	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
USART3_UD- RE_vect	SIG_USART3- _DATA	USART3 Data register Empty	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
USART_RXC- vect	SIG_USA- RT_RECV, SIG_UART_R- ECV	USART, Rx Com- plete	ATmega16, ATmega32, ATmega323, A- Tmega8
USART_RX_ vect	SIG_USA- RT_RECV, SIG_UART_R- ECV	USART, Rx Com- plete	AT90PWM3, AT90PWM2, AT90PWM1, A- Tmega168P, ATmega3250, ATmega3250P, ATmega328P, ATmega3290, ATmega3290- P, ATmega48P, ATmega6450, ATmega6490, ATmega8535, ATmega88P, ATmega168, A- Tmega48, ATmega88, ATtiny2313
USART_TXC- vect	SIG_USAR- T_TRANS, SIG_UART_T- RANS	USART, Tx Com- plete	ATmega16, ATmega32, ATmega323, A- Tmega8
USART_TX_ vect	SIG_USAR- T_TRANS, SIG_UART_T- RANS	USART, Tx Com- plete	AT90PWM3, AT90PWM2, AT90PWM1, A- Tmega168P, ATmega328P, ATmega48P, A- Tmega8535, ATmega88P, ATmega168, A- Tmega48, ATmega88, ATtiny2313
USART_UDR- E_vect	SIG_USA- RT_DATA, SIG_UART_D- ATA	USART Data Register Empty	AT90PWM3, AT90PWM2, AT90PWM1, A- Tmega16, ATmega168P, ATmega32, A- Tmega323, ATmega3250, ATmega3250P, ATmega328P, ATmega3290, ATmega3290- P, ATmega48P, ATmega6450, ATmega6490, ATmega8, ATmega8535, ATmega88P, A- Tmega168, ATmega48, ATmega88, A- Ttiny2313
USI_OVERFLOW_ vect	SIG_USI_OV- ERFLOW	USI Overflow	ATmega165, ATmega165P, ATmega169, A- Tmega169P, ATmega325, ATmega3250, A- Tmega3250P, ATmega329, ATmega3290, ATmega3290P, ATmega645, ATmega6450, ATmega649, ATmega6490, ATtiny2313
USI_OVF_vect	SIG_USI_OV- ERFLOW	USI Overflow	ATtiny26, ATtiny43U, ATtiny24, ATtiny44, A- Ttiny84, ATtiny45, ATtiny25, ATtiny85, A- Ttiny261, ATtiny461, ATtiny861
USI_START_ vect	SIG_USI_ST- ART	USI Start Condi- tion	ATmega165, ATmega165P, ATmega169, A- Tmega169P, ATmega325, ATmega3250, A- Tmega3250P, ATmega329, ATmega3290, ATmega3290P, ATmega645, ATmega6450, ATmega649, ATmega6490, ATtiny2313, A- Ttiny43U, ATtiny45, ATtiny25, ATtiny85, A- Ttiny261, ATtiny461, ATtiny861
USI_STRT_ vect	SIG_USI_ST- ART	USI Start	ATtiny26
USI_STR_vect	SIG_USI_ST- ART	USI START	ATtiny24, ATtiny44, ATtiny84
WATCHDOG_ vect	SIG_WATCH- DOG_TIMEO- UT	Watchdog Time- out	ATtiny24, ATtiny44, ATtiny84
WDT_OVERFLOW_ vect	SIG_WAT- CHDOG_ TIMEOUT, SIG_WDT_O- VERFLOW	Watchdog Timer Overflow	ATtiny2313

WDT_vect	SIG_WDT, SIG_WATCHDOG_TIMEOUT	Watchdog Time-out Interrupt	AT90PWM3, AT90PWM2, AT90PWM1, ATmega1284P, ATmega168P, ATmega328P, ATmega32HVB, ATmega406, ATmega48P, ATmega88P, ATmega168, ATmega48, ATmega88, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega324P, ATmega164P, ATmega644P, ATmega644, ATmega16HVA, ATtiny13, ATtiny43U, ATtiny48, ATtiny45, ATtiny25, ATtiny85, ATtiny261, ATtiny461, ATtiny861, AT90USB162, AT90USB82, AT90USB1287, AT90USB1286, AT90USB647, AT90USB646
----------	-------------------------------	-----------------------------	--

22.16.2 Macro Definition Documentation

22.16.2.1 #define BADISR_vect

```
#include <avr/interrupt.h>
```

This is a vector which is aliased to `__vector_default`, the vector executed when an ISR fires with no accompanying ISR handler. This may be used along with the `ISR()` macro to create a catch-all for undefined but used ISRs for debugging purposes.

22.16.2.2 #define cli()

Disables all interrupts by clearing the global interrupt mask. This function actually compiles into a single line of assembly, so there is no function call overhead. However, the macro also implies a *memory barrier* which can cause additional loss of optimization.

In order to implement atomic access to multi-byte objects, consider using the macros from `<util/atomic.h>`, rather than implementing them manually with `cli()` and `sei()`.

22.16.2.3 #define EMPTY_INTERRUPT(vector)

Defines an empty interrupt handler function. This will not generate any prolog or epilog code and will only return from the ISR. Do not define a function body as this will define it for you. Example:

```
EMPTY_INTERRUPT(ADC_vect);
```

22.16.2.4 #define ISR(vector, attributes)

Introduces an interrupt handler function (interrupt service routine) that runs with global interrupts initially disabled by default with no attributes specified.

The attributes are optional and alter the behaviour and resultant generated code of the interrupt routine. Multiple attributes may be used for a single function, with a space separating each attribute.

Valid attributes are `ISR_BLOCK`, `ISR_NOBLOCK`, `ISR_NAKED` and `ISR_ALIASOF(vect)`.

`vector` must be one of the interrupt vector names that are valid for the particular MCU type.

22.16.2.5 #define ISR_ALIAS(vector, target_vector)

Aliases a given vector to another one in the same manner as the `ISR_ALIASOF` attribute for the `ISR()` macro. Unlike the `ISR_ALIASOF` attribute macro however, this is compatible for all versions of GCC rather than just GCC version 4.2 onwards.

Note

This macro creates a trampoline function for the aliased macro. This will result in a two cycle penalty for the aliased vector compared to the ISR the vector is aliased to, due to the JMP/RJMP opcode used.

Deprecated For new code, the use of ISR(..., ISR_ALIASOF(...)) is recommended.

Example:

```
ISR(INT0_vect)
{
    PORTB = 42;
}

ISR_ALIAS(INT1_vect, INT0_vect);
```

22.16.2.6 #define ISR_ALIASOF(*target_vector*)

The ISR is linked to another ISR, specified by the vect parameter. This is compatible with GCC 4.2 and greater only.

Use this attribute in the attributes parameter of the ISR macro.

22.16.2.7 #define ISR_BLOCK

Identical to an ISR with no attributes specified. Global interrupts are initially disabled by the AVR hardware when entering the ISR, without the compiler modifying this state.

Use this attribute in the attributes parameter of the ISR macro.

22.16.2.8 #define ISR_NAKED

ISR is created with no prologue or epilogue code. The user code is responsible for preservation of the machine state including the SREG register, as well as placing a [reti\(\)](#) at the end of the interrupt routine.

Use this attribute in the attributes parameter of the ISR macro.

22.16.2.9 #define ISR_NOBLOCK

ISR runs with global interrupts initially enabled. The interrupt enable flag is activated by the compiler as early as possible within the ISR to ensure minimal processing delay for nested interrupts.

This may be used to create nested ISRs, however care should be taken to avoid stack overflows, or to avoid infinitely entering the ISR for those cases where the AVR hardware does not clear the respective interrupt flag before entering the ISR.

Use this attribute in the attributes parameter of the ISR macro.

22.16.2.10 #define reti()

Returns from an interrupt routine, enabling global interrupts. This should be the last command executed before leaving an ISR defined with the ISR_NAKED attribute.

This macro actually compiles into a single line of assembly, so there is no function call overhead.

22.16.2.11 #define sei()

Enables interrupts by setting the global interrupt mask. This function actually compiles into a single line of assembly, so there is no function call overhead. However, the macro also implies a *memory barrier* which can cause additional loss of optimization.

In order to implement atomic access to multi-byte objects, consider using the macros from <util/atomic.h>, rather than implementing them manually with [cli\(\)](#) and [sei\(\)](#).

22.16.2.12 #define SIGNAL(*vector*)

Introduces an interrupt handler function that runs with global interrupts initially disabled.

This is the same as the ISR macro without optional attributes.

Deprecated Do not use [SIGNAL\(\)](#) in new code. Use [ISR\(\)](#) instead.

22.17 <avr/io.h>: AVR device-specific IO definitions

```
#include <avr/io.h>
```

This header file includes the appropriate IO definitions for the device that has been specified by the `-mmcu=` compiler command-line switch. This is done by diverting to the appropriate file `<avr/ioXXXX.h>` which should never be included directly. Some register names common to all AVR devices are defined directly within `<avr/common.h>`, which is included in `<avr/io.h>`, but most of the details come from the respective include file.

Note that this file always includes the following files:

```
#include <avr/sfr_defs.h>
#include <avr/portpins.h>
#include <avr/common.h>
#include <avr/version.h>
```

See [<avr/sfr_defs.h>: Special function registers](#) for more details about that header file.

Included are definitions of the IO register set and their respective bit values as specified in the Atmel documentation. Note that inconsistencies in naming conventions, so even identical functions sometimes get different names on different devices.

Also included are the specific names useable for interrupt function definitions as documented [here](#).

Finally, the following macros are defined:

- **RAMEND**
The last on-chip RAM address.
- **XRAMEND**
The last possible RAM location that is addressable. This is equal to RAMEND for devices that do not allow for external RAM. For devices that allow external RAM, this will be larger than RAMEND.
- **E2END**
The last EEPROM address.
- **FLASHEND**
The last byte address in the Flash program space.
- **SPM_PAGESIZE**
For devices with bootloader support, the flash pagesize (in bytes) to be used for the SPM instruction.
- **E2PAGESIZE**
The size of the EEPROM page.

22.18 <avr/lock.h>: Lockbit Support

\par Introduction

The Lockbit API allows a user to specify the lockbit settings for the specific AVR device they are compiling for. These lockbit settings will be placed in a special section in the ELF output file, after linking.

Programming tools can take advantage of the lockbit information embedded in the ELF file, by extracting this information and determining if the lockbits need to be programmed after programming the Flash and EEPROM memories. This also allows a single ELF file to contain all the information needed to program an AVR.

To use the Lockbit API, include the <avr/io.h> header file, which in turn automatically includes the individual I/O header file and the <avr/lock.h> file. These other two files provides everything necessary to set the AVR lockbits.

\par Lockbit API

Each I/O header file may define up to 3 macros that controls what kinds of lockbits are available to the user.

If `__LOCK_BITS_EXIST` is defined, then two lock bits are available to the user and 3 mode settings are defined for these two bits.

If `__BOOT_LOCK_BITS_0_EXIST` is defined, then the two BLB0 lock bits are available to the user and 4 mode settings are defined for these two bits.

If `__BOOT_LOCK_BITS_1_EXIST` is defined, then the two BLB1 lock bits are available to the user and 4 mode settings are defined for these two bits.

If `__BOOT_LOCK_APPLICATION_TABLE_BITS_EXIST` is defined then two lock bits are available to set the locking mode for the Application Table Section (which is used in the XMEGA family).

If `__BOOT_LOCK_APPLICATION_BITS_EXIST` is defined then two lock bits are available to set the locking mode for the Application Section (which is used in the XMEGA family).

If `__BOOT_LOCK_BOOT_BITS_EXIST` is defined then two lock bits are available to set the locking mode for the Boot Loader Section (which is used in the XMEGA family).

The AVR lockbit modes have inverted values, logical 1 for an unprogrammed (disabled) bit and logical 0 for a programmed (enabled) bit. The defined macros for each individual lock bit represent this in their definition by a bit-wise inversion of a mask. For example, the `LB_MODE_3` macro is defined as:

```
@code
#define LB_MODE_3    (0xFC)
```

,

To combine the lockbit mode macros together to represent a whole byte, use the bitwise AND operator, like so:

```
@code
(LB_MODE_3 & BLB0_MODE_2)
\endcode
```

<avr/lock.h> also defines a macro that provides a default lockbit value: `LOCKBITS_DEFAULT` which is defined to be `0xFF`.

See the AVR device specific datasheet for more details about these lock bits and the available mode settings.

A convenience macro, LOCKMEM, is defined as a GCC attribute for a custom-named section of ".lock".

A convenience macro, LOCKBITS, is defined that declares a variable, __lock, of type unsigned char with the attribute defined by LOCKMEM. This variable allows the end user to easily set the lockbit data.

\note If a device-specific I/O header file has previously defined LOCKMEM, then LOCKMEM is not redefined. If a device-specific I/O header file has previously defined LOCKBITS, then LOCKBITS is not redefined. LOCKBITS is currently known to be defined in the I/O header files for the XMEGA devices.

\par API Usage Example

Putting all of this together is easy:

```
@code
#include <avr/io.h>

LOCKBITS = (LB_MODE_1 & BLB0_MODE_3 & BLB1_MODE_4);

int main(void)
{
    return 0;
}
\endcode
```

Or:

```
@code
#include <avr/io.h>

unsigned char __lock __attribute__((section (".lock"))) =
    (LB_MODE_1 & BLB0_MODE_3 & BLB1_MODE_4);

int main(void)
{
    return 0;
}
\endcode
```

However there are a number of caveats that you need to be aware of to use this API properly.

Be sure to include <avr/io.h> to get all of the definitions for the API. The LOCKBITS macro defines a global variable to store the lockbit data. This variable is assigned to its own linker section. Assign the desired lockbit values immediately in the variable initialization.

The .lock section in the ELF file will get its values from the initial variable assignment ONLY. This means that you can NOT assign values to this variable in functions and the new values will not be put into the ELF .lock section.

The global variable is declared in the LOCKBITS macro has two leading underscores, which means that it is reserved for the "implementation", meaning the library, so it will not conflict with a user-named variable.

You must initialize the lockbit variable to some meaningful value, even if it is the default value. This is because the lockbits default to a logical 1, meaning unprogrammed. Normal uninitialized data defaults to all logical zeros. So it is vital that all lockbits are initialized, even with default data. If they are not, then the lockbits may not be programmed to the desired settings and can possibly put your device into an unrecoverable state.

Be sure to have the -mmcu=device flag in your compile command line and your linker command line to have the correct device selected and to have

the correct I/O header file included when you include `<avr/io.h>`.

You can print out the contents of the `.lock` section in the ELF file by using this command line:

```
@code
```

```
avr-objdump -s -j .lock <ELF file>
```

```
\endcode
```

22.19 <avr/pgmspace.h>: Program Space Utilities

Macros

- #define `PROGMEM __ATTR_PROGMEM__`
- #define `PGM_P` const char *
- #define `PGM_VOID_P` const void *
- #define `PSTR(s)` ((const `PROGMEM` char *) (s))
- #define `pgm_read_byte_near`(address_short) `__LPM__((uint16_t)(address_short))`
- #define `pgm_read_word_near`(address_short) `__LPM_word__((uint16_t)(address_short))`
- #define `pgm_read_dword_near`(address_short) `__LPM_dword__((uint16_t)(address_short))`
- #define `pgm_read_float_near`(address_short) `__LPM_float__((uint16_t)(address_short))`
- #define `pgm_read_byte_far`(address_long) `__ELPM__((uint32_t)(address_long))`
- #define `pgm_read_word_far`(address_long) `__ELPM_word__((uint32_t)(address_long))`
- #define `pgm_read_dword_far`(address_long) `__ELPM_dword__((uint32_t)(address_long))`
- #define `pgm_read_float_far`(address_long) `__ELPM_float__((uint32_t)(address_long))`
- #define `pgm_read_byte`(address_short) `pgm_read_byte_near`(address_short)
- #define `pgm_read_word`(address_short) `pgm_read_word_near`(address_short)
- #define `pgm_read_dword`(address_short) `pgm_read_dword_near`(address_short)
- #define `pgm_read_float`(address_short) `pgm_read_float_near`(address_short)

Typedefs

- typedef void `PROGMEM prog_void`
- typedef char `PROGMEM prog_char`
- typedef unsigned char `PROGMEM prog_uchar`
- typedef `int8_t` `PROGMEM prog_int8_t`
- typedef `uint8_t` `PROGMEM prog_uint8_t`
- typedef `int16_t` `PROGMEM prog_int16_t`
- typedef `uint16_t` `PROGMEM prog_uint16_t`
- typedef `int32_t` `PROGMEM prog_int32_t`
- typedef `uint32_t` `PROGMEM prog_uint32_t`
- typedef `int64_t` `PROGMEM prog_int64_t`
- typedef `uint64_t` `PROGMEM prog_uint64_t`

Functions

- char * `strtok_P` (char *s, `PGM_P` delim)
- int `memcmp_PF` (const void *, `uint_farptr_t` src, size_t len) `__ATTR_PURE__`
- void * `memcpy_PF` (void *dest, `uint_farptr_t` src, size_t len)
- int `strcasecmp_PF` (const char *s1, `uint_farptr_t` s2) `__ATTR_PURE__`
- char * `strcat_PF` (char *dest, `uint_farptr_t` src)
- int `strcmp_PF` (const char *s1, `uint_farptr_t` s2) `__ATTR_PURE__`
- char * `strcpy_PF` (char *dest, `uint_farptr_t` src)
- size_t `strlcat_PF` (char *dst, `uint_farptr_t` src, size_t siz)
- size_t `strncpy_PF` (char *dst, `uint_farptr_t` src, size_t siz)
- size_t `strlen_PF` (`uint_farptr_t` src)
- int `strncasecmp_PF` (const char *s1, `uint_farptr_t` s2, size_t n) `__ATTR_PURE__`
- char * `strncat_PF` (char *dest, `uint_farptr_t` src, size_t len)
- int `strncmp_PF` (const char *s1, `uint_farptr_t` s2, size_t n) `__ATTR_PURE__`
- char * `strncpy_PF` (char *dest, `uint_farptr_t` src, size_t len)
- size_t `strnlen_PF` (`uint_farptr_t` src, size_t len)
- char * `strstr_PF` (const char *s1, `uint_farptr_t` s2)

22.19.1 Detailed Description

```
#include <avr/io.h>
#include <avr/pgmspace.h>
```

The functions in this module provide interfaces for a program to access data stored in program space (flash memory) of the device. In order to use these functions, the target device must support either the `LPM` or `ELPM` instructions.

Note

These functions are an attempt to provide some compatibility with header files that come with IAR C, to make porting applications between different compilers easier. This is not 100% compatibility though (GCC does not have full support for multiple address spaces yet).

If you are working with strings which are completely based in ram, use the standard string functions described in [<string.h>: Strings](#).

If possible, put your constant tables in the lower 64 KB and use [pgm_read_byte_near\(\)](#) or [pgm_read_word_near\(\)](#) instead of [pgm_read_byte_far\(\)](#) or [pgm_read_word_far\(\)](#) since it is more efficient that way, and you can still use the upper 64K for executable code. All functions that are suffixed with a `_P` *require* their arguments to be in the lower 64 KB of the flash ROM, as they do not use `ELPM` instructions. This is normally not a big concern as the linker setup arranges any program space constants declared using the macros from this header file so they are placed right after the interrupt vectors, and in front of any executable code. However, it can become a problem if there are too many of these constants, or for bootloaders on devices with more than 64 KB of ROM. *All these functions will not work in that situation.*

For **Xmega** devices, make sure the NVM controller command register (`NVM_CMD` or `NVM_CMD`) is set to 0x00 (NOP) before using any of these functions.

22.19.2 Macro Definition Documentation

22.19.2.1 `#define PGM_P const char *`

Used to declare a variable that is a pointer to a string in program space.

22.19.2.2 `#define pgm_read_byte(address_short) pgm_read_byte_near(address_short)`

Read a byte from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.3 `#define pgm_read_byte_far(address_long) __ELPM((uint32_t)(address_long))`

Read a byte from the program space with a 32-bit (far) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.4 `#define pgm_read_byte_near(address_short) __LPM((uint16_t)(address_short))`

Read a byte from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.5 `#define pgm_read_dword(address_short) pgm_read_dword_near(address_short)`

Read a double word from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.6 `#define pgm_read_dword_far(address_long) __ELPM_dword((uint32_t)(address_long))`

Read a double word from the program space with a 32-bit (far) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.7 `#define pgm_read_dword_near(address_short) __LPM_dword((uint16_t)(address_short))`

Read a double word from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.8 `#define pgm_read_float(address_short) pgm_read_float_near(address_short)`

Read a float from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.9 `#define pgm_read_float_far(address_long) __ELPM_float((uint32_t)(address_long))`

Read a float from the program space with a 32-bit (far) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.10 `#define pgm_read_float_near(address_short) __LPM_float((uint16_t)(address_short))`

Read a float from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.11 `#define pgm_read_word(address_short) pgm_read_word_near(address_short)`

Read a word from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.12 `#define pgm_read_word_far(address_long) __ELPM_word((uint32_t)(address_long))`

Read a word from the program space with a 32-bit (far) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.13 `#define pgm_read_word_near(address_short) __LPM_word((uint16_t)(address_short))`

Read a word from the program space with a 16-bit (near) address.

Note

The address is a byte address. The address is in the program space.

22.19.2.14 `#define PGM_VOID_P const void *`

Used to declare a generic pointer to an object in program space.

22.19.2.15 `#define PROGMEM __ATTR_PROGMEM__`

Attribute to use in order to declare an object being located in flash ROM.

22.19.2.16 `#define PSTR(s) ((const PROGMEM char *)(s))`

Used to declare a static pointer to a string in program space.

22.19.3 Typedef Documentation

22.19.3.1 `prog_char`

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmemb** attribute on a type is not supported in GCC. However, the use of the **progmemb** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including [<avr/pgmspace.h>](#) (either by a `#define` directive, or by a `-D` compiler option.)

Type of a "char" object located in flash ROM.

22.19.3.2 `prog_int16_t`

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmemb** attribute on a type is not supported in GCC. However, the use of the **progmemb** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including [<avr/pgmspace.h>](#) (either by a `#define` directive, or by a `-D` compiler option.)

Type of an "int16_t" object located in flash ROM.

22.19.3.3 prog_int32_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "int32_t" object located in flash ROM.

22.19.3.4 prog_int64_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "int64_t" object located in flash ROM.

Note

This type is not available when the compiler option -mint8 is in effect.

22.19.3.5 prog_int8_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "int8_t" object located in flash ROM.

22.19.3.6 prog_uchar

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "unsigned char" object located in flash ROM.

22.19.3.7 prog_uint16_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "uint16_t" object located in flash ROM.

22.19.3.8 prog_uint32_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "uint32_t" object located in flash ROM.

22.19.3.9 prog_uint64_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "uint64_t" object located in flash ROM.

Note

This type is not available when the compiler option -mint8 is in effect.

22.19.3.10 prog_uint8_t

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of an "uint8_t" object located in flash ROM.

22.19.3.11 prog_void

Note

DEPRECATED

This typedef is now deprecated because the usage of the **progmem** attribute on a type is not supported in GCC. However, the use of the **progmem** attribute on a variable declaration is supported, and this is now the recommended usage.

The typedef is only visible if the macro **PROG_TYPES_COMPAT** has been defined before including <avr/pgmspace.h> (either by a #define directive, or by a -D compiler option.)

Type of a "void" object located in flash ROM. Does not make much sense by itself, but can be used to declare a "void *" object in flash ROM.

22.19.4 Function Documentation

22.19.4.1 int memcmp_PF (const void * s1, uint_farptr_t s2, size_t len)

Compare memory areas.

The [memcmp_PF\(\)](#) function compares the first `len` bytes of the memory areas `s1` and flash `s2`. The comparison is performed using unsigned char operations. It is an equivalent of `memcmp_P()` function, except that it is capable working on all FLASH including the extended area above 64kB.

Returns

The [memcmp_PF\(\)](#) function returns an integer less than, equal to, or greater than zero if the first `len` bytes of `s1` is found, respectively, to be less than, to match, or be greater than the first `len` bytes of `s2`.

22.19.4.2 void * memcpy_PF (void * dest, uint_farptr_t src, size_t n)

Copy a memory block from flash to SRAM.

The [memcpy_PF\(\)](#) function is similar to [memcpy\(\)](#), except the data is copied from the program space and is addressed using a far pointer

```
\param dst A pointer to the destination buffer
\param src A far pointer to the origin of data in flash memory
\param n The number of bytes to be copied
```

Returns

The [memcpy_PF\(\)](#) function returns a pointer to `dst`. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.3 int strcasecmp_PF (const char * s1, uint_farptr_t s2)

Compare two strings ignoring case.

The [strcasecmp_PF\(\)](#) function compares the two strings `s1` and `s2`, ignoring the case of the characters

Parameters

<code>s1</code>	A pointer to the first string in SRAM
<code>s2</code>	A far pointer to the second string in Flash

Returns

The `strcasecmp_PF()` function returns an integer less than, equal to, or greater than zero if *s1* is found, respectively, to be less than, to match, or be greater than *s2*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.4 `char * strcat_PF (char * dst, uint_farptr_t src)`

Concatenates two strings.

The `strcat_PF()` function is similar to `strcat()` except that the *src* string must be located in program space (flash) and is addressed using a far pointer

Parameters

<i>dst</i>	A pointer to the destination string in SRAM
<i>src</i>	A far pointer to the string to be appended in Flash

Returns

The `strcat_PF()` function returns a pointer to the resulting string *dst*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.5 `int strcmp_PF (const char * s1, uint_farptr_t s2)`

Compares two strings.

The `strcmp_PF()` function is similar to `strcmp()` except that *s2* is a far pointer to a string in program space

Parameters

<i>s1</i>	A pointer to the first string in SRAM
<i>s2</i>	A far pointer to the second string in Flash

Returns

The `strcmp_PF()` function returns an integer less than, equal to, or greater than zero if *s1* is found, respectively, to be less than, to match, or be greater than *s2*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.6 `char * strcpy_PF (char * dst, uint_farptr_t src)`

Duplicate a string.

The `strcpy_PF()` function is similar to `strcpy()` except that *src* is a far pointer to a string in program space

Parameters

<i>dst</i>	A pointer to the destination string in SRAM
<i>src</i>	A far pointer to the source string in Flash

Returns

The `strcpy_PF()` function returns a pointer to the destination string *dst*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.7 `size_t strlcat_PF (char * dst, uint_farptr_t src, size_t n)`

Concatenate two strings.

The `strlcat_PF()` function is similar to `strlcat()`, except that the `src` string must be located in program space (flash) and is addressed using a far pointer

Appends `src` to string `dst` of size `n` (unlike `strncat()`, `n` is the full size of `dst`, not space left). At most `n-1` characters will be copied. Always NULL terminates (unless `n <= strlen(dst)`)

Parameters

<code>dst</code>	A pointer to the destination string in SRAM
<code>src</code>	A far pointer to the source string in Flash
<code>n</code>	The total number of bytes allocated to the destination string

Returns

The `strlcat_PF()` function returns `strlen(src) + MIN(n, strlen(initial dst))`. If `retval >= n`, truncation occurred. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.8 `size_t strlcpy_PF (char * dst, uint_farptr_t src, size_t siz)`

Copy a string from progmem to RAM.

Copy `src` to string `dst` of size `siz`. At most `siz-1` characters will be copied. Always NULL terminates (unless `siz == 0`).

Returns

The `strlcpy_PF()` function returns `strlen(src)`. If `retval >= siz`, truncation occurred. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.9 `size_t strlen_PF (uint_farptr_t s)`

Obtain the length of a string.

The `strlen_PF()` function is similar to `strlen()`, except that `s` is a far pointer to a string in program space

Parameters

<code>s</code>	A far pointer to the string in flash
----------------	--------------------------------------

Returns

The `strlen_PF()` function returns the number of characters in `s`. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.10 `int strncasecmp_PF (const char * s1, uint_farptr_t s2, size_t n)`

Compare two strings ignoring case.

The `strncasecmp_PF()` function is similar to `strncasecmp_PF()`, except it only compares the first `n` characters of `s1` and the string in flash is addressed using a far pointer

Parameters

<i>s1</i>	A pointer to a string in SRAM
<i>s2</i>	A far pointer to a string in Flash
<i>n</i>	The maximum number of bytes to compare

Returns

The [strncasecmp_PF\(\)](#) function returns an integer less than, equal to, or greater than zero if *s1* (or the first *n* bytes thereof) is found, respectively, to be less than, to match, or be greater than *s2*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.11 `char * strncat_PF (char * dst, uint_farptr_t src, size_t n)`

Concatenate two strings.

The [strncat_PF\(\)](#) function is similar to [strncat\(\)](#), except that the *src* string must be located in program space (flash) and is addressed using a far pointer

Parameters

<i>dst</i>	A pointer to the destination string in SRAM
<i>src</i>	A far pointer to the source string in Flash
<i>n</i>	The maximum number of bytes to append

Returns

The [strncat_PF\(\)](#) function returns a pointer to the resulting string *dst*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.12 `int strncmp_PF (const char * s1, uint_farptr_t s2, size_t n)`

Compare two strings with limited length.

The [strncmp_PF\(\)](#) function is similar to [strcmp_PF\(\)](#) except it only compares the first (at most) *n* characters of *s1* and *s2*

Parameters

<i>s1</i>	A pointer to the first string in SRAM
<i>s2</i>	A far pointer to the second string in Flash
<i>n</i>	The maximum number of bytes to compare

Returns

The [strncmp_PF\(\)](#) function returns an integer less than, equal to, or greater than zero if *s1* (or the first *n* bytes thereof) is found, respectively, to be less than, to match, or be greater than *s2*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.13 `char * strncpy_PF (char * dst, uint_farptr_t src, size_t n)`

Duplicate a string until a limited length.

The [strncpy_PF\(\)](#) function is similar to [strcpy_PF\(\)](#) except that not more than *n* bytes of *src* are copied. Thus, if there is no null byte among the first *n* bytes of *src*, the result will not be null-terminated

In the case where the length of *src* is less than that of *n*, the remainder of *dst* will be padded with nulls

Parameters

<i>dst</i>	A pointer to the destination string in SRAM
<i>src</i>	A far pointer to the source string in Flash
<i>n</i>	The maximum number of bytes to copy

Returns

The [strncpy_PF\(\)](#) function returns a pointer to the destination string *dst*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.14 `size_t strlen_PF (uint_farptr_t s, size_t len)`

Determine the length of a fixed-size string.

The [strlen_PF\(\)](#) function is similar to [strlen\(\)](#), except that *s* is a far pointer to a string in program space

Parameters

<i>s</i>	A far pointer to the string in Flash
<i>len</i>	The maximum number of length to return

Returns

The [strlen_PF](#) function returns [strlen_P\(s\)](#), if that is less than *len*, or *len* if there is no '\0' character among the first *len* characters pointed to by *s*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.15 `char * strstr_PF (const char * s1, uint_farptr_t s2)`

Locate a substring.

The [strstr_PF\(\)](#) function finds the first occurrence of the substring *s2* in the string *s1*. The terminating '\0' characters are not compared. The [strstr_PF\(\)](#) function is similar to [strstr\(\)](#) except that *s2* is a far pointer to a string in program space.

Returns

The [strstr_PF\(\)](#) function returns a pointer to the beginning of the substring, or NULL if the substring is not found. If *s2* points to a string of zero length, the function returns *s1*. The contents of RAMPZ SFR are undefined when the function returns

22.19.4.16 `char* strtok_P (char * s, PGM_P delim)`

Parses the string into tokens.

[strtok_P\(\)](#) parses the string *s* into tokens. The first call to [strtok_P\(\)](#) should have *s* as its first argument. Subsequent calls should have the first argument set to NULL. If a token ends with a delimiter, this delimiting character is overwritten with a '\0' and a pointer to the next character is saved for the next call to [strtok_P\(\)](#). The delimiter string *delim* may be different for each call.

The [strtok_P\(\)](#) function is similar to [strtok\(\)](#) except that *delim* is pointer to a string in program space.

Returns

The [strtok_P\(\)](#) function returns a pointer to the next token or NULL when no more tokens are found.

Note

[strtok_P\(\)](#) is NOT reentrant. For a reentrant version of this function see [strtok_rP\(\)](#).

22.20 <avr/power.h>: Power Reduction Management

```
#include <avr/power.h>
```

Many AVR devices contain a Power Reduction Register (PRR) or Registers (PRRx) that allow you to reduce power consumption by disabling or enabling various on-board peripherals as needed.

There are many macros in this header file that provide an easy interface to enable or disable on-board peripherals to reduce power. See the table below.

Note

Not all AVR devices have a Power Reduction Register (for example the ATmega128). On those devices without a Power Reduction Register, these macros are not available.

Not all AVR devices contain the same peripherals (for example, the LCD interface), or they will be named differently (for example, USART and USART0). Please consult your device's datasheet, or the header file, to find out which macros are applicable to your device.

Power Macro	Description	Applicable for device
power_aca_disable()	Disable The Analog Comparator On PortA	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_aca_enable()	Enable The Analog Comparator On PortA	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_acb_disable()	Disable The Analog Comparator On PortB	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_acb_enable()	Enable The Analog Comparator On PortB	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_adc_disable()	Disable the Analog to Digital Converter module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega48, ATmega48A, ATmega48PA, ATmega48P, ATmega88, ATmega88A, ATmega88P, ATmega88PA, ATmega168, ATmega168A, ATmega168P, ATmega168PA, ATmega328, ATmega328P, ATtiny48, ATtiny88, ATtiny828, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, ATtiny4, ATtiny5, ATtiny9, ATtiny10, ATtiny13A, ATtiny20, ATtiny40

power_adc_enable()	Enable the Analog to Digital Converter module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega48, ATmega48A, ATmega48PA, ATmega48P, ATmega88, ATmega88A, ATmega88P, ATmega88PA, ATmega168, ATmega168A, ATmega168P, ATmega168PA, ATmega328, ATmega328P, ATtiny48, ATtiny88, ATtiny828, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, ATtiny4, ATtiny5, ATtiny9, ATtiny10, ATtiny13A, ATtiny20, ATtiny40
--------------------	--	--

power_adca_disable()	Disable the Analog to Digital Converter module On PortA	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_adca_enable()	Enable the Analog to Digital Converter module On PortA	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_adcb_disable()	Disable the Analog to Digital Converter module On PortB	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_adcb_enable()	Enable the Analog to Digital Converter module On PortB	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_aes_disable()	Disable the AES module	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA, AT90SCR100

power_aes_enable()	Enable the AES module	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4U, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA, AT90SCR100
power_all_disable()	Disable all modules.	ATxmega384C3, ATxmega256A3BU, ATxmega16A4U, ATxmega32A4U, ATxmega64A3U, ATxmega64A4U, ATxmega128A3U, ATxmega128A4U, ATxmega192A3U, ATxmega256A3U, ATxmega384C3, ATxmega256A3BU, ATxmega16A4U, ATxmega32A4U, ATxmega64A3U, ATxmega64A4U, ATxmega128A3U, ATxmega128A4U, ATxmega192A3U, ATxmega256A3U, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega64D4, ATxmega128D4, ATxmega16D4, ATxmega32D4, ATxmega64D3, ATxmega128D3, ATxmega192D3, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny828, ATtiny841, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P,
Generated on Fri Aug 17 2012 13:58:14 for avr-libc by Doxygen		ATtiny84, ATtiny84A, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P,

power_all_enable()	Enable all modules.	ATxmega384C3, ATxmega256A3BU, ATxmega16A4U, ATxmega32A4U, ATxmega64A3U, ATxmega64A4U, ATxmega128A3U, ATxmega128A4U, ATxmega192A3U, ATxmega256A3U, ATxmega384C3, ATxmega256A3BU, ATxmega16A4U, ATxmega32A4U, ATxmega64A3U, ATxmega64A4U, ATxmega128A3U, ATxmega128A4U, ATxmega192A3U, ATxmega256A3U, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega64D4, ATxmega128D4, ATxmega16D4, ATxmega32D4, ATxmega64D3, ATxmega128D3, ATxmega192D3, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny828, ATtiny841, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATA5790, ATA5790N, ATA5795, ATA5831, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny4, ATtiny5, ATtiny9, ATtiny10, ATtiny13A, ATtiny20, ATtiny40
--------------------	---------------------	---

power_can_disable()	Disable the CAN module	ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1
power_can_enable()	Enable the CAN module	ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1
power_cinterface_disable()	Disable the CINTERFACE module	ATA5790, ATA5790N, ATA5795
power_cinterface_enable()	Enable the CINTERFACE module	ATA5790, ATA5790N, ATA5795
power_clock_output_disable()	Enable clock output module	ATA5831
power_clock_output_enable()	Enable clock output module	ATA5831
power_cpld_disable()	Disable CPLD module	ATxmega32E5
power_cpld_enable()	Enable CPLD module	ATxmega32E5
power_crc_disable()	Disable CRC module	ATA5831
power_crc_enable()	Enable CRC module	ATA5831
power_crypto_disable()	Disable the CRYPTO module	ATA5790, ATA5790N, ATA5795
power_crypto_enable()	Enable the CRYPTO module	ATA5790, ATA5790N, ATA5795
power_ctm_disable()	Disable CTM module	ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_ctm_enable()	Enable CTM module	ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_daca_disable()	Disable the DAC module on PortA	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega32E5, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_daca_enable()	Enable the DAC module on PortA	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega32E5, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_dacb_disable()	Disable the DAC module on PortB	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_dacb_enable()	Enable the DAC module on PortB	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_data_fifo_disable()	Disable data FIFO	ATA5831
power_data_fifo_enable()	Enable data FIFO	ATA5831
power_dma_disable()	Disable the DMA module	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_dma_enable()	Enable the DMA module	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_ebi_disable()	Disable the EBI module	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_ebi_enable()	Enable the EBI module	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_evsys_disable()	Disable the EVSYS module	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_evsys_enable()	Enable the EVSYS module	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_hiresc_disable()	Disable the HIRES module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_hiresc_enable()	Enable the HIRES module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_hiresd_disable()	Disable the HIRES module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_hiresd_enable()	Enable the HIRES module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_hirese_disable()	Disable the HIRES module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_hires_enable()	Enable the HIRES module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_hiresf_disable()	Disable the HIRES module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_hiresf_enable()	Enable the HIRES module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_hsspi_disable()	Disable the HSPPI module	AT90SCR100
power_hsspi_enable()	Enable the HSPPI module	AT90SCR100
power_id_scan_disable()	Disable ID Scan	ATA5831
power_id_scan_enable()	Enable ID Scan	ATA5831
power_irdriver_disable()	Disable the IRDRIVER module	ATA5790, ATA5790N, ATA5795
power_irdriver_enable()	Enable the IRDRIVER module	ATA5790, ATA5790N, ATA5795
power_kb_disable()	Disable the KB module	AT90SCR100
power_kb_enable()	Enable the KB module	AT90SCR100
power_lcd_disable()	Disable the LCD module.	ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P
power_lcd_enable()	Enable the LCD module.	ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P
power_lfreceiver_disable()	Disable the LFRECEIVER module	ATA5790, ATA5790N
power_lfreceiver_enable()	Enable the LFRECEIVER module	ATA5790, ATA5790N
power_lin_disable()	Disable the LIN module	ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272
power_lin_enable()	Enable the LIN module	ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272
power_pga_disable()	Disable PGA module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_pga_enable()	Enable PGA module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_preamble_rssi_fifo_disable()	Disable preamble/RSSI FIFO	ATA5831
power_preamble_rssi_fifo_enable()	Enable preamble/RSSI FIFO	ATA5831

power_psc0_disable()	Disable the Power Stage Controller 0 module.	AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316
power_psc0_enable()	Enable the Power Stage Controller 0 module.	AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316
power_psc1_disable()	Disable the Power Stage Controller 1 module.	AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316
power_psc1_enable()	Enable the Power Stage Controller 1 module.	AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316
power_psc2_disable()	Disable the Power Stage Controller 2 module.	AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161
power_psc2_enable()	Enable the Power Stage Controller 2 module.	AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161
power_psc_disable()	Disable the Power Stage Controller module	ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1
power_psc_enable()	Enable the Power Stage Controller module	ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1
power_pscr_disable()	Disable the Reduced Power Stage Controller module.	AT90PWM81, AT90PWM161
power_pscr_enable()	Enable the Reduced Power Stage Controller module.	AT90PWM81, AT90PWM161
power_ram0_disable()	Disable Ram0 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_ram0_enable()	Enable Ram0 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_ram1_disable()	Disable Ram1 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_ram1_enable()	Enable Ram1 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_ram2_disable()	Disable Ram2 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_ram2_enable()	Enable Ram2 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2

power_ram3_disable()	Disable Ram3 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_ram3_enable()	Enable Ram3 module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
power_receive_dsp_control_disable()	Disable Receive DSP control module	ATA5831
power_receive_dsp_control_enable()	Enable Receive DSP control module	ATA5831
power_rssi_buffer_disable()	Disable RSSI buffer	ATA5831
power_rssi_buffer_enable()	Enable RSSI buffer	ATA5831
power_rtc_disable()	Disable the RTC module	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_rtc_enable()	Enable the RTC module	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_sci_disable()	Disable the SCI module	AT90SCR100
power_sci_enable()	Enable the SCI module	AT90SCR100
power_sequencer_state_machine_disable()	Disable power sequencer state machine	ATA5831
power_sequencer_state_machine_enable()	Enable power sequencer state machine	ATA5831
power_spi_disable()	Disable the Serial Peripheral Interface module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega48, ATmega48A, ATmega48PA, ATmega48P, ATmega88, ATmega88A, ATmega88P, ATmega88PA, ATmega168, ATmega168A, ATmega168P, ATmega168PA, ATmega328, ATmega328P, ATtiny48, ATtiny88, ATtiny828, ATtiny841, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATA5790, ATA5790N, ATA5795, ATA5831,
Generated on Fri Aug 17 2012 13:58:14 for avr-libc by Doxygen		ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny20,

power_spi_enable()	Enable the Serial Peripheral Interface module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega48, ATmega48A, ATmega48PA, ATmega48P, ATmega88, ATmega88A, ATmega88P, ATmega88PA, ATmega168, ATmega168A, ATmega168P, ATmega168PA, ATmega328, ATmega328P, ATtiny48, ATtiny88, ATtiny828, ATtiny841, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATA5790, ATA5790N, ATA5795, ATA5831, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny20, ATtiny40
--------------------	--	---

power_spic_disable()	Disable the SPI module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_spic_disalbe()	Disable SPI module on PortC	ATxmega32E5
power_spic_enable()	Enable the SPI module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_spid_disable()	Disable the SPI module on PortD	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_spid_enable()	Enable the SPI module on PortD	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_spie_disable()	Disable the SPI module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_spie_enable()	Enable the SPI module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_spif_disable()	Disable the SPI module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_spif_enable()	Enable the SPI module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc0c_disable()	Disable the TC0 module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc0c_enable()	Enable the TC0 module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc0d_disable()	Disable the TC0 module on PortD	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc0d_enable()	Enable the TC0 module on PortD	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc0e_disable()	Disable the TC0 module on PortE	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc0e_enable()	Enable the TC0 module on PortE	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc0f_disable()	Disable the TC0 module on PortF	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc0f_enable()	Enable the TC0 module on PortF	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc1c_disable()	Disable the TC1 module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc1c_enable()	Enable the TC1 module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc1d_disable()	Disable the TC1 module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega32E5, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc1d_enable()	Enable the TC1 module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega32E5, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc1e_disable()	Disable the TC1 module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc1e_enable()	Enable the TC1 module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_tc1f_disable()	Disable the TC1 module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_tc1f_enable()	Enable the TC1 module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_timer0_disable()	Disable the Timer 0 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny4, ATtiny5, ATtiny9, ATtiny10, ATtiny13A, ATtiny20, ATtiny40

power_timer0_enable()	Enable the Timer 0 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny4, ATtiny5, ATtiny9, ATtiny10, ATtiny13A, ATtiny20, ATtiny40
-----------------------	----------------------------	---

power_timer1_disable()	Disable the Timer 1 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATA5790, ATA5790N, ATA5795, ATA5831, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny20, ATtiny40
------------------------	-----------------------------	--

power_timer1_enable()	Enable the Timer 1 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny841, ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATA5790, ATA5790N, ATA5795, ATA5831, ATmega16M1, ATmega32C1, ATmega32M1, ATmega64C1, ATmega64M1, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100, ATtiny20, ATtiny40
-----------------------	----------------------------	--

<code>power_timer2_disable()</code>	Disable the Timer 2 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATtiny841, ATmega1284, ATmega1284P, ATA5790, ATA5790N, ATA5795, ATA5831, AT90SCR100
<code>power_timer2_enable()</code>	Enable the Timer 2 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATtiny841, ATmega1284, ATmega1284P, ATA5790, ATA5790N, ATA5795, ATA5831, AT90SCR100
<code>power_timer3_disable()</code>	Disable the Timer 3 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega1284, ATmega1284P, ATA5790, ATA5790N, ATA5795, ATA5831
<code>power_timer3_enable()</code>	Enable the Timer 3 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega1284, ATmega1284P, ATA5790, ATA5790N, ATA5795, ATA5831

<code>power_timer4_disable()</code>	Disable the Timer 4 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, ATA5831
<code>power_timer4_enable()</code>	Enable the Timer 4 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, ATA5831
<code>power_timermodulator_disable()</code>	Disable the TIMERMULATOR module	ATA5790, ATA5790N, ATA5795
<code>power_timermodulator_enable()</code>	Enable the TIMERMULATOR module	ATA5790, ATA5790N, ATA5795
<code>power_transceiver_disable()</code>	Disable transceiver module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
<code>power_transceiver_enable()</code>	Enable transceiver module	ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2
<code>power_transmit_dsp_control_disable()</code>	Disable Transmit DSP control module	ATA5831
<code>power_transmit_dsp_control_enable()</code>	Enable Transmit DSP control module	ATA5831
<code>power_twi_disable()</code>	Disable the Two Wire Interface module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny841, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATtiny1634, AT90SCR100, ATtiny20, ATtiny40

power_twi_enable()	Enable the Two Wire Interface module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega406, ATtiny841, ATmega1284, ATmega1284P, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF, ATtiny1634, AT90SCR100, ATtiny20, ATtiny40
power_twic_disable()	Disable the Two Wire Interface module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_twic_enable()	Enable the Two Wire Interface module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_twid_disable()	Disable the Two Wire Interface module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_twid_enable()	Enable the Two Wire Interface module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_twie_disable()	Disable the Two Wire Interface module on PortE	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_twie_enable()	Enable the Two Wire Interface module on PortE	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

<code>power_twif_disable()</code>	Disable the Two Wire Interface module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
<code>power_twif_enable()</code>	Disable the Two Wire Interface module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
<code>power_tx_modulator_disable()</code>	Disable Tx modulator	ATA5831
<code>power_tx_modulator_enable()</code>	Enable Tx modulator	ATA5831
<code>power_usart0_disable()</code>	Disable the USART 0 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, ATmega32U4, ATmega16U4, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega48, ATmega48A, ATmega48PA, ATmega48P, ATmega88, ATmega88A, ATmega88P, ATmega88PA, ATmega168, ATmega168A, ATmega168P, ATmega168PA, ATmega328, ATmega328P, ATtiny48, ATtiny88, ATtiny828, ATtiny841, ATmega1284, ATmega1284P, ATtiny1634, AT90SCR100

power_usart0_enable()	Enable the USART 0 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, ATmega32U4, ATmega16U4, ATmega165, ATmega165A, ATmega165P, ATmega165PA, ATmega325, ATmega325A, ATmega325PA, ATmega3250, ATmega3250A, ATmega3250PA, ATmega645, ATmega645A, ATmega645P, ATmega6450, ATmega6450A, ATmega6450P, ATmega169, ATmega169A, ATmega169P, ATmega169PA, ATmega329, ATmega329A, ATmega329P, ATmega329PA, ATmega3290, ATmega3290A, ATmega3290P, ATmega3290PA, ATmega649, ATmega649A, ATmega649P, ATmega6490, ATmega6490A, ATmega6490P, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATmega644, ATmega164PA, ATmega48, ATmega48A, ATmega48PA, ATmega48P, ATmega88, ATmega88A, ATmega88P, ATmega88PA, ATmega168, ATmega168A, ATmega168P, ATmega168PA, ATmega328, ATmega328P, ATtiny48, ATtiny88, ATtiny828, ATtiny841, ATmega1284, ATmega1284P, ATtiny1634, AT90SCR100
-----------------------	----------------------------	---

power_usart1_disable()	Disable the USART 1 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATtiny841, ATmega1284P, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2
power_usart1_enable()	Enable the USART 1 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega128RFA1, ATmega256RFR2, ATmega128RFR2, ATmega64RFR2, ATmega256RFA2, ATmega128RFA2, ATmega64RFA2, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, ATmega164A, ATmega164P, ATmega324A, ATmega324P, ATmega324PA, ATmega644P, ATmega644A, ATmega644PA, ATtiny841, ATmega1284P, ATtiny1634, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2
power_usart2_disable()	Disable the USART 2 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
power_usart2_enable()	Enable the USART 2 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
power_usart3_disable()	Disable the USART 3 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
power_usart3_enable()	Enable the USART 3 module.	ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561
power_usart_disable()	Disable the USART module.	AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316
power_usart_enable()	Enable the USART module.	AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316
power_usartc0_disable()	Disable the USART0 module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
Generated on Fri Aug 17 2012 13:58:14 for avr-libc by Doxygen		

power_usartc0_enable()	Enable the USART0 module on PortC	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usartc1_disable()	Disable the USART1 module on PortC	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usartc1_enable()	Enable the USART1 module on PortC	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_usartd0_disable()	Disable the USART0 module on PortD	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usartd0_enable()	Enable the USART0 module on PortD	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega32E5, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_usartd1_disable()	Disable the USART1 module on PortD	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usartd1_enable()	Enable the USART1 module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usarte0_disable()	Disable the USART0 module on PortE	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_usarte0_enable()	Enable the USART0 module on PortE	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usarte1_disable()	Disable the USART1 module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usarte1_enable()	Enable the USART1 module on PortE	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

power_usartf0_disable()	Disable the USART0 module on PortF	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
power_usartf0_enable()	Enable the USART0 module on PortF	ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega16A4, ATxmega16A4U, ATxmega16D4, ATxmega32A4, ATxmega32A4U, ATxmega32D4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega64D3, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega128D3, ATxmega192A3, ATxmega192A3U, ATxmega192D3, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATxmega64D4, ATxmega128D4, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA

<code>power_usartf1_disable()</code>	Disable the USART1 module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
<code>power_usartf1_enable()</code>	Enable the USART1 module on PortF	ATxmega16A4, ATxmega16A4U, ATxmega32A4U, ATxmega32A4, ATxmega64A1, ATxmega64A1U, ATxmega64A3, ATxmega64A3U, ATxmega64A4U, ATxmega128A1, ATxmega128A1U, ATxmega128A3, ATxmega128A3U, ATxmega128A4U, ATxmega192A3, ATxmega192A3U, ATxmega256A3, ATxmega256A3U, ATxmega256A3B, ATxmega256A3BU, ATxmega384C3, ATMXT112SL, ATMXT224, ATMXT224E, ATMXT336S, ATMXT540S, ATMXT540SREVA
<code>power_usb_disable()</code>	Disable the USB module.	ATxmega384C3, ATxmega256A3BU, ATxmega16A4U, ATxmega32A4U, ATxmega64A3U, ATxmega64A4U, ATxmega128A3U, ATxmega128A4U, ATxmega192A3U, ATxmega256A3U, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100
<code>power_usb_enable()</code>	Enable the USB module.	ATxmega384C3, ATxmega256A3BU, ATxmega16A4U, ATxmega32A4U, ATxmega64A3U, ATxmega64A4U, ATxmega128A3U, ATxmega128A4U, ATxmega192A3U, ATxmega256A3U, ATxmega16C4, ATxmega32C4, ATxmega64C3, ATxmega128C3, ATxmega192C3, ATxmega256C3, ATxmega64B1, ATxmega64B3, ATxmega128B1, ATxmega128B3, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATmega32U4, ATmega16U4, ATmega32U6, AT90USB82, AT90USB162, ATmega8U2, ATmega16U2, ATmega32U2, AT90SCR100

power_usbh_disable()	Disable the USBH module	AT90SCR100
power_usbh_enable()	Enable the USBH module	AT90SCR100
power_usi_disable()	Disable the Universal Serial Interface module.	ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634
power_usi_enable()	Enable the Universal Serial Interface module.	ATtiny24, ATtiny24A, ATtiny44, ATtiny44A, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny261A, ATtiny461, ATtiny461A, ATtiny861, ATtiny861A, ATtiny43U, ATtiny167, ATtiny87, ATA5505, ATA5272, ATtiny1634
power_vadc_disable()	Disable the Voltage ADC module.	ATmega406, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF
power_vadc_enable()	Enable the Voltage ADC module.	ATmega406, ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF
power_vmonitor_disable()	Disable the VMONITOR module	ATA5790, ATA5790N, ATA5795
power_vmonitor_enable()	Enable the VMONITOR module	ATA5790, ATA5790N, ATA5795
power_voltage_monitor_disable()	Disable voltage monitor module	ATA5831
power_voltage_monitor_enable()	Enable voltage monitor module	ATA5831
power_vrm_disable()	Disable the VRM module	ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF
power_vrm_enable()	Enable the VRM module	ATmega32HVB, ATmega32HVBREVB, ATmega16HVB, ATmega16HVBREVB, ATmega26HVG, ATmega48HVF

Some of the newer AVR devices contain a System Clock Prescale Register (CLKPR) that allows you to decrease the system clock frequency and the power consumption when the need for processing power is low. Below are two macros and an enumerated type that can be used to interface to the Clock Prescale Register.

Note

Not all AVR devices have a Clock Prescale Register. On those devices without a Clock Prescale Register, these macros are not available.

```
typedef enum
{
    clock_div_1 = 0,
    clock_div_2 = 1,
    clock_div_4 = 2,
    clock_div_8 = 3,
    clock_div_16 = 4,
    clock_div_32 = 5,
    clock_div_64 = 6,
    clock_div_128 = 7,
    clock_div_256 = 8,
    clock_div_1_rc = 15, // ATmega128RFA1 only
} clock_div_t;
```

Clock prescaler setting enumerations.

```
clock_prescale_set(x)
```

Set the clock prescaler register select bits, selecting a system clock division setting. This function is inlined, even if compiler optimizations are disabled.

The type of x is clock_div_t.

```
clock_prescale_get()
```

Gets and returns the clock prescaler register setting. The return type is clock_div_t.

22.21 Additional notes from <avr/sfr_defs.h>

The <avr/sfr_defs.h> file is included by all of the <avr/ioXXXX.h> files, which use macros defined here to make the special function register definitions look like C variables or simple constants, depending on the `_SFR_ASM_COMPAT` define. Some examples from <avr/iocanxx.h> to show how to define such macros:

```
#define PORTA    _SFR_IO8(0x02)
#define EEAR     _SFR_IO16(0x21)
#define UDR0     _SFR_MEM8(0xC6)
#define TCNT3    _SFR_MEM16(0x94)
#define CANIDT   _SFR_MEM32(0xF0)
```

If `_SFR_ASM_COMPAT` is not defined, C programs can use names like `PORTA` directly in C expressions (also on the left side of assignment operators) and GCC will do the right thing (use short I/O instructions if possible). The `__SFR_OFFSET` definition is not used in any way in this case.

Define `_SFR_ASM_COMPAT` as 1 to make these names work as simple constants (addresses of the I/O registers). This is necessary when included in preprocessed assembler (*.S) source files, so it is done automatically if **ASSEMBLER** is defined. By default, all addresses are defined as if they were memory addresses (used in `lds/sts` instructions). To use these addresses in `in/out` instructions, you must subtract 0x20 from them.

For more backwards compatibility, insert the following at the start of your old assembler source file:

```
#define __SFR_OFFSET 0
```

This automatically subtracts 0x20 from I/O space addresses, but it's a hack, so it is recommended to change your source: wrap such addresses in macros defined here, as shown below. After this is done, the `__SFR_OFFSET` definition is no longer necessary and can be removed.

Real example - this code could be used in a boot loader that is portable between devices with `SPMCR` at different addresses.

```
<avr/iom163.h>: #define SPMCR _SFR_IO8(0x37)
<avr/iom128.h>: #define SPMCR _SFR_MEM8(0x68)

#if _SFR_IO_REG_P(SPMCR)
    out    _SFR_IO_ADDR(SPMCR), r24
#else
    sts    _SFR_MEM_ADDR(SPMCR), r24
#endif
```

You can use the `in/out/cbi/sbi/sbic/sbis` instructions, without the `_SFR_IO_REG_P` test, if you know that the register is in the I/O space (as with `SREG`, for example). If it isn't, the assembler will complain (I/O address out of range 0...0x3f), so this should be fairly safe.

If you do not define **SFR_OFFSET** (so it will be 0x20 by default), all special register addresses are defined as memory addresses (so `SREG` is 0x5f), and (if code size and speed are not important, and you don't like the ugly `#if` above) you can always use `lds/sts` to access them. But, this will not work if `SFR_OFFSET != 0x20`, so use a different macro (defined only if `__SFR_OFFSET == 0x20`) for safety:

```
sts    _SFR_ADDR(SPMCR), r24
```

In C programs, all 3 combinations of `_SFR_ASM_COMPAT` and `__SFR_OFFSET` are supported - the `_SFR_ADDR(SPMCR)` macro can be used to get the address of the `SPMCR` register (0x57 or 0x68 depending on device).

22.22 <avr/sfr_defs.h>: Special function registers

Modules

- [Additional notes from <avr/sfr_defs.h>](#)

Bit manipulation

- `#define _BV(bit) (1 << (bit))`

IO register bit manipulation

- `#define bit_is_set(sfr, bit) (_SFR_BYTE(sfr) & _BV(bit))`
- `#define bit_is_clear(sfr, bit) (!(_SFR_BYTE(sfr) & _BV(bit)))`
- `#define loop_until_bit_is_set(sfr, bit) do { } while (bit_is_clear(sfr, bit))`
- `#define loop_until_bit_is_clear(sfr, bit) do { } while (bit_is_set(sfr, bit))`

22.22.1 Detailed Description

When working with microcontrollers, many tasks usually consist of controlling internal peripherals, or external peripherals that are connected to the device. The entire IO address space is made available as *memory-mapped IO*, i.e. it can be accessed using all the MCU instructions that are applicable to normal data memory. For most AVR devices, the IO register space is mapped into the data memory address space with an offset of 0x20 since the bottom of this space is reserved for direct access to the MCU registers. (Actual SRAM is available only behind the IO register area, starting at some specific address depending on the device.)

For example the user can access memory-mapped IO registers as if they were globally defined variables like this:

```
PORTA = 0x33;
unsigned char foo = PINA;
```

The compiler will choose the correct instruction sequence to generate based on the address of the register being accessed.

The advantage of using the memory-mapped registers in C programs is that it makes the programs more portable to other C compilers for the AVR platform.

Note that special care must be taken when accessing some of the 16-bit timer IO registers where access from both the main program and within an interrupt context can happen. See [faq_16bitio](#).

Porting programs that use the deprecated sbi/cbi macros

Access to the AVR single bit set and clear instructions are provided via the standard C bit manipulation commands. The sbi and cbi macros are no longer directly supported. sbi (sfr,bit) can be replaced by `sfr |= _BV(bit)`.

i.e.: `sbi(PORTB, PB1);` is now `PORTB |= _BV(PB1);`

This actually is more flexible than having sbi directly, as the optimizer will use a hardware sbi if appropriate, or a read/or/write operation if not appropriate. You do not need to keep track of which registers sbi/cbi will operate on.

Likewise, cbi (sfr,bit) is now `sfr &= ~(_BV(bit));`

22.22.2 Macro Definition Documentation

22.22.2.1 #define _BV(bit) (1 << (bit))

```
#include <avr/io.h>
```

Converts a bit number into a byte value.

Note

The bit shift is performed by the compiler which then inserts the result into the code. Thus, there is no run-time overhead when using `_BV()`.

22.22.2.2 #define bit_is_clear(sfr, bit) (!(_SFR_BYTE(sfr) & _BV(bit)))

```
#include <avr/io.h>
```

Test whether bit `bit` in IO register `sfr` is clear. This will return non-zero if the bit is clear, and a 0 if the bit is set.

22.22.2.3 #define bit_is_set(sfr, bit) (_SFR_BYTE(sfr) & _BV(bit))

```
#include <avr/io.h>
```

Test whether bit `bit` in IO register `sfr` is set. This will return a 0 if the bit is clear, and non-zero if the bit is set.

22.22.2.4 #define loop_until_bit_is_clear(sfr, bit) do { } while (bit_is_set(sfr, bit))

```
#include <avr/io.h>
```

Wait until bit `bit` in IO register `sfr` is clear.

22.22.2.5 #define loop_until_bit_is_set(sfr, bit) do { } while (bit_is_clear(sfr, bit))

```
#include <avr/io.h>
```

Wait until bit `bit` in IO register `sfr` is set.

22.23 <avr/signature.h>: Signature Support

Introduction

The <avr/signature.h> header file allows the user to automatically and easily include the device's signature data in a special section of the final linked ELF file.

This value can then be used by programming software to compare the on-device signature with the signature recorded in the ELF file to look for a match before programming the device.

API Usage Example

Usage is very simple; just include the header file:

```
#include <avr/signature.h>
```

This will declare a constant unsigned char array and it is initialized with the three signature bytes, MSB first, that are defined in the device I/O header file. This array is then placed in the .signature section in the resulting linked ELF file.

The three signature bytes that are used to initialize the array are these defined macros in the device I/O header file, from MSB to LSB: SIGNATURE_2, SIGNATURE_1, SIGNATURE_0.

This header file should only be included once in an application.

22.24 <avr/sleep.h>: Power Management and Sleep Modes

Functions

- void `sleep_enable` (void)
- void `sleep_disable` (void)
- void `sleep_cpu` (void)

22.24.1 Detailed Description

```
#include <avr/sleep.h>
```

Use of the `SLEEP` instruction can allow an application to reduce its power consumption considerably. AVR devices can be put into different sleep modes. Refer to the datasheet for the details relating to the device you are using.

There are several macros provided in this header file to actually put the device into sleep mode. The simplest way is to optionally set the desired sleep mode using `set_sleep_mode()` (it usually defaults to idle mode where the CPU is put on sleep but all peripheral clocks are still running), and then call `sleep_mode()`. This macro automatically sets the sleep enable bit, goes to sleep, and clears the sleep enable bit.

Example:

```
#include <avr/sleep.h>

...
set_sleep_mode(<mode>);
sleep_mode();
```

Note that unless your purpose is to completely lock the CPU (until a hardware reset), interrupts need to be enabled before going to sleep.

As the `sleep_mode()` macro might cause race conditions in some situations, the individual steps of manipulating the sleep enable (SE) bit, and actually issuing the `SLEEP` instruction, are provided in the macros `sleep_enable()`, `sleep_disable()`, and `sleep_cpu()`. This also allows for test-and-sleep scenarios that take care of not missing the interrupt that will awake the device from sleep.

Example:

```
#include <avr/interrupt.h>
#include <avr/sleep.h>

...
set_sleep_mode(<mode>);
cli();
if (some_condition)
{
    sleep_enable();
    sei();
    sleep_cpu();
    sleep_disable();
}
sei();
```

This sequence ensures an atomic test of `some_condition` with interrupts being disabled. If the condition is met, sleep mode will be prepared, and the `SLEEP` instruction will be scheduled immediately after an `SEI` instruction. As the instruction right after the `SEI` is guaranteed to be executed before an interrupt could trigger, it is sure the device will really be put to sleep.

Some devices have the ability to disable the Brown Out Detector (BOD) before going to sleep. This will also reduce power while sleeping. If the specific AVR device has this ability then an additional macro is defined: `sleep_bod_disable()`. This macro generates inlined assembly code that will correctly implement the timed sequence for

disabling the BOD before sleeping. However, there is a limited number of cycles after the BOD has been disabled that the device can be put into sleep mode, otherwise the BOD will not truly be disabled. Recommended practice is to disable the BOD (`sleep_bod_disable()`), set the interrupts (`sei()`), and then put the device to sleep (`sleep_cpu()`), like so:

```
#include <avr/interrupt.h>
#include <avr/sleep.h>

...
set_sleep_mode(<mode>);
cli();
if (some_condition)
{
    sleep_enable();
    sleep_bod_disable();
    sei();
    sleep_cpu();
    sleep_disable();
}
sei();
```

22.24.2 Function Documentation

22.24.2.1 void sleep_cpu (void)

Put the device into sleep mode. The SE bit must be set beforehand, and it is recommended to clear it afterwards.

22.24.2.2 void sleep_disable (void)

Clear the SE (sleep enable) bit.

22.24.2.3 void sleep_enable (void)

Put the device in sleep mode. How the device is brought out of sleep mode depends on the specific mode selected with the `set_sleep_mode()` function. See the data sheet for your device for more details.

Set the SE (sleep enable) bit.

22.25 <avr/version.h>: avr-libc version macros

Macros

- `#define __AVR_LIBC_VERSION_STRING__ "1.8.0"`
- `#define __AVR_LIBC_VERSION__ 10800UL`
- `#define __AVR_LIBC_DATE_STRING__ "20111228"`
- `#define __AVR_LIBC_DATE__ 20111228UL`
- `#define __AVR_LIBC_MAJOR__ 1`
- `#define __AVR_LIBC_MINOR__ 8`
- `#define __AVR_LIBC_REVISION__ 0`

22.25.1 Detailed Description

```
#include <avr/version.h>
```

This header file defines macros that contain version numbers and strings describing the current version of avr-libc.

The version number itself basically consists of three pieces that are separated by a dot: the major number, the minor number, and the revision number. For development versions (which use an odd minor number), the string representation additionally gets the date code (YYYYMMDD) appended.

This file will also be included by <avr/io.h>. That way, portable tests can be implemented using <avr/io.h> that can be used in code that wants to remain backwards-compatible to library versions prior to the date when the library version API had been added, as referenced but undefined C preprocessor macros automatically evaluate to 0.

22.25.2 Macro Definition Documentation

22.25.2.1 `#define __AVR_LIBC_DATE__ 20111228UL`

Numerical representation of the release date.

22.25.2.2 `#define __AVR_LIBC_DATE_STRING__ "20111228"`

String literal representation of the release date.

22.25.2.3 `#define __AVR_LIBC_MAJOR__ 1`

Library major version number.

22.25.2.4 `#define __AVR_LIBC_MINOR__ 8`

Library minor version number.

22.25.2.5 `#define __AVR_LIBC_REVISION__ 0`

Library revision number.

22.25.2.6 `#define __AVR_LIBC_VERSION__ 10800UL`

Numerical representation of the current library version.

In the numerical representation, the major number is multiplied by 10000, the minor number by 100, and all three parts are then added. It is intended to provide a monotonically increasing numerical value that can easily be used in numerical checks.

22.25.2.7 #define __AVR_LIBC_VERSION_STRING__ "1.8.0"

String literal representation of the current library version.

22.26 <avr/wdt.h>: Watchdog timer handling

Macros

- #define `wdt_reset()` `__asm__ __volatile__ ("wdr")`
- #define `wdt_enable(value)`
- #define `wdt_disable()`
- #define `WDTO_15MS` 0
- #define `WDTO_30MS` 1
- #define `WDTO_60MS` 2
- #define `WDTO_120MS` 3
- #define `WDTO_250MS` 4
- #define `WDTO_500MS` 5
- #define `WDTO_1S` 6
- #define `WDTO_2S` 7
- #define `WDTO_4S` 8
- #define `WDTO_8S` 9

22.26.1 Detailed Description

```
#include <avr/wdt.h>
```

This header file declares the interface to some inline macros handling the watchdog timer present in many AVR devices. In order to prevent the watchdog timer configuration from being accidentally altered by a crashing application, a special timed sequence is required in order to change it. The macros within this header file handle the required sequence automatically before changing any value. Interrupts will be disabled during the manipulation.

Note

Depending on the fuse configuration of the particular device, further restrictions might apply, in particular it might be disallowed to turn off the watchdog timer.

Note that for newer devices (ATmega88 and newer, effectively any AVR that has the option to also generate interrupts), the watchdog timer remains active even after a system reset (except a power-on condition), using the fastest prescaler value (approximately 15 ms). It is therefore required to turn off the watchdog early during program startup, the datasheet recommends a sequence like the following:

```
#include <stdint.h>
#include <avr/wdt.h>

uint8_t mcusr_mirror __attribute__((section(".noinit")));

void get_mcusr(void) \
    __attribute__((naked)) \
    __attribute__((section(".init3")));
void get_mcusr(void)
{
    mcusr_mirror = MCUSR;
    MCUSR = 0;
    wdt_disable();
}
```

Saving the value of MCUSR in `mcusr_mirror` is only needed if the application later wants to examine the reset source, but in particular, clearing the watchdog reset flag before disabling the watchdog is required, according to the datasheet.

22.26.2 Macro Definition Documentation

22.26.2.1 #define wdt_disable()

Value:

```
__asm__ __volatile__ ( \
    "in __tmp_reg__, __SREG__" "\n\t" \
    "cli" "\n\t" \
    "out %0, %1" "\n\t" \
    "out %0, __zero_reg__" "\n\t" \
    "out __SREG__, __tmp_reg__" "\n\t" \
    : /* no outputs */ \
    : "I" (_SFR_IO_ADDR(_WD_CONTROL_REG)), \
    "r" ((uint8_t)( _BV(_WD_CHANGE_BIT) | _BV(WDE))) \
    : "r0" \
)
```

Disable the watchdog timer, if possible. This attempts to turn off the Enable bit in the watchdog control register. See the datasheet for details.

22.26.2.2 #define wdt_enable(value)

Value:

```
__asm__ __volatile__ ( \
    "in __tmp_reg__, __SREG__" "\n\t" \
    "cli" "\n\t" \
    "wdr" "\n\t" \
    "out %0, %1" "\n\t" \
    "out __SREG__, __tmp_reg__" "\n\t" \
    "out %0, %2" \
    : /* no outputs */ \
    : "I" (_SFR_IO_ADDR(_WD_CONTROL_REG)), \
    "r" (_BV(_WD_CHANGE_BIT) | _BV(WDE)), \
    "r" ((uint8_t)((value & 0x08 ? _WD_PS3_MASK : 0x00) | \
    _BV(WDE) | (value & 0x07))) \
    : "r0" \
)
```

Enable the watchdog timer, configuring it for expiry after `timeout` (which is a combination of the WDP0 through WDP2 bits to write into the WDTCR register; For those devices that have a WDTCSR register, it uses the combination of the WDP0 through WDP3 bits).

See also the symbolic constants `WDTO_15MS` et al.

22.26.2.3 #define wdt_reset() __asm__ __volatile__ ("wdr")

Reset the watchdog timer. When the watchdog timer is enabled, a call to this instruction is required before the timer expires, otherwise a watchdog-initiated device reset will occur.

22.26.2.4 #define WDTO_120MS 3

See `WDTO_15MS`

22.26.2.5 #define WDTO_15MS 0

Symbolic constants for the watchdog timeout. Since the watchdog timer is based on a free-running RC oscillator, the times are approximate only and apply to a supply voltage of 5 V. At lower supply voltages, the times will increase. For older devices, the times will be as large as three times when operating at $V_{cc} = 3\text{ V}$, while the newer devices (e. g. ATmega128, ATmega8) only experience a negligible change.

Possible timeout values are: 15 ms, 30 ms, 60 ms, 120 ms, 250 ms, 500 ms, 1 s, 2 s. (Some devices also allow for 4 s and 8 s.) Symbolic constants are formed by the prefix `WDTO_`, followed by the time.

Example that would select a watchdog timer expiry of approximately 500 ms:

```
wdt_enable(WDTO_500MS);
```

22.26.2.6 #define WDTO_1S 6

See WDTO_15MS

22.26.2.7 #define WDTO_250MS 4

See WDTO_15MS

22.26.2.8 #define WDTO_2S 7

See WDTO_15MS

22.26.2.9 #define WDTO_30MS 1

See WDTO_15MS

22.26.2.10 #define WDTO_4S 8

See WDTO_15MS Note: This is only available on the ATtiny2313, ATtiny24, ATtiny44, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny461, ATtiny861, ATmega48, ATmega88, ATmega168, ATmega48P, ATmega88P, ATmega168P, ATmega328P, ATmega164P, ATmega324P, ATmega644P, ATmega644, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega8HVA, ATmega16HVA, ATmega26HVG, ATmega32HVB, ATmega406, ATmega48HVF, ATmega1284P, ATmega256RFA2, ATmega256RFR2, ATmega128RFA2, ATmega128RFR2, ATmega64RFA2, ATmega64RFR2, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, AT90USB82, AT90USB162, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATtiny48, ATtiny88.

22.26.2.11 #define WDTO_500MS 5

See WDTO_15MS

22.26.2.12 #define WDTO_60MS 2

WDTO_15MS

22.26.2.13 #define WDTO_8S 9

See WDTO_15MS Note: This is only available on the ATtiny2313, ATtiny24, ATtiny44, ATtiny84, ATtiny84A, ATtiny25, ATtiny45, ATtiny85, ATtiny261, ATtiny461, ATtiny861, ATmega48, ATmega48A, ATmega48PA, ATmega88, ATmega168, ATmega48P, ATmega88P, ATmega168P, ATmega328P, ATmega164P, ATmega324P, ATmega644P, ATmega644, ATmega640, ATmega1280, ATmega1281, ATmega2560, ATmega2561, ATmega8HVA, ATmega16HVA, ATmega26HVG, ATmega32HVB, ATmega406, ATmega48HVF, ATmega1284P, ATmega256RFA2, ATmega256RFR2, ATmega128RFA2, ATmega128RFR2, ATmega64RFA2, ATmega64RFR2, AT90PWM1, AT90PWM2, AT90PWM2B, AT90PWM3, AT90PWM3B, AT90PWM216, AT90PWM316, AT90PWM81, AT90PWM161, AT90USB82, AT90USB162, AT90USB646, AT90USB647, AT90USB1286, AT90USB1287, ATtiny48, ATtiny88, ATxmega16a4u, ATxmega32a4u, ATxmega16c4, ATxmega32c4, ATxmega128c3, ATxmega192c3, ATxmega256c3.

22.27 <util/atomic.h> Atomically and Non-Atomically Executed Code Blocks

Macros

- `#define ATOMIC_BLOCK(type)`
- `#define NONATOMIC_BLOCK(type)`
- `#define ATOMIC_RESTORESTATE`
- `#define ATOMIC_FORCEON`
- `#define NONATOMIC_RESTORESTATE`
- `#define NONATOMIC_FORCEOFF`

22.27.1 Detailed Description

@code

```
#include <util/atomic.h>
\endcode
```

\note The macros in this header file require the ISO/IEC 9899:1999 ("ISO C99") feature of for loop variables that are declared inside the for loop itself. For that reason, this header file can only be used if the standard level of the compiler (option `–std=`) is set to either `\c c99` or `\c gnu99`.

The macros in this header file deal with code blocks that are guaranteed to be executed Atomically or Non-Atomically. The term "Atomic" in this context refers to the inability of the respective code to be interrupted.

These macros operate via automatic manipulation of the Global Interrupt Status (I) bit of the SREG register. Exit paths from both block types are all managed automatically without the need for special considerations, i. e. the interrupt status will be restored to the same value it has been when entering the respective block.

A typical example that requires atomic access is a 16 (or more) bit variable that is shared between the main execution path and an ISR. While declaring such a variable as volatile ensures that the compiler will not optimize accesses to it away, it does not guarantee atomic access to it. Assuming the following example:

@code

```
#include <inttypes.h> #include <avr/interrupt.h> #include <avr/io.h>
```

```
volatile uint16_t ctr;
```

```
ISR(TIMER1_OVF_vect) { ctr--; }
```

```
... int main(void) { ... ctr = 0x200; start_timer(); while (ctr != 0) // wait ; ... }
```

There is a chance where the main context will exit its wait loop when the variable `ctr` just reached the value `0xFF`. This happens because the compiler cannot natively access a 16-bit variable atomically in an 8-bit CPU. So the variable is for example at `0x100`, the compiler then tests the low byte for 0, which succeeds. It then proceeds to test the high byte, but that moment the ISR triggers, and the main context is interrupted. The ISR will decrement the variable from `0x100` to `0xFF`, and the main context proceeds. It now tests the high byte of the variable which is (now) also 0, so it concludes the variable has reached 0, and terminates the loop.

Using the macros from this header file, the above code can be rewritten like:

```
#include <inttypes.h>
#include <avr/interrupt.h>
```

```

#include <avr/io.h>
#include <util/atomic.h>

volatile uint16_t ctr;

ISR(TIMER1_OVF_vect)
{
    ctr--;
}

...
int
main(void)
{
    ...
    ctr = 0x200;
    start_timer();
    sei();
    uint16_t ctr_copy;
    do
    {
        ATOMIC_BLOCK(ATOMIC_FORCEON)
        {
            ctr_copy = ctr;
        }
    } while (ctr_copy != 0);
    ...
}

```

This will install the appropriate interrupt protection before accessing variable `ctr`, so it is guaranteed to be consistently tested. If the global interrupt state were uncertain before entering the `ATOMIC_BLOCK`, it should be executed with the parameter `ATOMIC_RESTORESTATE` rather than `ATOMIC_FORCEON`.

See [Problems with reordering code](#) for things to be taken into account with respect to compiler optimizations.

22.27.2 Macro Definition Documentation

22.27.2.1 #define ATOMIC_BLOCK(type)

Creates a block of code that is guaranteed to be executed atomically. Upon entering the block the Global Interrupt Status flag in SREG is disabled, and re-enabled upon exiting the block from any exit path.

Two possible macro parameters are permitted, `ATOMIC_RESTORESTATE` and `ATOMIC_FORCEON`.

22.27.2.2 #define ATOMIC_FORCEON

This is a possible parameter for `ATOMIC_BLOCK`. When used, it will cause the `ATOMIC_BLOCK` to force the state of the SREG register on exit, enabling the Global Interrupt Status flag bit. This saves on flash space as the previous value of the SREG register does not need to be saved at the start of the block.

Care should be taken that `ATOMIC_FORCEON` is only used when it is known that interrupts are enabled before the block's execution or when the side effects of enabling global interrupts at the block's completion are known and understood.

22.27.2.3 #define ATOMIC_RESTORESTATE

This is a possible parameter for `ATOMIC_BLOCK`. When used, it will cause the `ATOMIC_BLOCK` to restore the previous state of the SREG register, saved before the Global Interrupt Status flag bit was disabled. The net effect of this is to make the `ATOMIC_BLOCK`'s contents guaranteed atomic, without changing the state of the Global Interrupt Status flag when execution of the block completes.

22.27.2.4 `#define NONATOMIC_BLOCK(type)`

Creates a block of code that is executed non-atomically. Upon entering the block the Global Interrupt Status flag in SREG is enabled, and disabled upon exiting the block from any exit path. This is useful when nested inside `ATOMIC_BLOCK` sections, allowing for non-atomic execution of small blocks of code while maintaining the atomic access of the other sections of the parent `ATOMIC_BLOCK`.

Two possible macro parameters are permitted, `NONATOMIC_RESTORESTATE` and `NONATOMIC_FORCEOFF`.

22.27.2.5 `#define NONATOMIC_FORCEOFF`

This is a possible parameter for `NONATOMIC_BLOCK`. When used, it will cause the `NONATOMIC_BLOCK` to force the state of the SREG register on exit, disabling the Global Interrupt Status flag bit. This saves on flash space as the previous value of the SREG register does not need to be saved at the start of the block.

Care should be taken that `NONATOMIC_FORCEOFF` is only used when it is known that interrupts are disabled before the block's execution or when the side effects of disabling global interrupts at the block's completion are known and understood.

22.27.2.6 `#define NONATOMIC_RESTORESTATE`

This is a possible parameter for `NONATOMIC_BLOCK`. When used, it will cause the `NONATOMIC_BLOCK` to restore the previous state of the SREG register, saved before the Global Interrupt Status flag bit was enabled. The net effect of this is to make the `NONATOMIC_BLOCK`'s contents guaranteed non-atomic, without changing the state of the Global Interrupt Status flag when execution of the block completes.

22.28 <util/crc16.h>: CRC Computations

Functions

- static __inline__ uint16_t _crc16_update (uint16_t __crc, uint8_t __data)
- static __inline__ uint16_t _crc_xmodem_update (uint16_t __crc, uint8_t __data)
- static __inline__ uint16_t _crc_ccitt_update (uint16_t __crc, uint8_t __data)
- static __inline__ uint8_t _crc_ibutton_update (uint8_t __crc, uint8_t __data)

22.28.1 Detailed Description

```
#include <util/crc16.h>
```

This header file provides a optimized inline functions for calculating cyclic redundancy checks (CRC) using common polynomials.

References:

See the Dallas Semiconductor app note 27 for 8051 assembler example and general CRC optimization suggestions. The table on the last page of the app note is the key to understanding these implementations.

Jack Crenshaw's "Implementing CRCs" article in the January 1992 issue of *Embedded Systems Programming*. This may be difficult to find, but it explains CRC's in very clear and concise terms. Well worth the effort to obtain a copy.

A typical application would look like:

```
// Dallas iButton test vector.
uint8_t serno[] = { 0x02, 0x1c, 0xb8, 0x01, 0, 0, 0, 0xa2 };

int
checkcrc(void)
{
    uint8_t crc = 0, i;

    for (i = 0; i < sizeof serno / sizeof serno[0]; i++)
        crc = _crc_ibutton_update(crc, serno[i]);

    return crc; // must be 0
}
```

22.28.2 Function Documentation

22.28.2.1 static __inline__ uint16_t _crc16_update (uint16_t __crc, uint8_t __data) [static]

Optimized CRC-16 calculation.

Polynomial: $x^{16} + x^{15} + x^2 + 1$ (0xa001)

Initial value: 0xffff

This CRC is normally used in disk-drive controllers.

The following is the equivalent functionality written in C.

```

uint16_t
crc16_update(uint16_t crc, uint8_t a)
{
    int i;

    crc ^= a;
    for (i = 0; i < 8; ++i)
    {
        if (crc & 1)
            crc = (crc >> 1) ^ 0xA001;
        else
            crc = (crc >> 1);
    }

    return crc;
}

```

22.28.2.2 static __inline__ uint16_t _crc_ccitt_update(uint16_t __crc, uint8_t __data) [static]

Optimized CRC-CCITT calculation.

Polynomial: $x^{16} + x^{12} + x^5 + 1$ (0x8408)

Initial value: 0xffff

This is the CRC used by PPP and IrDA.

See RFC1171 (PPP protocol) and IrDA IrLAP 1.1

Note

Although the CCITT polynomial is the same as that used by the Xmodem protocol, they are quite different. The difference is in how the bits are shifted through the algorithm. Xmodem shifts the MSB of the CRC and the input first, while CCITT shifts the LSB of the CRC and the input first.

The following is the equivalent functionality written in C.

```

uint16_t
_crc_ccitt_update (uint16_t crc, uint8_t data)
{
    data ^= 108 (crc);
    data ^= data << 4;

    return (((uint16_t)data << 8) | hi8 (crc)) ^ (uint8_t)(
data >> 4)
        ^ ((uint16_t)data << 3));
}

```

22.28.2.3 static __inline__ uint8_t _crc_ibutton_update(uint8_t __crc, uint8_t __data) [static]

Optimized Dallas (now Maxim) iButton 8-bit CRC calculation.

Polynomial: $x^8 + x^5 + x^4 + 1$ (0x8C)

Initial value: 0x0

See http://www.maxim-ic.com/appnotes.cfm/appnote_number/27

The following is the equivalent functionality written in C.

```

uint8_t
_crc_ibutton_update(uint8_t crc, uint8_t
data)
{
    uint8_t i;

    crc = crc ^ data;
    for (i = 0; i < 8; i++)

```

```
{
    if (crc & 0x01)
        crc = (crc >> 1) ^ 0x8C;
    else
        crc >>= 1;
}

return crc;
}
```

22.28.2.4 static __inline__ uint16_t _crc_xmodem_update(uint16_t __crc, uint8_t __data) [static]

Optimized CRC-XMODEM calculation.

Polynomial: $x^{16} + x^{12} + x^5 + 1$ (0x1021)

Initial value: 0x0

This is the CRC used by the Xmodem-CRC protocol.

The following is the equivalent functionality written in C.

```
uint16_t
_crc_xmodem_update (uint16_t crc, uint8_t data)
{
    int i;

    crc = crc ^ ((uint16_t)data << 8);
    for (i=0; i<8; i++)
    {
        if (crc & 0x8000)
            crc = (crc << 1) ^ 0x1021;
        else
            crc <<= 1;
    }

    return crc;
}
```

22.29 <util/delay_basic.h>: Basic busy-wait delay loops

Functions

- void `_delay_loop_1` (uint8_t __count)
- void `_delay_loop_2` (uint16_t __count)

22.29.1 Detailed Description

```
#include <util/delay_basic.h>
```

The functions in this header file implement simple delay loops that perform a busy-waiting. They are typically used to facilitate short delays in the program execution. They are implemented as count-down loops with a well-known CPU cycle count per loop iteration. As such, no other processing can occur simultaneously. It should be kept in mind that the functions described here do not disable interrupts.

In general, for long delays, the use of hardware timers is much preferable, as they free the CPU, and allow for concurrent processing of other events while the timer is running. However, in particular for very short delays, the overhead of setting up a hardware timer is too much compared to the overall delay time.

Two inline functions are provided for the actual delay algorithms.

22.29.2 Function Documentation

22.29.2.1 void `_delay_loop_1` (uint8_t __count)

Delay loop using an 8-bit counter `__count`, so up to 256 iterations are possible. (The value 256 would have to be passed as 0.) The loop executes three CPU cycles per iteration, not including the overhead the compiler needs to setup the counter register.

Thus, at a CPU speed of 1 MHz, delays of up to 768 microseconds can be achieved.

22.29.2.2 void `_delay_loop_2` (uint16_t __count)

Delay loop using a 16-bit counter `__count`, so up to 65536 iterations are possible. (The value 65536 would have to be passed as 0.) The loop executes four CPU cycles per iteration, not including the overhead the compiler requires to setup the counter register pair.

Thus, at a CPU speed of 1 MHz, delays of up to about 262.1 milliseconds can be achieved.

22.30 <util/parity.h>: Parity bit generation

Macros

- `#define parity_even_bit(val)`

22.30.1 Detailed Description

```
#include <util/parity.h>
```

This header file contains optimized assembler code to calculate the parity bit for a byte.

22.30.2 Macro Definition Documentation

22.30.2.1 `#define parity_even_bit(val)`

Value:

```
(__extension__({
    unsigned char __t;
    __asm__ (
        "mov __tmp_reg__, %0" "\n\t"
        "swap %0" "\n\t"
        "eor %0, __tmp_reg__" "\n\t"
        "mov __tmp_reg__, %0" "\n\t"
        "lsr %0" "\n\t"
        "lsr %0" "\n\t"
        "eor %0, __tmp_reg__"
        : "=r" (__t)
        : "0" ((unsigned char) (val))
        : "r0"
    );
    (((__t + 1) >> 1) & 1);
}))
```

Returns

1 if `val` has an odd number of bits set.

22.31 <util/setbaud.h>: Helper macros for baud rate calculations

Macros

- #define BAUD_TOL 2
- #define UBRR_VALUE
- #define UBRRRL_VALUE
- #define UBRRRH_VALUE
- #define USE_2X 0

22.31.1 Detailed Description

```
#define F_CPU 11059200
#define BAUD 38400
#include <util/setbaud.h>
```

This header file requires that on entry values are already defined for F_CPU and BAUD. In addition, the macro BAUD_TOL will define the baud rate tolerance (in percent) that is acceptable during the calculations. The value of BAUD_TOL will default to 2 %.

This header file defines macros suitable to setup the UART baud rate prescaler registers of an AVR. All calculations are done using the C preprocessor. Including this header file causes no other side effects so it is possible to include this file more than once (supposedly, with different values for the BAUD parameter), possibly even within the same function.

Assuming that the requested BAUD is valid for the given F_CPU then the macro UBRR_VALUE is set to the required prescaler value. Two additional macros are provided for the low and high bytes of the prescaler, respectively: UBRRRL_VALUE is set to the lower byte of the UBRR_VALUE and UBRRRH_VALUE is set to the upper byte. An additional macro USE_2X will be defined. Its value is set to 1 if the desired BAUD rate within the given tolerance could only be achieved by setting the U2X bit in the UART configuration. It will be defined to 0 if U2X is not needed.

Example usage:

```
#include <avr/io.h>

#define F_CPU 4000000

static void
uart_9600(void)
{
    #define BAUD 9600
    #include <util/setbaud.h>
    UBRRH = UBRRH_VALUE;
    UBRRL = UBRRL_VALUE;
    #if USE_2X
    UCSRA |= (1 << U2X);
    #else
    UCSRA &= ~(1 << U2X);
    #endif
}

static void
uart_38400(void)
{
    #undef BAUD // avoid compiler warning
    #define BAUD 38400
    #include <util/setbaud.h>
    UBRRH = UBRRH_VALUE;
    UBRRL = UBRRL_VALUE;
    #if USE_2X
    UCSRA |= (1 << U2X);
    #else
    UCSRA &= ~(1 << U2X);
    #endif
}
```

In this example, two functions are defined to setup the UART to run at 9600 Bd, and 38400 Bd, respectively. Using a CPU clock of 4 MHz, 9600 Bd can be achieved with an acceptable tolerance without setting U2X (prescaler 25), while 38400 Bd require U2X to be set (prescaler 12).

22.31.2 Macro Definition Documentation

22.31.2.1 #define BAUD_TOL 2

Input and output macro for <util/setbaud.h>

Define the acceptable baud rate tolerance in percent. If not set on entry, it will be set to its default value of 2.

22.31.2.2 #define UBRR_VALUE

Output macro from <util/setbaud.h>

Contains the calculated baud rate prescaler value for the UBRR register.

22.31.2.3 #define UBRRH_VALUE

Output macro from <util/setbaud.h>

Contains the upper byte of the calculated prescaler value (UBRR_VALUE).

22.31.2.4 #define UBRRL_VALUE

Output macro from <util/setbaud.h>

Contains the lower byte of the calculated prescaler value (UBRR_VALUE).

22.31.2.5 #define USE_2X 0

Output macro from <util/setbaud.h>

Contains the value 1 if the desired baud rate tolerance could only be achieved by setting the U2X bit in the UART configuration. Contains 0 otherwise.

22.32 <util/twi.h>: TWI bit mask definitions

TWSR values

Mnemonics:

TW_MT_xxx - master transmitter

TW_MR_xxx - master receiver

TW_ST_xxx - slave transmitter

TW_SR_xxx - slave receiver

- #define TW_START 0x08
- #define TW_REP_START 0x10
- #define TW_MT_SLA_ACK 0x18
- #define TW_MT_SLA_NACK 0x20
- #define TW_MT_DATA_ACK 0x28
- #define TW_MT_DATA_NACK 0x30
- #define TW_MT_ARB_LOST 0x38
- #define TW_MR_ARB_LOST 0x38
- #define TW_MR_SLA_ACK 0x40
- #define TW_MR_SLA_NACK 0x48
- #define TW_MR_DATA_ACK 0x50
- #define TW_MR_DATA_NACK 0x58
- #define TW_ST_SLA_ACK 0xA8
- #define TW_ST_ARB_LOST_SLA_ACK 0xB0
- #define TW_ST_DATA_ACK 0xB8
- #define TW_ST_DATA_NACK 0xC0
- #define TW_ST_LAST_DATA 0xC8
- #define TW_SR_SLA_ACK 0x60
- #define TW_SR_ARB_LOST_SLA_ACK 0x68
- #define TW_SR_GCALL_ACK 0x70
- #define TW_SR_ARB_LOST_GCALL_ACK 0x78
- #define TW_SR_DATA_ACK 0x80
- #define TW_SR_DATA_NACK 0x88
- #define TW_SR_GCALL_DATA_ACK 0x90
- #define TW_SR_GCALL_DATA_NACK 0x98
- #define TW_SR_STOP 0xA0
- #define TW_NO_INFO 0xF8
- #define TW_BUS_ERROR 0x00
- #define TW_STATUS_MASK
- #define TW_STATUS (TWSR & TW_STATUS_MASK)

R/~W bit in SLA+R/W address field.

- #define TW_READ 1
- #define TW_WRITE 0

22.32.1 Detailed Description

```
#include <util/twi.h>
```

This header file contains bit mask definitions for use with the AVR TWI interface.

22.32.2 Macro Definition Documentation

22.32.2.1 #define TW_BUS_ERROR 0x00

illegal start or stop condition

22.32.2.2 #define TW_MR_ARB_LOST 0x38

arbitration lost in SLA+R or NACK

22.32.2.3 #define TW_MR_DATA_ACK 0x50

data received, ACK returned

22.32.2.4 #define TW_MR_DATA_NACK 0x58

data received, NACK returned

22.32.2.5 #define TW_MR_SLA_ACK 0x40

SLA+R transmitted, ACK received

22.32.2.6 #define TW_MR_SLA_NACK 0x48

SLA+R transmitted, NACK received

22.32.2.7 #define TW_MT_ARB_LOST 0x38

arbitration lost in SLA+W or data

22.32.2.8 #define TW_MT_DATA_ACK 0x28

data transmitted, ACK received

22.32.2.9 #define TW_MT_DATA_NACK 0x30

data transmitted, NACK received

22.32.2.10 #define TW_MT_SLA_ACK 0x18

SLA+W transmitted, ACK received

22.32.2.11 #define TW_MT_SLA_NACK 0x20

SLA+W transmitted, NACK received

22.32.2.12 #define TW_NO_INFO 0xF8

no state information available

22.32.2.13 #define TW_READ 1

SLA+R address

22.32.2.14 #define TW_REP_START 0x10

repeated start condition transmitted

22.32.2.15 #define TW_SR_ARB_LOST_GCALL_ACK 0x78

arbitration lost in SLA+RW, general call received, ACK returned

22.32.2.16 #define TW_SR_ARB_LOST_SLA_ACK 0x68

arbitration lost in SLA+RW, SLA+W received, ACK returned

22.32.2.17 #define TW_SR_DATA_ACK 0x80

data received, ACK returned

22.32.2.18 #define TW_SR_DATA_NACK 0x88

data received, NACK returned

22.32.2.19 #define TW_SR_GCALL_ACK 0x70

general call received, ACK returned

22.32.2.20 #define TW_SR_GCALL_DATA_ACK 0x90

general call data received, ACK returned

22.32.2.21 #define TW_SR_GCALL_DATA_NACK 0x98

general call data received, NACK returned

22.32.2.22 #define TW_SR_SLA_ACK 0x60

SLA+W received, ACK returned

22.32.2.23 #define TW_SR_STOP 0xA0

stop or repeated start condition received while selected

22.32.2.24 #define TW_ST_ARB_LOST_SLA_ACK 0xB0

arbitration lost in SLA+RW, SLA+R received, ACK returned

22.32.2.25 #define TW_ST_DATA_ACK 0xB8

data transmitted, ACK received

22.32.2.26 #define TW_ST_DATA_NACK 0xC0

data transmitted, NACK received

22.32.2.27 **#define** TW_ST_LAST_DATA 0xC8

last data byte transmitted, ACK received

22.32.2.28 **#define** TW_ST_SLA_ACK 0xA8

SLA+R received, ACK returned

22.32.2.29 **#define** TW_START 0x08

start condition transmitted

22.32.2.30 **#define** TW_STATUS (TWSR & TW_STATUS_MASK)

TWSR, masked by TW_STATUS_MASK

22.32.2.31 **#define** TW_STATUS_MASK

Value:

```
(_BV(TWS7) | _BV(TWS6) | _BV(TWS5) | _BV(TWS4) | \
    _BV(TWS3))
```

The lower 3 bits of TWSR are reserved on the ATmega163. The 2 LSB carry the prescaler bits on the newer ATmegs.

22.32.2.32 **#define** TW_WRITE 0

SLA+W address

22.33 <compat/deprecated.h>: Deprecated items

Allowing specific system-wide interrupts

In addition to globally enabling interrupts, each device's particular interrupt needs to be enabled separately if interrupts for this device are desired. While some devices maintain their interrupt enable bit inside the device's register set, external and timer interrupts have system-wide configuration registers.

Example:

```
// Enable timer 1 overflow interrupts.
timer_enable_int(_BV(TOIE1));

// Do some work...

// Disable all timer interrupts.
timer_enable_int(0);
```

Note

Be careful when you use these functions. If you already have a different interrupt enabled, you could inadvertently disable it by enabling another interrupt.

- static `__inline__ void timer_enable_int (unsigned char ints)`
- `#define enable_external_int(mask) (__EICR = mask)`
- `#define INTERRUPT(signame)`
- `#define __INTR_ATTRS used`

Obsolete IO macros

Back in a time when AVR-GCC and avr-libc could not handle IO port access in the direct assignment form as they are handled now, all IO port access had to be done through specific macros that eventually resulted in inline assembly instructions performing the desired action.

These macros became obsolete, as reading and writing IO ports can be done by simply using the IO port name in an expression, and all bit manipulation (including those on IO ports) can be done using generic C bit manipulation operators.

The macros in this group simulate the historical behaviour. While they are supposed to be applied to IO ports, the emulation actually uses standard C methods, so they could be applied to arbitrary memory locations as well.

- `#define inp(port) (port)`
- `#define outp(val, port) (port) = (val)`
- `#define inb(port) (port)`
- `#define outb(port, val) (port) = (val)`
- `#define sbi(port, bit) (port) |= (1 << (bit))`
- `#define cbi(port, bit) (port) &= ~(1 << (bit))`

22.33.1 Detailed Description

This header file contains several items that used to be available in previous versions of this library, but have eventually been deprecated over time.

```
#include <compat/deprecated.h>
```

These items are supplied within that header file for backward compatibility reasons only, so old source code that has been written for previous library versions could easily be maintained until its end-of-life. Use of any of these items in new code is strongly discouraged.

22.33.2 Macro Definition Documentation

22.33.2.1 `#define cbi(port, bit) (port) &= ~(1 << (bit))`**Deprecated**

Clear `bit` in IO port `port`.

22.33.2.2 `#define enable_external_int(mask) (_EICR = mask)`**Deprecated**

This macro gives access to the `GIMSK` register (or `EIMSK` register if using an AVR Mega device or `GICR` register for others). Although this macro is essentially the same as assigning to the register, it does adapt slightly to the type of device being used. This macro is unavailable if none of the registers listed above are defined.

22.33.2.3 `#define inb(port) (port)`**Deprecated**

Read a value from an IO port `port`.

22.33.2.4 `#define inp(port) (port)`**Deprecated**

Read a value from an IO port `port`.

22.33.2.5 `#define INTERRUPT(signame)`**Value:**

```
void signame (void) __attribute__ ((interrupt,__INTR_ATTRS)); \
void signame (void)
```

Deprecated

Introduces an interrupt handler function that runs with global interrupts initially enabled. This allows interrupt handlers to be interrupted.

As this macro has been used by too many unsuspecting people in the past, it has been deprecated, and will be removed in a future version of the library. Users who want to legitimately re-enable interrupts in their interrupt handlers as quickly as possible are encouraged to explicitly declare their handlers as described [above](#).

22.33.2.6 `#define outb(port, val) (port) = (val)`**Deprecated**

Write `val` to IO port `port`.

22.33.2.7 `#define outp(val, port) (port) = (val)`**Deprecated**

Write `val` to IO port `port`.

22.33.2.8 `#define sbi(port, bit)(port) |= (1 << (bit))`

Deprecated

Set `bit` in IO port `port`.

22.33.3 Function Documentation

22.33.3.1 `static __inline__ void timer_enable_int (unsigned char ints) [static]`

Deprecated

This function modifies the `\c tmsk` register.
The value you pass via `\c ints` is device specific.

22.34 <compat/ina90.h>: Compatibility with IAR EWB 3.x

```
#include <compat/ina90.h>
```

This is an attempt to provide some compatibility with header files that come with IAR C, to make porting applications between different compilers easier. No 100% compatibility though.

Note

For actual documentation, please see the IAR manual.

22.35 Demo projects

Modules

- [Combining C and assembly source files](#)
- [A simple project](#)
- [A more sophisticated project](#)
- [Using the standard IO facilities](#)
- [Example using the two-wire interface \(TWI\)](#)

22.35.1 Detailed Description

Various small demo projects are provided to illustrate several aspects of using the opensource utilities for the AVR controller series. It should be kept in mind that these demos serve mainly educational purposes, and are normally not directly suitable for use in any production environment. Usually, they have been kept as simple as sufficient to demonstrate one particular feature.

The [simple project](#) is somewhat like the "Hello world!" application for a microcontroller, about the most simple project that can be done. It is explained in good detail, to allow the reader to understand the basic concepts behind using the tools on an AVR microcontroller.

The [more sophisticated demo project](#) builds on top of that simple project, and adds some controls to it. It touches a number of avr-libc's basic concepts on its way.

A [comprehensive example on using the standard IO facilities](#) intends to explain that complex topic, using a practical microcontroller peripheral setup with one RS-232 connection, and an HD44780-compatible industry-standard LCD display.

The [Example using the two-wire interface \(TWI\)](#) project explains the use of the two-wire hardware interface (also known as "I2C") that is present on many AVR controllers.

Finally, the [Combining C and assembly source files](#) demo shows how C and assembly language source files can collaborate within one project. While the overall project is managed by a C program part for easy maintenance, time-critical parts are written directly in manually optimized assembly language for shortest execution times possible. Naturally, this kind of project is very closely tied to the hardware design, thus it is custom-tailored to a particular controller type and peripheral setup. As an alternative to the assembly-language solution, this project also offers a C-only implementation (deploying the exact same peripheral setup) based on a more sophisticated (and thus more expensive) but pin-compatible controller.

While the simple demo is meant to run on about any AVR setup possible where a LED could be connected to the OCR1[A] output, the [large](#) and [stdio](#) demos are mainly targeted to the Atmel STK500 starter kit, and the [TWI](#) example requires a controller where some 24Cxx two-wire EEPROM can be connected to. For the STK500 demos, the default CPU (either an AT90S8515 or an ATmega8515) should be removed from its socket, and the ATmega16 that ships with the kit should be inserted into socket SCKT3100A3. The ATmega16 offers an on-board ADC that is used in the [large](#) demo, and all AVRs with an ADC feature a different pinout than the industry-standard compatible devices.

In order to fully utilize the [large](#) demo, a female 10-pin header with cable, connecting to a 10 kOhm potentiometer will be useful.

For the [stdio](#) demo, an industry-standard HD44780-compatible LCD display of at least 16x1 characters will be needed. Among other things, the [LCD4Linux](#) project page describes many things around these displays, including common pinouts.

22.36 Combining C and assembly source files

For time- or space-critical applications, it can often be desirable to combine C code (for easy maintenance) and assembly code (for maximal speed or minimal code size) together. This demo provides an example of how to do that.

The objective of the demo is to decode radio-controlled model PWM signals, and control an output PWM based on the current input signal's value. The incoming PWM pulses follow a standard encoding scheme where a pulse width of 920 microseconds denotes one end of the scale (represented as 0 % pulse width on output), and 2120 microseconds mark the other end (100 % output PWM). Normally, multiple channels would be encoded that way in subsequent pulses, followed by a larger gap, so the entire frame will repeat each 14 through 20 ms, but this is ignored for the purpose of the demo, so only a single input PWM channel is assumed.

The basic challenge is to use the cheapest controller available for the task, an ATtiny13 that has only a single timer channel. As this timer channel is required to run the outgoing PWM signal generation, the incoming PWM decoding had to be adjusted to the constraints set by the outgoing PWM.

As PWM generation toggles the counting direction of timer 0 between up and down after each 256 timer cycles, the current time cannot be deduced by reading TCNT0 only, but the current counting direction of the timer needs to be considered as well. This requires servicing interrupts whenever the timer hits *TOP* (255) and *BOTTOM* (0) to learn about each change of the counting direction. For PWM generation, it is usually desired to run it at the highest possible speed so filtering the PWM frequency from the modulated output signal is made easy. Thus, the PWM timer runs at full CPU speed. This causes the overflow and compare match interrupts to be triggered each 256 CPU clocks, so they must run with the minimal number of processor cycles possible in order to not impose a too high CPU load by these interrupt service routines. This is the main reason to implement the entire interrupt handling in fine-tuned assembly code rather than in C.

In order to verify parts of the algorithm, and the underlying hardware, the demo has been set up in a way so the pin-compatible but more expensive ATtiny45 (or its siblings ATtiny25 and ATtiny85) could be used as well. In that case, no separate assembly code is required, as two timer channels are available.

22.36.1 Hardware setup

The incoming PWM pulse train is fed into PB4. It will generate a pin change interrupt there on each edge of the incoming signal.

The outgoing PWM is generated through OC0B of timer channel 0 (PB1). For demonstration purposes, a LED should be connected to that pin (like, one of the LEDs of an STK500).

The controllers run on their internal calibrated RC oscillators, 1.2 MHz on the ATtiny13, and 1.0 MHz on the ATtiny45.

22.36.2 A code walkthrough

22.36.2.1 asmdemo.c

After the usual include files, two variables are defined. The first one, `pwm_incoming` is used to communicate the most recent pulse width detected by the incoming PWM decoder up to the main loop.

The second variable actually only constitutes of a single bit, `intbits.pwm_received`. This bit will be set whenever the incoming PWM decoder has updated `pwm_incoming`.

Both variables are marked *volatile* to ensure their readers will always pick up an updated value, as both variables will be set by interrupt service routines.

The function `ioinit()` initializes the microcontroller peripheral devices. In particular, it starts timer 0 to generate the outgoing PWM signal on OC0B. Setting OCR0A to 255 (which is the *TOP* value of timer 0) is used to generate a timer 0 overflow A interrupt on the ATtiny13. This interrupt is used to inform the incoming PWM decoder that the counting direction of channel 0 is just changing from up to down. Likewise, an overflow interrupt will be generated whenever

the countdown reached *BOTTOM* (value 0), where the counter will again alter its counting direction to upwards. This information is needed in order to know whether the current counter value of `TCNT0` is to be evaluated from bottom or top.

Further, `ioinit()` activates the pin-change interrupt `PCINT0` on any edge of PB4. Finally, PB1 (`OC0B`) will be activated as an output pin, and global interrupts are being enabled.

In the ATtiny45 setup, the C code contains an ISR for `PCINT0`. At each pin-change interrupt, it will first be analyzed whether the interrupt was caused by a rising or a falling edge. In case of the rising edge, timer 1 will be started with a prescaler of 16 after clearing the current timer value. Then, at the falling edge, the current timer value will be recorded (and timer 1 stopped), the pin-change interrupt will be suspended, and the upper layer will be notified that the incoming PWM measurement data is available.

Function `main()` first initializes the hardware by calling `ioinit()`, and then waits until some incoming PWM value is available. If it is, the output PWM will be adjusted by computing the relative value of the incoming PWM. Finally, the pin-change interrupt is re-enabled, and the CPU is put to sleep.

22.36.2.2 project.h

In order for the interrupt service routines to be as fast as possible, some of the CPU registers are set aside completely for use by these routines, so the compiler would not use them for C code. This is arranged for in `project.h`.

The file is divided into one section that will be used by the assembly source code, and another one to be used by C code. The assembly part is distinguished by the preprocessing macro **ASSEMBLER** (which will be automatically set by the compiler front-end when preprocessing an assembly-language file), and it contains just macros that give symbolic names to a number of CPU registers. The preprocessor will then replace the symbolic names by their right-hand side definitions before calling the assembler.

In C code, the compiler needs to see variable declarations for these objects. This is done by using declarations that bind a variable permanently to a CPU register (see `faq_regbind`). Even in case the C code never has a need to access these variables, declaring the register binding that way causes the compiler to not use these registers in C code at all.

The `flags` variable needs to be in the range of r16 through r31 as it is the target of a *load immediate* (or *SER*) instruction that is not applicable to the entire register file.

22.36.2.3 isrs.S

This file is a preprocessed assembly source file. The C preprocessor will be run by the compiler front-end first, resolving all `#include`, `#define` etc. directives. The resulting program text will then be passed on to the assembler.

As the C preprocessor strips all C-style comments, preprocessed assembly source files can have both, C-style (`/* ... */`, `// ...`) as well as assembly-style (`;` `...`) comments.

At the top, the IO register definition file `avr/io.h` and the project declaration file `project.h` are included. The remainder of the file is conditionally assembled only if the target MCU type is an ATtiny13, so it will be completely ignored for the ATtiny45 option.

Next are the two interrupt service routines for timer 0 compare A match (timer 0 hits *TOP*, as `OCR0A` is set to 255) and timer 0 overflow (timer 0 hits *BOTTOM*). As discussed above, these are kept as short as possible. They only save `SREG` (as the flags will be modified by the `INC` instruction), increment the `counter_hi` variable which forms the high part of the current time counter (the low part is formed by querying `TCNT0` directly), and clear or set the variable `flags`, respectively, in order to note the current counting direction. The `RETI` instruction terminates these interrupt service routines. Total cycle count is 8 CPU cycles, so together with the 4 CPU cycles needed for interrupt setup, and the 2 cycles for the `RJMP` from the interrupt vector to the handler, these routines will require 14 out of each 256 CPU cycles, or about 5 % of the overall CPU time.

The pin-change interrupt `PCINT0` will be handled in the final part of this file. The basic algorithm is to quickly evaluate the current system time by fetching the current timer value of `TCNT0`, and combining it with the overflow part in `counter_hi`. If the counter is currently counting down rather than up, the value fetched from `TCNT0` must be negated. Finally, if this pin-change interrupt was triggered by a rising edge, the time computed will be recorded as the

start time only. Then, at the falling edge, this start time will be subtracted from the current time to compute the actual pulse width seen (left in `pwm_incoming`), and the upper layers are informed of the new value by setting bit 0 in the `intbits` flags. At the same time, this pin-change interrupt will be disabled so no new measurement can be performed until the upper layer had a chance to process the current value.

22.36.3 The source code

The source code is installed under

`$prefix/share/doc/avr-libc/examples/asmdemo/`,

where `$prefix` is a configuration option. For Unix systems, it is usually set to either `/usr` or `/usr/local`.

22.37 A simple project

At this point, you should have the GNU tools configured, built, and installed on your system. In this chapter, we present a simple example of using the GNU tools in an AVR project. After reading this chapter, you should have a better feel as to how the tools are used and how a `Makefile` can be configured.

22.37.1 The Project

This project will use the pulse-width modulator (PWM) to ramp an LED on and off every two seconds. An AT90S2313 processor will be used as the controller. The circuit for this demonstration is shown in the [schematic diagram](#). If you have a development kit, you should be able to use it, rather than build the circuit, for this project.

Note

Meanwhile, the AT90S2313 became obsolete. Either use its successor, the (pin-compatible) ATtiny2313 for the project, or perhaps the ATmega8 or one of its successors (ATmega48/88/168) which have become quite popular since the original demo project had been established. For all these more modern devices, it is no longer necessary to use an external crystal for clocking as they ship with the internal 1 MHz oscillator enabled, so C1, C2, and Q1 can be omitted. Normally, for this experiment, the external circuitry on /RESET (R1, C3) can be omitted as well, leaving only the AVR, the LED, the bypass capacitor C4, and perhaps R2. For the ATmega8/48/88/168, use PB1 (pin 15 at the DIP-28 package) to connect the LED to. Additionally, this demo has been ported to many different other AVRs. The location of the respective OC pin varies between different AVRs, and it is mandated by the AVR hardware.

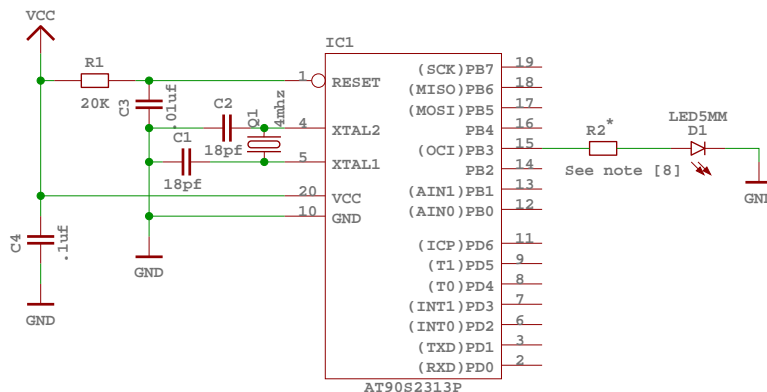


Figure 5: Schematic of circuit for demo project

The source code is given in [demo.c](#). For the sake of this example, create a file called `demo.c` containing this source code. Some of the more important parts of the code are:

Note [1]:

As the AVR microcontroller series has been developed during the past years, new features have been added over time. Even though the basic concepts of the timer/counter1 are still the same as they used to be back in early 2001 when this simple demo was written initially, the names of registers and bits have been changed slightly to reflect the new features. Also, the port and pin mapping of the output compare match 1A (or 1 for older devices) pin which is used to control the LED varies between different AVRs. The file [iocompat.h](#) tries to abstract between all this differences using some preprocessor `#ifdef` statements, so the actual program itself can operate on a common set of symbolic names. The macros defined by that file are:

- `OCR` the name of the OCR register used to control the PWM (usually either `OCR1` or `OCR1A`)
- `DDROC` the name of the DDR (data direction register) for the OC output
- `OC1` the pin number of the OC1[A] output within its port
- `TIMER1_TOP` the TOP value of the timer used for the PWM (1023 for 10-bit PWMs, 255 for devices that can only handle an 8-bit PWM)
- `TIMER1_PWM_INIT` the initialization bits to be set into control register 1A in order to setup 10-bit (or 8-bit) phase and frequency correct PWM mode
- `TIMER1_CLOCKSOURCE` the clock bits to set in the respective control register to start the PWM timer; usually the timer runs at full CPU clock for 10-bit PWMs, while it runs on a prescaled clock for 8-bit PWMs

Note [2]:

`ISR()` is a macro that marks the function as an interrupt routine. In this case, the function will get called when timer 1 overflows. Setting up interrupts is explained in greater detail in [<avr/interrupt.h>: Interrupts](#).

Note [3]:

The PWM is being used in 10-bit mode, so we need a 16-bit variable to remember the current value.

Note [4]:

This section determines the new value of the PWM.

Note [5]:

Here's where the newly computed value is loaded into the PWM register. Since we are in an interrupt routine, it is safe to use a 16-bit assignment to the register. Outside of an interrupt, the assignment should only be performed with interrupts disabled if there's a chance that an interrupt routine could also access this register (or another register that uses `TEMP`), see the appropriate FAQ entry.

Note [6]:

This routine gets called after a reset. It initializes the PWM and enables interrupts.

Note [7]:

The main loop of the program does nothing – all the work is done by the interrupt routine! The `sleep_mode()` puts the processor on sleep until the next interrupt, to conserve power. Of course, that probably won't be noticeable as we are still driving a LED, it is merely mentioned here to demonstrate the basic principle.

Note [8]:

Early AVR devices saturate their outputs at rather low currents when sourcing current, so the LED can be connected directly, the resulting current through the LED will be about 15 mA. For modern parts (at least for the ATmega 128), however Atmel has drastically increased the IO source capability, so when operating at 5 V Vcc, R2 is needed. Its value should be about 150 Ohms. When operating the circuit at 3 V, it can still be omitted though.

22.37.2 The Source Code

```
/*
 * -----
 * "THE BEER-WARE LICENSE" (Revision 42):
 * <joerg@FreeBSD.ORG> wrote this file. As long as you retain this notice you
 * can do whatever you want with this stuff. If we meet some day, and you think
 * this stuff is worth it, you can buy me a beer in return.      Joerg Wunsch
```



```

* -----
*
* Simple AVR demonstration. Controls a LED that can be directly
* connected from OC1/OC1A to GND. The brightness of the LED is
* controlled with the PWM. After each period of the PWM, the PWM
* value is either incremented or decremented, that's all.
*
* $Id: demo.c 1637 2008-03-17 21:49:41Z joerg_wunsch $
*/

#include <inttypes.h>
#include <avr/io.h>
#include <avr/interrupt.h>
#include <avr/sleep.h>

#include "iocompat.h"          /* Note [1] */

enum { UP, DOWN };

ISR (TIMER1_OVF_vect)          /* Note [2] */
{
    static uint16_t pwm;        /* Note [3] */
    static uint8_t direction;

    switch (direction)          /* Note [4] */
    {
        case UP:
            if (++pwm == TIMER1_TOP)
                direction = DOWN;
            break;

        case DOWN:
            if (--pwm == 0)
                direction = UP;
            break;
    }

    OCR = pwm;                  /* Note [5] */
}

void
iointit (void)                 /* Note [6] */
{
    /* Timer 1 is 10-bit PWM (8-bit PWM on some ATTinys). */
    TCCR1A = TIMER1_PWM_INIT;
    /*
     * Start timer 1.
     *
     * NB: TCCR1A and TCCR1B could actually be the same register, so
     * take care to not clobber it.
     */
    TCCR1B |= TIMER1_CLOCKSOURCE;
    /*
     * Run any device-dependent timer 1 setup hook if present.
     */
    #if defined(TIMER1_SETUP_HOOK)
        TIMER1_SETUP_HOOK();
    #endif

    /* Set PWM value to 0. */
    OCR = 0;

    /* Enable OC1 as output. */
    DDRC = _BV (OC1);

    /* Enable timer 1 overflow interrupt. */
    TIMSK = _BV (TOIE1);
    sei ();
}

int
main (void)
{
    iointit ();

    /* loop forever, the interrupts are doing the rest */

    for (;;)                   /* Note [7] */
        sleep_mode();
}

```

```

    return (0);
}

```

22.37.3 Compiling and Linking

This first thing that needs to be done is compile the source. When compiling, the compiler needs to know the processor type so the `-mmcu` option is specified. The `-Os` option will tell the compiler to optimize the code for efficient space usage (at the possible expense of code execution speed). The `-g` is used to embed debug info. The debug info is useful for disassemblies and doesn't end up in the `.hex` files, so I usually specify it. Finally, the `-c` tells the compiler to compile and stop – don't link. This demo is small enough that we could compile and link in one step. However, real-world projects will have several modules and will typically need to break up the building of the project into several compiles and one link.

```
$ avr-gcc -g -Os -mmcu=atmega8 -c demo.c
```

The compilation will create a `demo.o` file. Next we link it into a binary called `demo.elf`.

```
$ avr-gcc -g -mmcu=atmega8 -o demo.elf demo.o
```

It is important to specify the MCU type when linking. The compiler uses the `-mmcu` option to choose start-up files and run-time libraries that get linked together. If this option isn't specified, the compiler defaults to the 8515 processor environment, which is most certainly what you didn't want.

22.37.4 Examining the Object File

Now we have a binary file. Can we do anything useful with it (besides put it into the processor?) The GNU Binutils suite is made up of many useful tools for manipulating object files that get generated. One tool is `avr-objdump`, which takes information from the object file and displays it in many useful ways. Typing the command by itself will cause it to list out its options.

For instance, to get a feel of the application's size, the `-h` option can be used. The output of this option shows how much space is used in each of the sections (the `.stab` and `.stabstr` sections hold the debugging information and won't make it into the ROM file).

An even more useful option is `-S`. This option disassembles the binary file and intersperses the source code in the output! This method is much better, in my opinion, than using the `-S` with the compiler because this listing includes routines from the libraries and the vector table contents. Also, all the "fix-ups" have been satisfied. In other words, the listing generated by this option reflects the actual code that the processor will run.

```
$ avr-objdump -h -S demo.elf > demo.lst
```

Here's the output as saved in the `demo.lst` file:

```
demo.elf:      file format elf32-avr

Sections:
Idx Name          Size      VMA           LMA           File off  Algn
  0 .text          000000e0  00000000  00000000  00000094  2**1
    CONTENTS, ALLOC, LOAD, READONLY, CODE
  1 .data          00000000  00800060  000000e0  00000174  2**0
    CONTENTS, ALLOC, LOAD, DATA
  2 .bss           00000003  00800060  00800060  00000174  2**0
    ALLOC
  3 .debug_aranges 00000068  00000000  00000000  00000178  2**3
    CONTENTS, READONLY, DEBUGGING
```

```

4 .debug_info 000002d6 00000000 00000000 000001e0 2**0
               CONTENTS, READONLY, DEBUGGING
5 .debug_abbrev 000000f9 00000000 00000000 000004b6 2**0
               CONTENTS, READONLY, DEBUGGING
6 .debug_line 000001dc 00000000 00000000 000005af 2**0
               CONTENTS, READONLY, DEBUGGING
7 .debug_frame 00000060 00000000 00000000 0000078c 2**2
               CONTENTS, READONLY, DEBUGGING
8 .debug_str 000000cc 00000000 00000000 000007ec 2**0
               CONTENTS, READONLY, DEBUGGING
9 .debug_loc 00000056 00000000 00000000 000008b8 2**0
               CONTENTS, READONLY, DEBUGGING
10 .debug_ranges 00000018 00000000 00000000 0000090e 2**0
               CONTENTS, READONLY, DEBUGGING

```

Disassembly of section .text:

```

00000000 <__ctors_end>:
.L__do_copy_data_start:
cpi r26, lo8(__data_end)
cpc r27, r17
brne .L__do_copy_data_loop
#elif !defined(__AVR_HAVE_ELPMX__) && !defined(__AVR_HAVE_ELPM__)
ldi r17, hi8(__data_end)
    0: 10 e0      ldi r17, 0x00 ; 0
ldi r26, lo8(__data_start)
    2: a0 e6      ldi r26, 0x60 ; 96
ldi r27, hi8(__data_start)
    4: b0 e0      ldi r27, 0x00 ; 0
ldi r30, lo8(__data_load_start)
    6: e0 ee      ldi r30, 0xE0 ; 224
ldi r31, hi8(__data_load_start)
    8: f0 e0      ldi r31, 0x00 ; 0
rjmp .L__do_copy_data_start
    a: 02 c0      rjmp .+4      ; 0x10 <__zero_reg__+0xf>
.L__do_copy_data_loop:
#if defined (__AVR_HAVE_LPMX__)
lpm r0, Z+
    c: 05 90      lpm r0, Z+
#else
lpm
adiw r30, 1
#endif
st X+, r0
    e: 0d 92      st X+, r0
.L__do_copy_data_start:
cpi r26, lo8(__data_end)
   10: a0 36      cpi r26, 0x60 ; 96
cpc r27, r17
   12: b1 07      cpc r27, r17
brne .L__do_copy_data_loop
   14: d9 f7      brne .-10      ; 0xc <__zero_reg__+0xb>

00000016 <__do_clear_bss>:

#ifdef L_clear_bss
.section .init4,"ax",@progbits
.global __do_clear_bss
__do_clear_bss:
ldi r17, hi8(__bss_end)
   16: 10 e0      ldi r17, 0x00 ; 0
ldi r26, lo8(__bss_start)
   18: a0 e6      ldi r26, 0x60 ; 96
ldi r27, hi8(__bss_start)
   1a: b0 e0      ldi r27, 0x00 ; 0
rjmp .do_clear_bss_start
   1c: 01 c0      rjmp .+2      ; 0x20 <.do_clear_bss_start>

```

```

0000001e <.do_clear_bss_loop>:
.do_clear_bss_loop:
st X+, __zero_reg__
    1e: 1d 92          st X+, r1

00000020 <.do_clear_bss_start>:
.do_clear_bss_start:
cpi r26, lo8(__bss_end)
    20: a3 36          cpi r26, 0x63 ; 99
cpc r27, r17
    22: b1 07          cpc r27, r17
brne .do_clear_bss_loop
    24: e1 f7          brne .-8          ; 0x1e <.do_clear_bss_loop>

00000026 <__vector_8>:
#include "iocompat.h" /* Note [1] */

enum { UP, DOWN };

ISR (TIMER1_OVF_vect) /* Note [2] */
{
    26: 1f 92          push r1
    28: 0f 92          push r0
    2a: 0f b6          in r0, 0x3f ; 63
    2c: 0f 92          push r0
    2e: 11 24          eor r1, r1
    30: 2f 93          push r18
    32: 8f 93          push r24
    34: 9f 93          push r25
    static uint16_t pwm; /* Note [3] */
    static uint8_t direction;

    switch (direction) /* Note [4] */
    36: 80 91 60 00    lds r24, 0x0060
    3a: 88 23          and r24, r24
    3c: b9 f4          brne .+46          ; 0x6c <__SREG__+0x2d>
    {
        case UP:
            if (++pwm == TIMER1_TOP)
    3e: 80 91 61 00    lds r24, 0x0061
    42: 90 91 62 00    lds r25, 0x0062
    46: 01 96          adiw r24, 0x01 ; 1
    48: 90 93 62 00    sts 0x0062, r25
    4c: 80 93 61 00    sts 0x0061, r24
    50: 23 e0          ldi r18, 0x03 ; 3
    52: 8f 3f          cpi r24, 0xFF ; 255
    54: 92 07          cpc r25, r18
    56: f9 f0          breq .+62          ; 0x96 <__SREG__+0x57>
            if (--pwm == 0)
                direction = UP;
            break;
    }

    OCR = pwm; /* Note [5] */
    58: 9b bd          out 0x2b, r25 ; 43
    5a: 8a bd          out 0x2a, r24 ; 42
}
    5c: 9f 91          pop r25
    5e: 8f 91          pop r24
    60: 2f 91          pop r18
    62: 0f 90          pop r0
    64: 0f be          out 0x3f, r0 ; 63
    66: 0f 90          pop r0
    68: 1f 90          pop r1
    6a: 18 95          reti
ISR (TIMER1_OVF_vect) /* Note [2] */
{
    static uint16_t pwm; /* Note [3] */

```

```

    static uint8_t direction;

    switch (direction) /* Note [4] */
    6c: 81 30      cpi r24, 0x01 ; 1
    6e: 29 f0      breq .+10      ; 0x7a <__SREG__+0x3b>
    70: 80 91 61 00 lds r24, 0x0061
    74: 90 91 62 00 lds r25, 0x0062
    78: ef cf      rjmp .-34      ; 0x58 <__SREG__+0x19>
        if (++pwm == TIMER1_TOP)
            direction = DOWN;
        break;

    case DOWN:
        if (--pwm == 0)
    7a: 80 91 61 00 lds r24, 0x0061
    7e: 90 91 62 00 lds r25, 0x0062
    82: 01 97      sbiw r24, 0x01 ; 1
    84: 90 93 62 00 sts 0x0062, r25
    88: 80 93 61 00 sts 0x0061, r24
    8c: 00 97      sbiw r24, 0x00 ; 0
    8e: 21 f7      brne .-56      ; 0x58 <__SREG__+0x19>
        direction = UP;
    90: 10 92 60 00 sts 0x0060, r1
    94: e1 cf      rjmp .-62      ; 0x58 <__SREG__+0x19>

    switch (direction) /* Note [4] */
    {
        case UP:
            if (++pwm == TIMER1_TOP)
                direction = DOWN;
    96: 21 e0      ldi r18, 0x01 ; 1
    98: 20 93 60 00 sts 0x0060, r18
    9c: dd cf      rjmp .-70      ; 0x58 <__SREG__+0x19>

0000009e <iointit>:

void
iointit (void) /* Note [6] */
{
    /* Timer 1 is 10-bit PWM (8-bit PWM on some ATtinys). */
    TCCR1A = TIMER1_PWM_INIT;
    9e: 83 e8      ldi r24, 0x83 ; 131
    a0: 8f bd      out 0x2f, r24 ; 47
    * Start timer 1.
    *
    * NB: TCCR1A and TCCR1B could actually be the same register, so
    * take care to not clobber it.
    */
    TCCR1B |= TIMER1_CLOCKSOURCE;
    a2: 8e b5      in r24, 0x2e ; 46
    a4: 81 60      ori r24, 0x01 ; 1
    a6: 8e bd      out 0x2e, r24 ; 46
#ifdef(TIMER1_SETUP_HOOK)
    TIMER1_SETUP_HOOK();
#endif

    /* Set PWM value to 0. */
    OCR = 0;
    a8: 1b bc      out 0x2b, r1 ; 43
    aa: 1a bc      out 0x2a, r1 ; 42

    /* Enable OC1 as output. */
    DDROC = _BV (OC1);
    ac: 82 e0      ldi r24, 0x02 ; 2
    ae: 87 bb      out 0x17, r24 ; 23

    /* Enable timer 1 overflow interrupt. */
    TIMSK = _BV (TOIE1);

```

```

b0: 84 e0      ldi r24, 0x04 ; 4
b2: 89 bf      out 0x39, r24 ; 57
    sei ();
b4: 78 94      sei
}
b6: 08 95      ret

000000b8 <main>:

void
ioinit (void) /* Note [6] */
{
    /* Timer 1 is 10-bit PWM (8-bit PWM on some ATTinys). */
    TCCR1A = TIMER1_PWM_INIT;
b8: 83 e8      ldi r24, 0x83 ; 131
ba: 8f bd      out 0x2f, r24 ; 47
    * Start timer 1.
    *
    * NB: TCCR1A and TCCR1B could actually be the same register, so
    * take care to not clobber it.
    */
    TCCR1B |= TIMER1_CLOCKSOURCE;
bc: 8e b5      in r24, 0x2e ; 46
be: 81 60      ori r24, 0x01 ; 1
c0: 8e bd      out 0x2e, r24 ; 46
#ifdef(TIMER1_SETUP_HOOK)
    TIMER1_SETUP_HOOK();
#endif

    /* Set PWM value to 0. */
    OCR = 0;
c2: 1b bc      out 0x2b, r1 ; 43
c4: 1a bc      out 0x2a, r1 ; 42

    /* Enable OC1 as output. */
    DDROC = _BV (OC1);
c6: 82 e0      ldi r24, 0x02 ; 2
c8: 87 bb      out 0x17, r24 ; 23

    /* Enable timer 1 overflow interrupt. */
    TIMSK = _BV (TOIE1);
ca: 84 e0      ldi r24, 0x04 ; 4
cc: 89 bf      out 0x39, r24 ; 57
    sei ();
ce: 78 94      sei
    ioinit ();

    /* loop forever, the interrupts are doing the rest */

    for (;;) /* Note [7] */
        sleep_mode();
d0: 85 b7      in r24, 0x35 ; 53
d2: 80 68      ori r24, 0x80 ; 128
d4: 85 bf      out 0x35, r24 ; 53
d6: 88 95      sleep
d8: 85 b7      in r24, 0x35 ; 53
da: 8f 77      andi r24, 0x7F ; 127
dc: 85 bf      out 0x35, r24 ; 53
de: f8 cf      rjmp .-16      ; 0xd0 <main+0x18>

```

22.37.5 Linker Map Files

`avr-objdump` is very useful, but sometimes it's necessary to see information about the link that can only be generated by the linker. A map file contains this information. A map file is useful for monitoring the sizes of your code and data. It also shows where modules are loaded and which modules were loaded from libraries. It is yet another view of your

application. To get a map file, I usually add **-Wl, -Map, demo.map** to my link command. Relink the application using the following command to generate `demo.map` (a portion of which is shown below).

```
$ avr-gcc -g -mmcu=atmega8 -Wl, -Map,demo.map -o demo.elf demo.o
```

Some points of interest in the `demo.map` file are:

```
.rela.plt
*(.rela.plt)

.text          0x0000000000000000      0xe0
*(.vectors)
*(.vectors)
*(.progmem.gcc*)
*(.progmem*)
                0x0000000000000000      . = ALIGN (0x2)
                0x0000000000000000      __trampolines_start = .
*(.trampolines)
.trampolines   0x0000000000000000      0x0 linker stubs
*(.trampolines*)
                0x0000000000000000      __trampolines_end = .
*(.jumptables)
*(.jumptables*)
*(.lowtext)
*(.lowtext*)
                0x0000000000000000      __ctors_start = .
```

The `.text` segment (where program instructions are stored) starts at location `0x0`.

```
*(.fini2)
*(.fini2)
*(.fini1)
*(.fini1)
*(.fini0)
*(.fini0)
                0x00000000000000e0      _etext = .

.data          0x0000000000800060      0x0 load address 0x00000000000000e0
                0x0000000000800060      PROVIDE (__data_start, .)
*(.data)
.data          0x0000000000800060      0x0 demo.o
.data          0x0000000000800060      0x0 /home/tools/hudson/workspace/avr8
-gnu-toolchain/avr8-gnu-toolchain-linux_x86_64/lib/gcc/avr/4.6.2/avr4/libgcc.a(
_copy_data.o)
.data          0x0000000000800060      0x0 /home/tools/hudson/workspace/avr8
-gnu-toolchain/avr8-gnu-toolchain-linux_x86_64/lib/gcc/avr/4.6.2/avr4/libgcc.a(
_clear_bss.o)
*(.data*)
*(.rodata)
*(.rodata*)
*(.gnu.linkonce.d*)
                0x0000000000800060      . = ALIGN (0x2)
                0x0000000000800060      _edata = .
                0x0000000000800060      PROVIDE (__data_end, .)

.bss           0x0000000000800060      0x3
                0x0000000000800060      PROVIDE (__bss_start, .)
*(.bss)
.bss           0x0000000000800060      0x3 demo.o
.bss           0x0000000000800063      0x0 /home/tools/hudson/workspace/avr8
-gnu-toolchain/avr8-gnu-toolchain-linux_x86_64/lib/gcc/avr/4.6.2/avr4/libgcc.a(
_copy_data.o)
.bss           0x0000000000800063      0x0 /home/tools/hudson/workspace/avr8
-gnu-toolchain/avr8-gnu-toolchain-linux_x86_64/lib/gcc/avr/4.6.2/avr4/libgcc.a(
_clear_bss.o)
*(.bss*)
*(COMMON)
                0x0000000000800063      PROVIDE (__bss_end, .)
                0x00000000000000e0      __data_load_start = LOADADDR
                (.data)
                0x00000000000000e0      __data_load_end = (
__data_load_start + SIZEOF (.data))

.noinit        0x0000000000800063      0x0
```

```

0x0000000000800063        PROVIDE (__noinit_start, .)
*(.noinit*)
0x0000000000800063        PROVIDE (__noinit_end, .)
0x0000000000800063        _end = .
0x0000000000800063        PROVIDE (__heap_start, .)

.eeprom      0x0000000000810000      0x0
*(.eeprom*)
0x0000000000810000      __eeprom_end = .

```

The last address in the .text segment is location 0x114 (denoted by `_etext`), so the instructions use up 276 bytes of FLASH.

The .data segment (where initialized static variables are stored) starts at location 0x60, which is the first address after the register bank on an ATmega8 processor.

The next available address in the .data segment is also location 0x60, so the application has no initialized data.

The .bss segment (where uninitialized data is stored) starts at location 0x60.

The next available address in the .bss segment is location 0x63, so the application uses 3 bytes of uninitialized data.

The .eeprom segment (where EEPROM variables are stored) starts at location 0x0.

The next available address in the .eeprom segment is also location 0x0, so there aren't any EEPROM variables.

22.37.6 Generating Intel Hex Files

We have a binary of the application, but how do we get it into the processor? Most (if not all) programmers will not accept a GNU executable as an input file, so we need to do a little more processing. The next step is to extract portions of the binary and save the information into .hex files. The GNU utility that does this is called `avr-objcopy`.

The ROM contents can be pulled from our project's binary and put into the file `demo.hex` using the following command:

```
$ avr-objcopy -j .text -j .data -O ihex demo.elf demo.hex
```

The resulting `demo.hex` file contains:

```

:1000000010E0A0E6B0E0E0EEF0E002C005900D9256
:10001000A036B107D9F710E0A0E6B0E001C01D920C
:10002000A336B107E1F71F920F920FB60F9211247A
:100030002F938F939F93809160008823B9F48091D0
:10004000610090916200019690936200809361003C
:1000500023E08F3F9207F9F09BBD8ABD9F918F915E
:100060002F910F900FBE0F901F901895813029F09F
:100070008091610090916200EFCF8091610090913A
:10008000620001979093620080936100009721F7CE
:1000900010926000E1CF21E020936000DDCF83E883
:1000A0008FBD8EB581608EBD1BBC1ABC82E087BB44
:1000B00084E089BF7894089583E88FBD8EB5816010
:1000C0008EBD1BBC1ABC82E087BB84E089BF7894DC
:1000D00085B7806885BF889585B78F7785BFF8CF4E
:00000001FF

```

The `-j` option indicates that we want the information from the .text and .data segment extracted. If we specify the EEPROM segment, we can generate a .hex file that can be used to program the EEPROM:

```
$ avr-objcopy -j .eeprom --change-section-lma .eeprom=0 -O ihex demo.elf demo_eeprom.hex
```

There is no `demo_eeprom.hex` file written, as that file would be empty.

Starting with version 2.17 of the GNU binutils, the `avr-objcopy` command that used to generate the empty EEPROM files now aborts because of the empty input section .eeprom, so these empty files are not generated. It also signals an error to the Makefile which will be caught there, and makes it print a message about the empty file not being generated.

22.37.7 Letting Make Build the Project

Rather than type these commands over and over, they can all be placed in a make file. To build the demo project using make, save the following in a file called `Makefile`.

Note

This `Makefile` can only be used as input for the GNU version of make.

```

PRG          = demo
OBJ          = demo.o
#MCU_TARGET  = at90s2313
#MCU_TARGET  = at90s2333
#MCU_TARGET  = at90s4414
#MCU_TARGET  = at90s4433
#MCU_TARGET  = at90s4434
#MCU_TARGET  = at90s8515
#MCU_TARGET  = at90s8535
#MCU_TARGET  = atmega128
#MCU_TARGET  = atmega1280
#MCU_TARGET  = atmega1281
#MCU_TARGET  = atmega1284p
#MCU_TARGET  = atmega16
#MCU_TARGET  = atmega163
#MCU_TARGET  = atmega164p
#MCU_TARGET  = atmega165
#MCU_TARGET  = atmega165p
#MCU_TARGET  = atmega168
#MCU_TARGET  = atmega169
#MCU_TARGET  = atmega169p
#MCU_TARGET  = atmega2560
#MCU_TARGET  = atmega2561
#MCU_TARGET  = atmega32
#MCU_TARGET  = atmega324p
#MCU_TARGET  = atmega325
#MCU_TARGET  = atmega3250
#MCU_TARGET  = atmega329
#MCU_TARGET  = atmega3290
#MCU_TARGET  = atmega48
#MCU_TARGET  = atmega64
#MCU_TARGET  = atmega640
#MCU_TARGET  = atmega644
#MCU_TARGET  = atmega644p
#MCU_TARGET  = atmega645
#MCU_TARGET  = atmega6450
#MCU_TARGET  = atmega649
#MCU_TARGET  = atmega6490
MCU_TARGET   = atmega8
#MCU_TARGET  = atmega8515
#MCU_TARGET  = atmega8535
#MCU_TARGET  = atmega88
#MCU_TARGET  = attiny2313
#MCU_TARGET  = attiny24
#MCU_TARGET  = attiny25
#MCU_TARGET  = attiny26
#MCU_TARGET  = attiny261
#MCU_TARGET  = attiny44
#MCU_TARGET  = attiny45
#MCU_TARGET  = attiny461
#MCU_TARGET  = attiny84
#MCU_TARGET  = attiny85
#MCU_TARGET  = attiny861
OPTIMIZE     = -O2

DEFS         =
LIBS         =

# You should not have to change anything below here.

CC           = avr-gcc

# Override is only needed by avr-lib build system.

override CFLAGS      = -g -Wall $(OPTIMIZE) -mmcu=$(MCU_TARGET) $(DEFS)
override LDFLAGS      = -Wl,-Map,$(PRG).map

OBJCOPY       = avr-objcopy

```

```

OBJDUMP      = avr-objdump

all: $(PRG).elf lst text eeprom

$(PRG).elf: $(OBJ)
    $(CC) $(CFLAGS) $(LDFLAGS) -o $@ $^ $(LIBS)

# dependency:
demo.o: demo.c iocompat.h

clean:
    rm -rf *.o $(PRG).elf *.eps *.png *.pdf *.bak
    rm -rf *.lst *.map $(EXTRA_CLEAN_FILES)

lst: $(PRG).lst

%.lst: %.elf
    $(OBJDUMP) -h -S $< > $@

# Rules for building the .text rom images

text: hex bin srec

hex: $(PRG).hex
bin: $(PRG).bin
srec: $(PRG).srec

%.hex: %.elf
    $(OBJCOPY) -j .text -j .data -O ihex $< $@

%.srec: %.elf
    $(OBJCOPY) -j .text -j .data -O srec $< $@

%.bin: %.elf
    $(OBJCOPY) -j .text -j .data -O binary $< $@

# Rules for building the .eeprom rom images

eeprom: ehex ebin esrec

ehex: $(PRG)_eeprom.hex
ebin: $(PRG)_eeprom.bin
esrec: $(PRG)_eeprom.srec

%_eeprom.hex: %.elf
    $(OBJCOPY) -j .eeprom --change-section-lma .eeprom=0 -O ihex $< $@ \
    || { echo empty $@ not generated; exit 0; }

%_eeprom.srec: %.elf
    $(OBJCOPY) -j .eeprom --change-section-lma .eeprom=0 -O srec $< $@ \
    || { echo empty $@ not generated; exit 0; }

%_eeprom.bin: %.elf
    $(OBJCOPY) -j .eeprom --change-section-lma .eeprom=0 -O binary $< $@ \
    || { echo empty $@ not generated; exit 0; }

# Every thing below here is used by avr-libc's build system and can be ignored
# by the casual user.

FIG2DEV      = fig2dev
EXTRA_CLEAN_FILES = *.hex *.bin *.srec

dox: eps png pdf

eps: $(PRG).eps
png: $(PRG).png
pdf: $(PRG).pdf

%.eps: %.fig
    $(FIG2DEV) -L eps $< $@

%.pdf: %.fig
    $(FIG2DEV) -L pdf $< $@

%.png: %.fig
    $(FIG2DEV) -L png $< $@

```

22.37.8 Reference to the source code

The source code is installed under

`$prefix/share/doc/avr-libc/examples/demo/`,

where `$prefix` is a configuration option. For Unix systems, it is usually set to either `/usr` or `/usr/local`.

22.38 A more sophisticated project

This project extends the basic idea of the [simple project](#) to control a LED with a PWM output, but adds methods to adjust the LED brightness. It employs a lot of the basic concepts of avr-libc to achieve that goal.

Understanding this project assumes the simple project has been understood in full, as well as being acquainted with the basic hardware concepts of an AVR microcontroller.

22.38.1 Hardware setup

The demo is set up in a way so it can be run on the ATmega16 that ships with the STK500 development kit. The only external part needed is a potentiometer attached to the ADC. It is connected to a 10-pin ribbon cable for port A, both ends of the potentiometer to pins 9 (GND) and 10 (VCC), and the wiper to pin 1 (port A0). A bypass capacitor from pin 1 to pin 9 (like 47 nF) is recommendable.

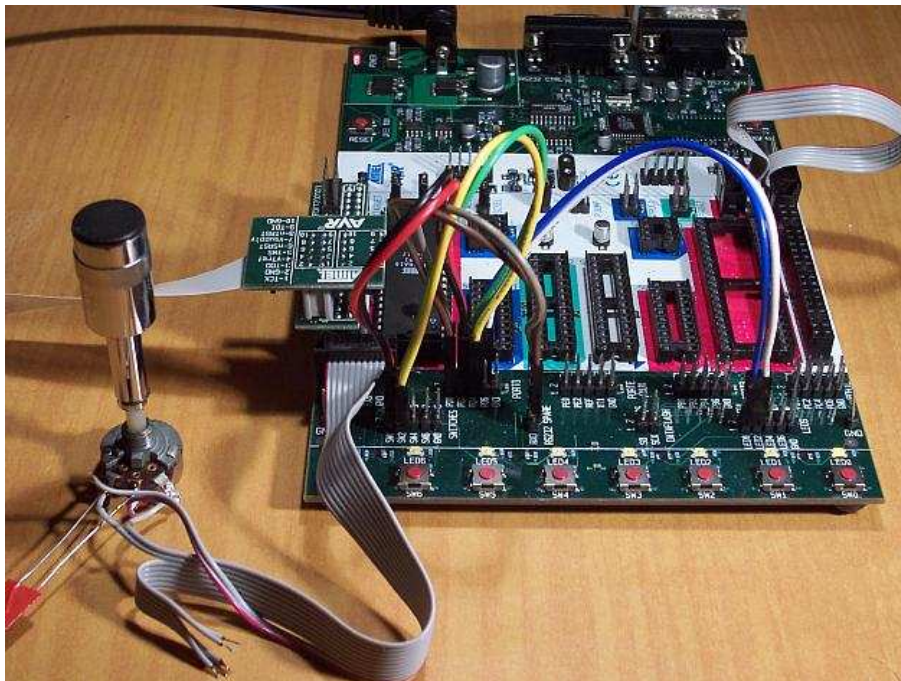


Figure 6: Setup of the STK500

The coloured patch cables are used to provide various interconnections. As there are only four of them in the ST-K500, there are two options to connect them for this demo. The second option for the yellow-green cable is shown in parenthesis in the table. Alternatively, the "squid" cable from the JTAG ICE kit can be used if available.

Port	Header	Color	Function	Connect to
D0	1	brown	RxD	RXD of the RS-232 header
D1	2	grey	TxD	TXD of the RS-232 header

D2	3	black	button "down"	SW0 (pin 1 switches header)
D3	4	red	button "up"	SW1 (pin 2 switches header)
D4	5	green	button "ADC"	SW2 (pin 3 switches header)
D5	6	blue	LED	LED0 (pin 1 LEDs header)
D6	7	(green)	clock out	LED1 (pin 2 LEDs header)
D7	8	white	1-second flash	LED2 (pin 3 LEDs header)
GND	9		unused	
VCC	10		unused	

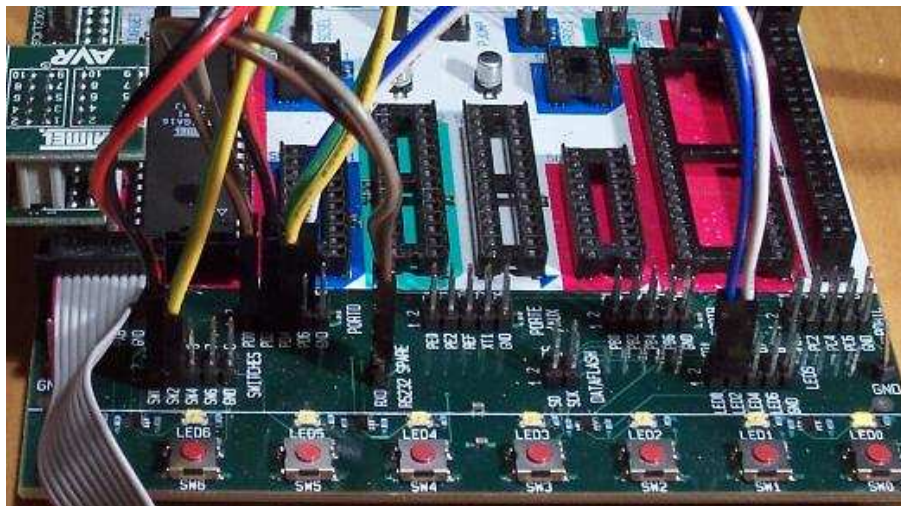


Figure 7: Wiring of the STK500

The following picture shows the alternate wiring where LED1 is connected but SW2 is not:

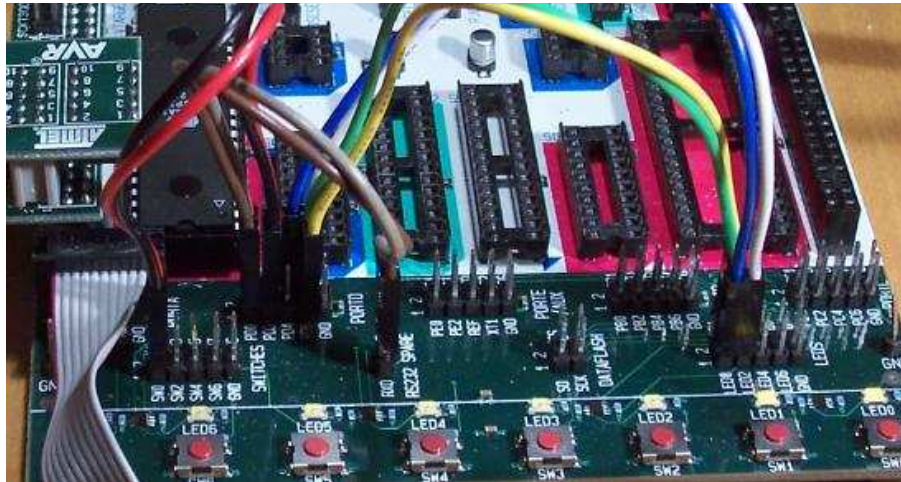


Figure 8: Wiring option #2 of the STK500

As an alternative, this demo can also be run on the popular ATmega8 controller, or its successor ATmega88 as well as the ATmega48 and ATmega168 variants of the latter. These controllers do not have a port named "A", so their ADC inputs are located on port C instead, thus the potentiometer needs to be attached to port C. Likewise, the OC1A output is not on port D pin 5 but on port B pin 1 (PB1). Thus, the above cabling scheme needs to be changed so that PB1 connects to the LED0 pin. (PD6 remains unconnected.) When using the STK500, use one of the jumper cables for this connection. All other port D pins should be connected the same way as described for the ATmega16 above.

When not using an STK500 starter kit, attach the LEDs through some resistor to Vcc (low-active LEDs), and attach pushbuttons from the respective input pins to GND. The internal pull-up resistors are enabled for the pushbutton pins, so no external resistors are needed.

Finally, the demo has been ported to the ATtiny2313 as well. As this AVR does not offer an ADC, everything related to handling the ADC is disabled in the code for that MCU type. Also, port D of this controller type only features 6 pins, so the 1-second flash LED had to be moved from PD6 to PD4. (PD4 is used as the ADC control button on the other MCU types, but that is not needed here.) OC1A is located at PB3 on this device.

The `MCU_TARGET` macro in the Makefile needs to be adjusted appropriately for the alternative controller types.

The flash ROM and RAM consumption of this demo are way below the resources of even an ATmega48, and still well within the capabilities of an ATtiny2313. The major advantage of experimenting with the ATmega16 (in addition that it ships together with an STK500 anyway) is that it can be debugged online via JTAG. Likewise, the ATmega48/88/168 and ATtiny2313 devices can be debugged through debugWire, using the Atmel JTAG ICE mkII or the low-cost AVR Dragon.

Note that in the explanation below, all port/pin names are applicable to the ATmega16 setup.

22.38.2 Functional overview

PD6 will be toggled with each internal clock tick (approx. 10 ms). PD7 will flash once per second.

PD0 and PD1 are configured as UART IO, and can be used to connect the demo kit to a PC (9600 Bd, 8N1 frame format). The demo application talks to the serial port, and it can be controlled from the serial port.

PD2 through PD4 are configured as inputs, and control the application unless control has been taken over by the serial port. Shorting PD2 to GND will decrease the current PWM value, shorting PD3 to GND will increase it.

While PD4 is shorted to GND, one ADC conversion for channel 0 (ADC input is on PA0) will be triggered each internal clock tick, and the resulting value will be used as the PWM value. So the brightness of the LED follows the analog input

value on PC0. VAREF on the STK500 should be set to the same value as VCC.

When running in serial control mode, the function of the watchdog timer can be demonstrated by typing an 'r'. This will make the demo application run in a tight loop without retriggering the watchdog so after some seconds, the watchdog will reset the MCU. This situation can be figured out on startup by reading the MCUCSR register.

The current value of the PWM is backed up in an EEPROM cell after about 3 seconds of idle time after the last change. If that EEPROM cell contains a reasonable (i. e. non-erased) value at startup, it is taken as the initial value for the PWM. This virtually preserves the last value across power cycles. By not updating the EEPROM immediately but only after a timeout, EEPROM wear is reduced considerably compared to immediately writing the value at each change.

22.38.3 A code walkthrough

This section explains the ideas behind individual parts of the code. The [source code](#) has been divided into numbered parts, and the following subsections explain each of these parts.

22.38.3.1 Part 1: Macro definitions

A number of preprocessor macros are defined to improve readability and/or portability of the application.

The first macros describe the IO pins our LEDs and pushbuttons are connected to. This provides some kind of mini-HAL (hardware abstraction layer) so should some of the connections be changed, they don't need to be changed inside the code but only on top. Note that the location of the PWM output itself is mandated by the hardware, so it cannot be easily changed. As the ATmega48/88/168 controllers belong to a more recent generation of AVR's, a number of register and bit names have been changed there, so they are mapped back to their ATmega8/16 equivalents to keep the actual program code portable.

The name `F_CPU` is the conventional name to describe the CPU clock frequency of the controller. This demo project just uses the internal calibrated 1 MHz RC oscillator that is enabled by default. Note that when using the `<util/delay.h>` functions, `F_CPU` needs to be defined before including that file.

The remaining macros have their own comments in the source code. The macro `TMR1_SCALE` shows how to use the preprocessor and the compiler's constant expression computation to calculate the value of timer 1's post-scaler in a way so it only depends on `F_CPU` and the desired software clock frequency. While the formula looks a bit complicated, using a macro offers the advantage that the application will automatically scale to new target softclock or master CPU frequencies without having to manually re-calculate hardcoded constants.

22.38.3.2 Part 2: Variable definitions

The `intflags` structure demonstrates a way to allocate bit variables in memory. Each of the interrupt service routines just sets one bit within that structure, and the application's main loop then monitors the bits in order to act appropriately.

Like all variables that are used to communicate values between an interrupt service routine and the main application, it is declared volatile.

The variable `ee_pwm` is not a variable in the classical C sense that could be used as an lvalue or within an expression to obtain its value. Instead, the

```
__attribute__((section(".eeprom")))
```

marks it as belonging to the [EEPROM section](#). This section is merely used as a placeholder so the compiler can arrange for each individual variable's location in EEPROM. The compiler will also keep track of initial values assigned, and usually the Makefile is arranged to extract these initial values into a separate load file (`largedemo_eeprom.*` in this case) that can be used to initialize the EEPROM.

The actual EEPROM IO must be performed manually.

Similarly, the variable `mcucsr` is kept in the [.noinit](#) section in order to prevent it from being cleared upon application startup.

22.38.3.3 Part 3: Interrupt service routines

The ISR to handle timer 1's overflow interrupt arranges for the software clock. While timer 1 runs the PWM, it calls its overflow handler rather frequently, so the `TMR1_SCALE` value is used as a postscaler to reduce the internal software clock frequency further. If the software clock triggers, it sets the `tmr_int` bitfield, and defers all further tasks to the main loop.

The ADC ISR just fetches the value from the ADC conversion, disables the ADC interrupt again, and announces the presence of the new value in the `adc_int` bitfield. The interrupt is kept disabled while not needed, because the ADC will also be triggered by executing the `SLEEP` instruction in idle mode (which is the default sleep mode). Another option would be to turn off the ADC completely here, but that increases the ADC's startup time (not that it would matter much for this application).

22.38.3.4 Part 4: Auxiliary functions

The function `handle_mcucsr()` uses two **attribute** declarators to achieve specific goals. First, it will instruct the compiler to place the generated code into the `.init3` section of the output. Thus, it will become part of the application initialization sequence. This is done in order to fetch (and clear) the reason of the last hardware reset from `MCUCSR` as early as possible. There is a short period of time where the next reset could already trigger before the current reason has been evaluated. This also explains why the variable `mcucsr` that mirrors the register's value needs to be placed into the `.noinit` section, because otherwise the default initialization (which happens after `.init3`) would blank the value again.

As the initialization code is not called using `CALL/RET` instructions but rather concatenated together, the compiler needs to be instructed to omit the entire function prologue and epilogue. This is performed by the *naked* attribute. So while syntactically, `handle_mcucsr()` is a function to the compiler, the compiler will just emit the instructions for it without setting up any stack frame, and not even a `RET` instruction at the end.

Function `ioinit()` centralizes all hardware setup. The very last part of that function demonstrates the use of the EEPROM variable `ee_pwm` to obtain an EEPROM address that can in turn be applied as an argument to `eeeprom_read_word()`.

The following functions handle UART character and string output. (UART input is handled by an ISR.) There are two string output functions, `printstr()` and `printstr_p()`. The latter function fetches the string from [program memory](#). Both functions translate a newline character into a carriage return/newline sequence, so a simple `\n` can be used in the source code.

The function `set_pwm()` propagates the new PWM value to the PWM, performing range checking. When the value has been changed, the new percentage will be announced on the serial link. The current value is mirrored in the variable `pwm` so others can use it in calculations. In order to allow for a simple calculation of a percentage value without requiring floating-point mathematics, the maximal value of the PWM is restricted to 1000 rather than 1023, so a simple division by 10 can be used. Due to the nature of the human eye, the difference in LED brightness between 1000 and 1023 is not noticeable anyway.

22.38.3.5 Part 5: main()

At the start of `main()`, a variable `mode` is declared to keep the current mode of operation. An enumeration is used to improve the readability. By default, the compiler would allocate a variable of type *int* for an enumeration. The *packed* attribute declarator instructs the compiler to use the smallest possible integer type (which would be an 8-bit type here).

After some initialization actions, the application's main loop follows. In an embedded application, this is normally an infinite loop as there is nothing an application could "exit" into anyway.

At the beginning of the loop, the watchdog timer will be retriggered. If that timer is not triggered for about 2 seconds, it will issue a hardware reset. Care needs to be taken that no code path blocks longer than this, or it needs to frequently perform watchdog resets of its own. An example of such a code path would be the string IO functions: for an overly large string to print (about 2000 characters at 9600 Bd), they might block for too long.

The loop itself then acts on the interrupt indication bitfields as appropriate, and will eventually put the CPU on sleep at

its end to conserve power.

The first interrupt bit that is handled is the (software) timer, at a frequency of approximately 100 Hz. The `CLOCKOUT` pin will be toggled here, so e. g. an oscilloscope can be used on that pin to measure the accuracy of our software clock. Then, the LED flasher for LED2 ("We are alive"-LED) is built. It will flash that LED for about 50 ms, and pause it for another 950 ms. Various actions depending on the operation mode follow. Finally, the 3-second backup timer is implemented that will write the PWM value back to EEPROM once it is not changing anymore.

The ADC interrupt will just adjust the PWM value only.

Finally, the UART Rx interrupt will dispatch on the last character received from the UART.

All the string literals that are used as informational messages within `main()` are placed in [program memory](#) so no SR-AM needs to be allocated for them. This is done by using the `PSTR` macro, and passing the string to `printstr_p()`.

22.38.4 The source code

The source code is installed under

`$prefix/share/doc/avr-libc/examples/largedemo/largedemo.c`,

where `$prefix` is a configuration option. For Unix systems, it is usually set to either `/usr` or `/usr/local`.

22.39 Using the standard IO facilities

This project illustrates how to use the standard IO facilities (stdio) provided by this library. It assumes a basic knowledge of how the stdio subsystem is used in standard C applications, and concentrates on the differences in this library's implementation that mainly result from the differences of the microcontroller environment, compared to a hosted environment of a standard computer.

This demo is meant to supplement the [documentation](#), not to replace it.

22.39.1 Hardware setup

The demo is set up in a way so it can be run on the ATmega16 that ships with the STK500 development kit. The UART port needs to be connected to the RS-232 "spare" port by a jumper cable that connects PD0 to RxD and PD1 to TxD. The RS-232 channel is set up as standard input (`stdin`) and standard output (`stdout`), respectively.

In order to have a different device available for a standard error channel (`stderr`), an industry-standard LCD display with an HD44780-compatible LCD controller has been chosen. This display needs to be connected to port A of the STK500 in the following way:

Port	Header	Function
A0	1	LCD D4
A1	2	LCD D5
A2	3	LCD D6
A3	4	LCD D7
A4	5	LCD R/~W
A5	6	LCD E
A6	7	LCD RS
A7	8	unused
GND	9	GND
VCC	10	Vcc

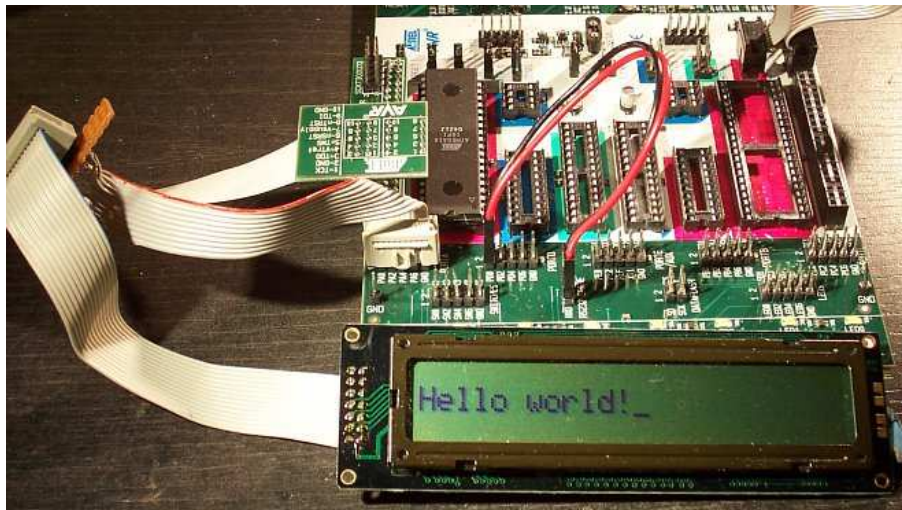


Figure 9: Wiring of the STK500

The LCD controller is used in 4-bit mode, including polling the "busy" flag so the R/~W line from the LCD controller needs to be connected. Note that the LCD controller has yet another supply pin that is used to adjust the LCD's contrast (V5). Typically, that pin connects to a potentiometer between Vcc and GND. Often, it might work to just connect that pin to GND, while leaving it unconnected usually yields an unreadable display.

Port A has been chosen as 7 pins are needed to connect the LCD, yet all other ports are already partially in use: port B has the pins for in-system programming (ISP), port C has the ports for JTAG (can be used for debugging), and port D is used for the UART connection.

22.39.2 Functional overview

The project consists of the following files:

- `stdiodemo.c` This is the main example file.
- `defines.h` Contains some global defines, like the LCD wiring
- `hd44780.c` Implementation of an HD44780 LCD display driver
- `hd44780.h` Interface declarations for the HD44780 driver
- `lcd.c` Implementation of LCD character IO on top of the HD44780 driver
- `lcd.h` Interface declarations for the LCD driver
- `uart.c` Implementation of a character IO driver for the internal UART
- `uart.h` Interface declarations for the UART driver

22.39.3 A code walkthrough

22.39.3.1 `stdiodemo.c`

As usual, include files go first. While conventionally, system header files (those in angular brackets `<...>`) go before application-specific header files (in double quotes), `defines.h` comes as the first header file here. The main reason is that this file defines the value of `F_CPU` which needs to be known before including `<utils/delay.h>`.

The function `ioinit()` summarizes all hardware initialization tasks. As this function is declared to be module-internal only (`static`), the compiler will notice its simplicity, and with a reasonable optimization level in effect, it will inline that function. That needs to be kept in mind when debugging, because the inlining might cause the debugger to "jump around wildly" at a first glance when single-stepping.

The definitions of `uart_str` and `lcd_str` set up two stdio streams. The initialization is done using the `FDEV_SETUP_STREAM()` initializer template macro, so a static object can be constructed that can be used for IO purposes. This initializer macro takes three arguments, two function macros to connect the corresponding output and input functions, respectively, the third one describes the intent of the stream (read, write, or both). Those functions that are not required by the specified intent (like the input function for `lcd_str` which is specified to only perform output operations) can be given as `NULL`.

The stream `uart_str` corresponds to input and output operations performed over the RS-232 connection to a terminal (e.g. from/to a PC running a terminal program), while the `lcd_str` stream provides a method to display character data on the LCD text display.

The function `delay_1s()` suspends program execution for approximately one second. This is done using the `__delay_ms()` function from `<util/delay.h>` which in turn needs the `F_CPU` macro in order to adjust the cycle counts. As the `__delay_ms()` function has a limited range of allowable argument values (depending on `F_CPU`), a value of 10 ms has been chosen as the base delay which would be safe for CPU frequencies of up to about 26 MHz. This function is then called 100 times to accomodate for the actual one-second delay.

In a practical application, long delays like this one were better be handled by a hardware timer, so the main CPU would be free for other tasks while waiting, or could be put on sleep.

At the beginning of `main()`, after initializing the peripheral devices, the default stdio streams `stdin`, `stdout`, and `stderr` are set up by using the existing static `FILE` stream objects. While this is not mandatory, the availability of

`stdin` and `stdout` allows to use the shorthand functions (e.g. `printf()` instead of `fprintf()`), and `stderr` can mnemonically be referred to when sending out diagnostic messages.

Just for demonstration purposes, `stdin` and `stdout` are connected to a stream that will perform UART IO, while `stderr` is arranged to output its data to the LCD text display.

Finally, a main loop follows that accepts simple "commands" entered via the RS-232 connection, and performs a few simple actions based on the commands.

First, a prompt is sent out using `printf_P()` (which takes a [program space string](#)). The string is read into an internal buffer as one line of input, using `fgets()`. While it would be also possible to use `gets()` (which implicitly reads from `stdin`), `gets()` has no control that the user's input does not overflow the input buffer provided so it should never be used at all.

If `fgets()` fails to read anything, the main loop is left. Of course, normally the main loop of a microcontroller application is supposed to never finish, but again, for demonstrational purposes, this explains the error handling of stdio. `fgets()` will return NULL in case of an input error or end-of-file condition on input. Both these conditions are in the domain of the function that is used to establish the stream, `uart_putchar()` in this case. In short, this function returns EOF in case of a serial line "break" condition (extended start condition) has been recognized on the serial line. Common PC terminal programs allow to assert this condition as some kind of out-of-band signalling on an RS-232 connection.

When leaving the main loop, a goodbye message is sent to standard error output (i.e. to the LCD), followed by three dots in one-second spacing, followed by a sequence that will clear the LCD. Finally, `main()` will be terminated, and the library will add an infinite loop, so only a CPU reset will be able to restart the application.

There are three "commands" recognized, each determined by the first letter of the line entered (converted to lower case):

- The 'q' (quit) command has the same effect of leaving the main loop.
- The 'l' (LCD) command takes its second argument, and sends it to the LCD.
- The 'u' (UART) command takes its second argument, and sends it back to the UART connection.

Command recognition is done using `sscanf()` where the first format in the format string just skips over the command itself (as the assignment suppression modifier `*` is given).

22.39.3.2 defines.h

This file just contains a few peripheral definitions.

The `F_CPU` macro defines the CPU clock frequency, to be used in delay loops, as well as in the UART baud rate calculation.

The macro `UART_BAUD` defines the RS-232 baud rate. Depending on the actual CPU frequency, only a limited range of baud rates can be supported.

The remaining macros customize the IO port and pins used for the HD44780 LCD driver. Each definition consists of a letter naming the port this pin is attached to, and a respective bit number. For accessing the data lines, only the first data line gets its own macro (line D4 on the HD44780, lines D0 through D3 are not used in 4-bit mode), all other data lines are expected to be in ascending order next to D4.

22.39.3.3 hd44780.h

This file describes the public interface of the low-level LCD driver that interfaces to the HD44780 LCD controller. Public functions are available to initialize the controller into 4-bit mode, to wait for the controller's busy bit to be clear, and to read or write one byte from or to the controller.

As there are two different forms of controller IO, one to send a command or receive the controller status (RS signal clear), and one to send or receive data to/from the controller's SRAM (RS asserted), macros are provided that build on the mentioned function primitives.

Finally, macros are provided for all the controller commands to allow them to be used symbolically. The HD44780 datasheet explains these basic functions of the controller in more detail.

22.39.3.4 `hd44780.c`

This is the implementation of the low-level HD44780 LCD controller driver.

On top, a few preprocessor glueing tricks are used to establish symbolic access to the hardware port pins the LCD controller is attached to, based on the application's definitions made in `defines.h`.

The `hd44780_pulse_e()` function asserts a short pulse to the controller's E (enable) pin. Since reading back the data asserted by the LCD controller needs to be performed while E is active, this function reads and returns the input data if the parameter `readback` is true. When called with a compile-time constant parameter that is false, the compiler will completely eliminate the unused readback operation, as well as the return value as part of its optimizations.

As the controller is used in 4-bit interface mode, all byte IO to/from the controller needs to be handled as two nibble IOs. The functions `hd44780_outnibble()` and `hd44780_innibble()` implement this. They do not belong to the public interface, so they are declared static.

Building upon these, the public functions `hd44780_outbyte()` and `hd44780_inbyte()` transfer one byte to/from the controller.

The function `hd44780_wait_ready()` waits for the controller to become ready, by continuously polling the controller's status (which is read by performing a byte read with the RS signal cleared), and examining the BUSY flag within the status byte. This function needs to be called before performing any controller IO.

Finally, `hd44780_init()` initializes the LCD controller into 4-bit mode, based on the initialization sequence mandated by the datasheet. As the BUSY flag cannot be examined yet at this point, this is the only part of this code where timed delays are used. While the controller can perform a power-on reset when certain constraints on the power supply rise time are met, always calling the software initialization routine at startup ensures the controller will be in a known state. This function also puts the interface into 4-bit mode (which would not be done automatically after a power-on reset).

22.39.3.5 `lcd.h`

This function declares the public interface of the higher-level (character IO) LCD driver.

22.39.3.6 `lcd.c`

The implementation of the higher-level LCD driver. This driver builds on top of the HD44780 low-level LCD controller driver, and offers a character IO interface suitable for direct use by the standard IO facilities. Where the low-level HD44780 driver deals with setting up controller SRAM addresses, writing data to the controller's SRAM, and controlling display functions like clearing the display, or moving the cursor, this high-level driver allows to just write a character to the LCD, in the assumption this will somehow show up on the display.

Control characters can be handled at this level, and used to perform specific actions on the LCD. Currently, there is only one control character that is being dealt with: a newline character (`\n`) is taken as an indication to clear the display and set the cursor into its initial position upon reception of the next character, so a "new line" of text can be displayed. Therefore, a received newline character is remembered until more characters have been sent by the application, and will only then cause the display to be cleared before continuing. This provides a convenient abstraction where full lines of text can be sent to the driver, and will remain visible at the LCD until the next line is to be displayed.

Further control characters could be implemented, e. g. using a set of escape sequences. That way, it would be possible to implement self-scrolling display lines etc.

The public function `lcd_init()` first calls the initialization entry point of the lower-level HD44780 driver, and then sets up the LCD in a way we'd like to (display cleared, non-blinking cursor enabled, SRAM addresses are increasing so characters will be written left to right).

The public function `lcd_putchar()` takes arguments that make it suitable for being passed as a `put()` function pointer to the stdio stream initialization functions and macros (`fdevopen()`, `FDEV_SETUP_STREAM()` etc.). Thus,

it takes two arguments, the character to display itself, and a reference to the underlying stream object, and it is expected to return 0 upon success.

This function remembers the last unprocessed newline character seen in the function-local static variable `nl_seen`. If a newline character is encountered, it will simply set this variable to a true value, and return to the caller. As soon as the first non-newline character is to be displayed with `nl_seen` still true, the LCD controller is told to clear the display, put the cursor home, and restart at SRAM address 0. All other characters are sent to the display.

The single static function-internal variable `nl_seen` works for this purpose. If multiple LCDs should be controlled using the same set of driver functions, that would not work anymore, as a way is needed to distinguish between the various displays. This is where the second parameter can be used, the reference to the stream itself: instead of keeping the state inside a private variable of the function, it can be kept inside a private object that is attached to the stream itself. A reference to that private object can be attached to the stream (e.g. inside the function `lcd_init()` that then also needs to be passed a reference to the stream) using `fdev_set_udata()`, and can be accessed inside `lcd_putchar()` using `fdev_get_udata()`.

22.39.3.7 `uart.h`

Public interface definition for the RS-232 UART driver, much like in `lcd.h` except there is now also a character input function available.

As the RS-232 input is line-buffered in this example, the macro `RX_BUFSIZE` determines the size of that buffer.

22.39.3.8 `uart.c`

This implements an stdio-compatible RS-232 driver using an AVR's standard UART (or USART in asynchronous operation mode). Both, character output as well as character input operations are implemented. Character output takes care of converting the internal newline `\n` into its external representation carriage return/line feed (`\r\n`).

Character input is organized as a line-buffered operation that allows to minimally edit the current line until it is "sent" to the application when either a carriage return (`\r`) or newline (`\n`) character is received from the terminal. The line editing functions implemented are:

- `\b` (back space) or `\177` (delete) deletes the previous character
- `^u` (control-U, ASCII NAK) deletes the entire input buffer
- `^w` (control-W, ASCII ETB) deletes the previous input word, delimited by white space
- `^r` (control-R, ASCII DC2) sends a `\r`, then reprints the buffer (refresh)
- `\t` (tabulator) will be replaced by a single space

The function `uart_init()` takes care of all hardware initialization that is required to put the UART into a mode with 8 data bits, no parity, one stop bit (commonly referred to as 8N1) at the baud rate configured in `defines.h`. At low CPU clock frequencies, the `U2X` bit in the UART is set, reducing the oversampling from 16x to 8x, which allows for a 9600 Bd rate to be achieved with tolerable error using the default 1 MHz RC oscillator.

The public function `uart_putchar()` again has suitable arguments for direct use by the stdio stream interface. It performs the `\n` into `\r\n` translation by recursively calling itself when it sees a `\n` character. Just for demonstration purposes, the `\a` (audible bell, ASCII BEL) character is implemented by sending a string to `stderr`, so it will be displayed on the LCD.

The public function `uart_getchar()` implements the line editor. If there are characters available in the line buffer (variable `rxp` is not NULL), the next character will be returned from the buffer without any UART interaction.

If there are no characters inside the line buffer, the input loop will be entered. Characters will be read from the UART, and processed accordingly. If the UART signalled a framing error (FE bit set), typically caused by the terminal sending a *line break* condition (start condition held much longer than one character period), the function will return an end-of-file

condition using `_FDEV_EOF`. If there was a data overrun condition on input (DOR bit set), an error condition will be returned as `_FDEV_ERR`.

Line editing characters are handled inside the loop, potentially modifying the buffer status. If characters are attempted to be entered beyond the size of the line buffer, their reception is refused, and a `\a` character is sent to the terminal. If a `\r` or `\n` character is seen, the variable `rxp` (receive pointer) is set to the beginning of the buffer, the loop is left, and the first character of the buffer will be returned to the application. (If no other characters have been entered, this will just be the newline character, and the buffer is marked as being exhausted immediately again.)

22.39.4 The source code

The source code is installed under

`$prefix/share/doc/avr-libc/examples/stdiodemo/`,

where `$prefix` is a configuration option. For Unix systems, it is usually set to either `/usr` or `/usr/local`.

22.40 Example using the two-wire interface (TWI)

Some newer devices of the ATmega series contain builtin support for interfacing the microcontroller to a two-wire bus, called TWI. This is essentially the same called I2C by Philips, but that term is avoided in Atmel's documentation due to patenting issues.

For further documentation, see:

http://www.nxp.com/documents/user_manual/UM10204.pdf

22.40.1 Introduction into TWI

The two-wire interface consists of two signal lines named *SDA* (serial data) and *SCL* (serial clock) (plus a ground line, of course). All devices participating in the bus are connected together, using open-drain driver circuitry, so the wires must be terminated using appropriate pullup resistors. The pullups must be small enough to recharge the line capacity in short enough time compared to the desired maximal clock frequency, yet large enough so all drivers will not be overloaded. There are formulas in the datasheet that help selecting the pullups.

Devices can either act as a master to the bus (i. e., they initiate a transfer), or as a slave (they only act when being called by a master). The bus is multi-master capable, and a particular device implementation can act as either master or slave at different times. Devices are addressed using a 7-bit address (coordinated by Philips) transferred as the first byte after the so-called start condition. The LSB of that byte is *R/~W*, i. e. it determines whether the request to the slave is to read or write data during the next cycles. (There is also an option to have devices using 10-bit addresses but that is not covered by this example.)

22.40.2 The TWI example project

The ATmega TWI hardware supports both, master and slave operation. This example will only demonstrate how to use an AVR microcontroller as TWI master. The implementation is kept simple in order to concentrate on the steps that are required to talk to a TWI slave, so all processing is done in polled-mode, waiting for the TWI interface to indicate that the next processing step is due (by setting the *TWINT* interrupt bit). If it is desired to have the entire TWI communication happen in "background", all this can be implemented in an interrupt-controlled way, where only the start condition needs to be triggered from outside the interrupt routine.

There is a variety of slave devices available that can be connected to a TWI bus. For the purpose of this example, an EEPROM device out of the industry-standard **24Cxx** series has been chosen (where *xx* can be one of **01**, **02**, **04**, **08**, or **16**) which are available from various vendors. The choice was almost arbitrary, mainly triggered by the fact that an EEPROM device is being talked to in both directions, reading and writing the slave device, so the example will demonstrate the details of both.

Usually, there is probably not much need to add more EEPROM to an ATmega system that way: the smallest possible AVR device that offers hardware TWI support is the ATmega8 which comes with 512 bytes of EEPROM, which is equivalent to an 24C04 device. The ATmega128 already comes with twice as much EEPROM as the 24C16 would offer. One exception might be to use an externally connected EEPROM device that is removable; e. g. SDRAM PC memory comes with an integrated TWI EEPROM that carries the RAM configuration information.

22.40.3 The Source Code

The source code is installed under

`$prefix/share/doc/avr-libc/examples/twitest/twitest.c,`

where `$prefix` is a configuration option. For Unix systems, it is usually set to either `/usr` or `/usr/local`.

Note [1]

The header file `<util/twi.h>` contains some macro definitions for symbolic constants used in the TWI status register. These definitions match the names used in the Atmel datasheet except that all names have been prefixed with `TW_`.

Note [2]

The clock is used in timer calculations done by the compiler, for the UART baud rate and the TWI clock rate.

Note [3]

The address assigned for the 24Cxx EEPROM consists of 1010 in the upper four bits. The following three bits are normally available as slave sub-addresses, allowing to operate more than one device of the same type on a single bus, where the actual subaddress used for each device is configured by hardware strapping. However, since the next data packet following the device selection only allows for 8 bits that are used as an EEPROM address, devices that require more than 8 address bits (24C04 and above) "steal" subaddress bits and use them for the EEPROM cell address bits 9 to 11 as required. This example simply assumes all subaddress bits are 0 for the smaller devices, so the E0, E1, and E2 inputs of the 24Cxx must be grounded.

Note [3a]

EEPROMs of type 24C32 and above cannot be addressed anymore even with the subaddress bit trick. Thus, they require the upper address bits being sent separately on the bus. When activating the `WORD_ADDRESS_16BIT` define, the algorithm implements that auxiliary address byte transmission.

Note [4]

For slow clocks, enable the 2 x U[S]ART clock multiplier, to improve the baud rate error. This will allow a 9600 Bd communication using the standard 1 MHz calibrated RC oscillator. See also the Baud rate tables in the datasheets.

Note [5]

The datasheet explains why a minimum TWBR value of 10 should be maintained when running in master mode. Thus, for system clocks below 3.6 MHz, we cannot run the bus at the intended clock rate of 100 kHz but have to slow down accordingly.

Note [6]

This function is used by the standard output facilities that are utilized in this example for debugging and demonstration purposes.

Note [7]

In order to shorten the data to be sent over the TWI bus, the 24Cxx EEPROMs support multiple data bytes transferred within a single request, maintaining an internal address counter that is updated after each data byte transferred successfully. When reading data, one request can read the entire device memory if desired (the counter would wrap around and start back from 0 when reaching the end of the device).

Note [8]

When reading the EEPROM, a first device selection must be made with write intent ($R/\sim W$ bit set to 0 indicating a write operation) in order to transfer the EEPROM address to start reading from. This is called *master transmitter mode*. Each completion of a particular step in TWI communication is indicated by an asserted TWINT bit in TWCR. (An interrupt would be generated if allowed.) After performing any actions that are needed for the next communication step, the interrupt condition must be manually cleared by *setting* the TWINT bit. Unlike with many other interrupt sources, this would even be required when using a true interrupt routine, since as soon as TWINT is re-asserted, the next bus transaction will start.

Note [9]

Since the TWI bus is multi-master capable, there is potential for a bus contention when one master starts to access the bus. Normally, the TWI bus interface unit will detect this situation, and will not initiate a start condition while the bus is busy. However, in case two masters were starting at exactly the same time, the way bus arbitration works, there is always a chance that one master could lose arbitration of the bus during any transmit operation. A master that has lost arbitration is required by the protocol to immediately cease talking on the bus; in particular it must not initiate a stop condition in order to not corrupt the ongoing transfer from the active master. In this example, upon detecting a lost arbitration condition, the entire transfer is going to be restarted. This will cause a new start condition to be initiated, which will normally be delayed until the currently active master has released the bus.

Note [10]

Next, the device slave is going to be reselected (using a so-called repeated start condition which is meant to guarantee that the bus arbitration will remain at the current master) using the same slave address (SLA), but this time with read intent ($R/\sim W$ bit set to 1) in order to request the device slave to start transferring data from the slave to the master in the next packet.

Note [11]

If the EEPROM device is still busy writing one or more cells after a previous write request, it will simply leave its bus interface drivers at high impedance, and does not respond to a selection in any way at all. The master selecting the device will see the high level at SDA after transferring the SLA+R/W packet as a NACK to its selection request. Thus, the select process is simply started over (effectively causing a *repeated start condition*), until the device will eventually respond. This polling procedure is recommended in the 24Cxx datasheet in order to minimize the busy wait time when writing. Note that in case a device is broken and never responds to a selection (e. g. since it is no longer present at all), this will cause an infinite loop. Thus the maximal number of iterations made until the device is declared to be not responding at all, and an error is returned, will be limited to MAX_ITER.

Note [12]

This is called *master receiver mode*: the bus master still supplies the SCL clock, but the device slave drives the SDA line with the appropriate data. After 8 data bits, the master responds with an ACK bit (SDA driven low) in order to request another data transfer from the slave, or it can leave the SDA line high (NACK), indicating to the slave that it is going to stop the transfer now. Assertion of ACK is handled by setting the TWEA bit in TWCR when starting the current transfer.

Note [13]

The control word sent out in order to initiate the transfer of the next data packet is initially set up to assert the TWEA bit. During the last loop iteration, TWEA is de-asserted so the client will get informed that no further transfer is desired.

Note [14]

Except in the case of lost arbitration, all bus transactions must properly be terminated by the master initiating a stop condition.

Note [15]

Writing to the EEPROM device is simpler than reading, since only a master transmitter mode transfer is needed. Note that the first packet after the SLA+W selection is always considered to be the EEPROM address for the next operation. (This packet is exactly the same as the one above sent before starting to read the device.) In case a master transmitter mode transfer is going to send more than one data packet, all following packets will be considered data bytes to write at the indicated address. The internal address pointer will be incremented after each write operation.

Note [16]

24Cxx devices can become write-protected by strapping their \sim WC pin to logic high. (Leaving it unconnected is explicitly allowed, and constitutes logic low level, i. e. no write protection.) In case of a write protected device, all data transfer attempts will be NACKed by the device. Note that some devices might not implement this.

23 Data Structure Documentation

23.1 `div_t` Struct Reference

Data Fields

- int [quot](#)
- int [rem](#)

23.1.1 Detailed Description

Result type for function [div\(\)](#).

23.1.2 Field Documentation

23.1.2.1 `int div_t::quot`

The Quotient.

23.1.2.2 `int div_t::rem`

The Remainder.

The documentation for this struct was generated from the following file:

- [stdlib.h](#)

23.2 `ldiv_t` Struct Reference

Data Fields

- long [quot](#)
- long [rem](#)

23.2.1 Detailed Description

Result type for function [ldiv\(\)](#).

23.2.2 Field Documentation

23.2.2.1 `long ldiv_t::quot`

The Quotient.

23.2.2.2 `long ldiv_t::rem`

The Remainder.

The documentation for this struct was generated from the following file:

- [stdlib.h](#)

24 File Documentation

24.1 assert.h File Reference

Macros

- #define [assert](#)(expression)

24.1.1 Detailed Description

24.2 atoi.S File Reference

24.2.1 Detailed Description

24.3 atol.S File Reference

24.3.1 Detailed Description

24.4 atomic.h File Reference

Macros

- #define [ATOMIC_BLOCK](#)(type)
- #define [NONATOMIC_BLOCK](#)(type)
- #define [ATOMIC_RESTORESTATE](#)
- #define [ATOMIC_FORCEON](#)
- #define [NONATOMIC_RESTORESTATE](#)
- #define [NONATOMIC_FORCEOFF](#)

24.4.1 Detailed Description

24.5 boot.h File Reference

Macros

- #define [BOOTLOADER_SECTION](#) __attribute__((section(".bootloader")))
- #define [__COMMON_ASB](#) RWWSB
- #define [__COMMON_ASRE](#) RWWSRE
- #define [BLB12](#) 5
- #define [BLB11](#) 4
- #define [BLB02](#) 3
- #define [BLB01](#) 2
- #define [boot_spm_interrupt_enable](#)() (__SPM_REG |= (uint8_t)_BV(SPMIE))
- #define [boot_spm_interrupt_disable](#)() (__SPM_REG &= (uint8_t)~_BV(SPMIE))
- #define [boot_is_spm_interrupt](#)() (__SPM_REG & (uint8_t)_BV(SPMIE))
- #define [boot_rww_busy](#)() (__SPM_REG & (uint8_t)_BV(__COMMON_ASB))
- #define [boot_spm_busy](#)() (__SPM_REG & (uint8_t)_BV(__SPM_ENABLE))
- #define [boot_spm_busy_wait](#)() do{}while([boot_spm_busy](#)())
- #define [__BOOT_PAGE_ERASE](#) (_BV(__SPM_ENABLE) | _BV(PGERS))
- #define [__BOOT_PAGE_WRITE](#) (_BV(__SPM_ENABLE) | _BV(PGWRT))

- #define **__BOOT_PAGE_FILL_BV**(__SPM_ENABLE)
- #define **__BOOT_RWW_ENABLE** (**_BV**(__SPM_ENABLE) | **_BV**(__COMMON_ASRE))
- #define **__boot_page_fill_normal**(address, data)
- #define **__boot_page_fill_alterate**(address, data)
- #define **__boot_page_fill_extended**(address, data)
- #define **__boot_page_erase_normal**(address)
- #define **__boot_page_erase_alterate**(address)
- #define **__boot_page_erase_extended**(address)
- #define **__boot_page_write_normal**(address)
- #define **__boot_page_write_alterate**(address)
- #define **__boot_page_write_extended**(address)
- #define **__boot_rww_enable**()
- #define **__boot_rww_enable_alterate**()
- #define **__boot_lock_bits_set**(lock_bits)
- #define **__boot_lock_bits_set_alterate**(lock_bits)
- #define **GET_LOW_FUSE_BITS** (0x0000)
- #define **GET_LOCK_BITS** (0x0001)
- #define **GET_EXTENDED_FUSE_BITS** (0x0002)
- #define **GET_HIGH_FUSE_BITS** (0x0003)
- #define **boot_lock_fuse_bits_get**(address)
- #define **__BOOT_SIGROW_READ** (**_BV**(__SPM_ENABLE) | **_BV**(SIGRD))
- #define **boot_signature_byte_get**(addr)
- #define **boot_page_fill**(address, data) **__boot_page_fill_normal**(address, data)
- #define **boot_page_erase**(address) **__boot_page_erase_normal**(address)
- #define **boot_page_write**(address) **__boot_page_write_normal**(address)
- #define **boot_rww_enable**() **__boot_rww_enable**()
- #define **boot_lock_bits_set**(lock_bits) **__boot_lock_bits_set**(lock_bits)
- #define **boot_page_fill_safe**(address, data)
- #define **boot_page_erase_safe**(address)
- #define **boot_page_write_safe**(address)
- #define **boot_rww_enable_safe**()
- #define **boot_lock_bits_set_safe**(lock_bits)

24.5.1 Detailed Description

24.5.2 Macro Definition Documentation

24.5.2.1 #define __boot_lock_bits_set(lock_bits)

Value:

```
(__extension__({
    uint8_t value = (uint8_t) (~ (lock_bits));
    __asm__ __volatile__
    (
        "ldi r30, 1\n\t"
        "ldi r31, 0\n\t"
        "mov r0, %2\n\t"
        "sts %0, %1\n\t"
        "spm\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_LOCK_BITS_SET)),
          "r" (value)
        : "r0", "r30", "r31"
    );
}))
```

24.5.2.2 #define __boot_lock_bits_set_alternate(lock_bits)**Value:**

```
(__extension__({
    uint8_t value = (uint8_t) (~ (lock_bits));
    __asm__ __volatile__
    (
        "ldi r30, 1\n\t"
        "ldi r31, 0\n\t"
        "mov r0, %2\n\t"
        "sts %0, %1\n\t"
        "spm\n\t"
        ".word 0xffff\n\t"
        "nop\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_LOCK_BITS_SET)),
          "r" (value)
        : "r0", "r30", "r31"
    );
}))
```

24.5.2.3 #define __boot_page_erase_alternate(address)**Value:**

```
(__extension__({
    __asm__ __volatile__
    (
        "sts %0, %1\n\t"
        "spm\n\t"
        ".word 0xffff\n\t"
        "nop\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_PAGE_ERASE)),
          "z" ((uint16_t) (address))
    );
}))
```

24.5.2.4 #define __boot_page_erase_extended(address)**Value:**

```
(__extension__({
    __asm__ __volatile__
    (
        "movw r30, %A3\n\t"
        "sts %1, %C3\n\t"
        "sts %0, %2\n\t"
        "spm\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "i" (_SFR_MEM_ADDR(RAMPZ)),
          "r" ((uint8_t) (__BOOT_PAGE_ERASE)),
          "r" ((uint32_t) (address))
        : "r30", "r31"
    );
}))
```

24.5.2.5 #define __boot_page_erase_normal(address)**Value:**

```
(__extension__({
    __asm__ __volatile__
    (
```

```

        "sts %0, %1\n\t"
        "spm\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_PAGE_ERASE)),
          "z" ((uint16_t) (address))
    );
}
}

```

24.5.2.6 #define __boot_page_fill_alterate(address, data)

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "movw r0, %3\n\t"
        "sts %0, %1\n\t"
        "spm\n\t"
        ".word 0xffff\n\t"
        "nop\n\t"
        "clr r1\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_PAGE_FILL)),
          "z" ((uint16_t) (address)),
          "r" ((uint16_t) (data))
        : "r0"
    );
}
}

```

24.5.2.7 #define __boot_page_fill_extended(address, data)

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "movw r0, %4\n\t"
        "movw r30, %A3\n\t"
        "sts %1, %C3\n\t"
        "sts %0, %2\n\t"
        "spm\n\t"
        "clr r1\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "i" (_SFR_MEM_ADDR(RAMPZ)),
          "r" ((uint8_t) (__BOOT_PAGE_FILL)),
          "r" ((uint32_t) (address)),
          "r" ((uint16_t) (data))
        : "r0", "r30", "r31"
    );
}
}

```

24.5.2.8 #define __boot_page_fill_normal(address, data)

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "movw r0, %3\n\t"
        "sts %0, %1\n\t"
        "spm\n\t"
        "clr r1\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t) (__BOOT_PAGE_FILL)),
          "z" ((uint16_t) (address)),
          "r" ((uint16_t) (data))
    );
}
}

```



```

        : "r0"
    );
}))

```

24.5.2.9 #define __boot_page_write_alterate(address)

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "sts %0, %1\n\t"
        "spm\n\t"
        ".word 0xffff\n\t"
        "nop\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t)(__BOOT_PAGE_WRITE)),
          "z" ((uint16_t)(address))
    );
}))

```

24.5.2.10 #define __boot_page_write_extended(address)

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "movw r30, %A3\n\t"
        "sts %1, %C3\n\t"
        "sts %0, %2\n\t"
        "spm\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "i" (_SFR_MEM_ADDR(RAMPZ)),
          "r" ((uint8_t)(__BOOT_PAGE_WRITE)),
          "r" ((uint32_t)(address))
        : "r30", "r31"
    );
}))

```

24.5.2.11 #define __boot_page_write_normal(address)

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "sts %0, %1\n\t"
        "spm\n\t"
        :
        : "i" (_SFR_MEM_ADDR(__SPM_REG)),
          "r" ((uint8_t)(__BOOT_PAGE_WRITE)),
          "z" ((uint16_t)(address))
    );
}))

```

24.5.2.12 #define __boot_rww_enable()

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "sts %0, %1\n\t"

```

```

        "spm\n\t"
        :
        : "i"  (_SFR_MEM_ADDR(__SPM_REG)),
        : "r"  ((uint8_t) (__BOOT_RWW_ENABLE))
    );
}))

```

24.5.2.13 #define __boot_rww_enable_alterate()

Value:

```

(__extension__({
    __asm__ __volatile__
    (
        "sts %0, %1\n\t"
        "spm\n\t"
        ".word 0xffff\n\t"
        "nop\n\t"
        :
        : "i"  (_SFR_MEM_ADDR(__SPM_REG)),
        : "r"  ((uint8_t) (__BOOT_RWW_ENABLE))
    );
}))

```

24.6 cpufunc.h File Reference

Macros

- `#define _NOP()`
- `#define _MemoryBarrier()`

24.6.1 Detailed Description

24.7 crc16.h File Reference

Functions

- static inline `uint16_t _crc16_update` (uint16_t __crc, uint8_t __data)
- static inline `uint16_t _crc_xmodem_update` (uint16_t __crc, uint8_t __data)
- static inline `uint16_t _crc_ccitt_update` (uint16_t __crc, uint8_t __data)
- static inline `uint8_t _crc_ibutton_update` (uint8_t __crc, uint8_t __data)

24.7.1 Detailed Description

24.8 ctype.h File Reference

Functions

Character classification routines

These functions perform character classification. They return true or false status depending whether the character passed to the function falls into the function's classification (i.e. `isdigit()` returns true if its argument is any value '0' through '9', inclusive). If the input is not an unsigned char value, all of this function return false.

- int `isalnum` (int __c)
- int `isalpha` (int __c)
- int `isascii` (int __c)

- int [isblank](#) (int __c)
- int [iscntrl](#) (int __c)
- int [isdigit](#) (int __c)
- int [isgraph](#) (int __c)
- int [islower](#) (int __c)
- int [isprint](#) (int __c)
- int [ispunct](#) (int __c)
- int [isspace](#) (int __c)
- int [isupper](#) (int __c)
- int [isxdigit](#) (int __c)

Character conversion routines

This realization permits all possible values of integer argument. The [toascii\(\)](#) function clears all highest bits. The [tolower\(\)](#) and [toupper\(\)](#) functions return an input argument as is, if it is not an unsigned char value.

- int [toascii](#) (int __c)
- int [tolower](#) (int __c)
- int [toupper](#) (int __c)

24.8.1 Detailed Description

24.9 delay_basic.h File Reference

Functions

- void [_delay_loop_1](#) (uint8_t __count)
- void [_delay_loop_2](#) (uint16_t __count)

24.9.1 Detailed Description

24.10 errno.h File Reference

Macros

- #define [EDOM](#) 33
- #define [ERANGE](#) 34

Variables

- int **errno**

24.10.1 Detailed Description

24.11 fdevopen.c File Reference

Functions

- [FILE *](#) [fdevopen](#) (int(*put)(char, [FILE *](#)), int(*get)([FILE *](#)))

24.11.1 Detailed Description

24.12 ffs.S File Reference

24.12.1 Detailed Description

24.13 ffsI.S File Reference

24.13.1 Detailed Description

24.14 ffsII.S File Reference

24.14.1 Detailed Description

24.15 fuse.h File Reference

Macros

- #define **FUSEMEM** __attribute__((section (".fuse")))
- #define **FUSES** __fuse_t __fuse FUSEMEM

24.15.1 Detailed Description

24.16 interrupt.h File Reference

Macros

Global manipulation of the interrupt flag

The global interrupt flag is maintained in the I bit of the status register (SREG).

Handling interrupts frequently requires attention regarding atomic access to objects that could be altered by code running within an interrupt context, see <[util/atomic.h](#)>.

Frequently, interrupts are being disabled for periods of time in order to perform certain operations without being disturbed; see [Problems with reordering code](#) for things to be taken into account with respect to compiler optimizations.

- #define [sei\(\)](#)
- #define [cli\(\)](#)

Macros for writing interrupt handler functions

- #define [ISR](#)(vector, attributes)
- #define [SIGNAL](#)(vector)
- #define [EMPTY_INTERRUPT](#)(vector)
- #define [ISR_ALIAS](#)(vector, target_vector)
- #define [reti\(\)](#)
- #define [BADISR_vect](#)

ISR attributes

- #define [ISR_BLOCK](#)
- #define [ISR_NOBLOCK](#)
- #define [ISR_NAKED](#)
- #define [ISR_ALIASOF](#)(target_vector)

24.16.1 Detailed Description

@{

24.17 inttypes.h File Reference

Macros

macros for printf and scanf format specifiers

For C++, these are only included if `__STDC_LIMIT_MACROS` is defined before including `<inttypes.h>`.

- `#define PRId8 "d"`
- `#define PRIdLEAST8 "d"`
- `#define PRIdFAST8 "d"`
- `#define PRIi8 "i"`
- `#define PRIiLEAST8 "i"`
- `#define PRIiFAST8 "i"`
- `#define PRId16 "d"`
- `#define PRIdLEAST16 "d"`
- `#define PRIdFAST16 "d"`
- `#define PRIi16 "i"`
- `#define PRIiLEAST16 "i"`
- `#define PRIiFAST16 "i"`
- `#define PRId32 "ld"`
- `#define PRIdLEAST32 "ld"`
- `#define PRIdFAST32 "ld"`
- `#define PRIi32 "li"`
- `#define PRIiLEAST32 "li"`
- `#define PRIiFAST32 "li"`
- `#define PRIdPTR PRId16`
- `#define PRIiPTR PRIi16`
- `#define PRLo8 "o"`
- `#define PRLoLEAST8 "o"`
- `#define PRLoFAST8 "o"`
- `#define PRlu8 "u"`
- `#define PRluLEAST8 "u"`
- `#define PRluFAST8 "u"`
- `#define PRlx8 "x"`
- `#define PRlxLEAST8 "x"`
- `#define PRlxFAST8 "x"`
- `#define PRlX8 "X"`
- `#define PRlXLEAST8 "X"`
- `#define PRlXFAST8 "X"`
- `#define PRLo16 "o"`
- `#define PRLoLEAST16 "o"`
- `#define PRLoFAST16 "o"`
- `#define PRlu16 "u"`
- `#define PRluLEAST16 "u"`
- `#define PRluFAST16 "u"`
- `#define PRlx16 "x"`
- `#define PRlxLEAST16 "x"`
- `#define PRlxFAST16 "x"`
- `#define PRlX16 "X"`
- `#define PRlXLEAST16 "X"`
- `#define PRlXFAST16 "X"`
- `#define PRLo32 "lo"`
- `#define PRLoLEAST32 "lo"`
- `#define PRLoFAST32 "lo"`

- #define [PRIu32](#) "lu"
- #define [PRIuLEAST32](#) "lu"
- #define [PRIuFAST32](#) "lu"
- #define [PRIx32](#) "lx"
- #define [PRIxLEAST32](#) "lx"
- #define [PRIxFAST32](#) "lx"
- #define [PRIX32](#) "IX"
- #define [PRIXLEAST32](#) "IX"
- #define [PRIXFAST32](#) "IX"
- #define [PRIoPTR](#) [PRIo16](#)
- #define [PRIuPTR](#) [PRIu16](#)
- #define [PRIxPTR](#) [PRIx16](#)
- #define [PRIXPTR](#) [PRIX16](#)
- #define [SCNd16](#) "d"
- #define [SCNdLEAST16](#) "d"
- #define [SCNdFAST16](#) "d"
- #define [SCNi16](#) "i"
- #define [SCNiLEAST16](#) "i"
- #define [SCNiFAST16](#) "i"
- #define [SCNd32](#) "ld"
- #define [SCNdLEAST32](#) "ld"
- #define [SCNdFAST32](#) "ld"
- #define [SCNi32](#) "li"
- #define [SCNiLEAST32](#) "li"
- #define [SCNiFAST32](#) "li"
- #define [SCNdPTR](#) [SCNd16](#)
- #define [SCNiPTR](#) [SCNi16](#)
- #define [SCNo16](#) "o"
- #define [SCNoLEAST16](#) "o"
- #define [SCNoFAST16](#) "o"
- #define [SCNu16](#) "u"
- #define [SCNuLEAST16](#) "u"
- #define [SCNuFAST16](#) "u"
- #define [SCNx16](#) "x"
- #define [SCNxLEAST16](#) "x"
- #define [SCNxFAST16](#) "x"
- #define [SCNo32](#) "lo"
- #define [SCNoLEAST32](#) "lo"
- #define [SCNoFAST32](#) "lo"
- #define [SCNu32](#) "lu"
- #define [SCNuLEAST32](#) "lu"
- #define [SCNuFAST32](#) "lu"
- #define [SCNx32](#) "lx"
- #define [SCNxLEAST32](#) "lx"
- #define [SCNxFAST32](#) "lx"
- #define [SCNoPTR](#) [SCNo16](#)
- #define [SCNuPTR](#) [SCNu16](#)
- #define [SCNxPTR](#) [SCNx16](#)

Typedefs

Far pointers for memory access >64K

- typedef [int32_t](#) [int_farptr_t](#)
- typedef [uint32_t](#) [uint_farptr_t](#)

24.17.1 Detailed Description

24.18 io.h File Reference

24.18.1 Detailed Description

24.19 lock.h File Reference

Macros

- #define **LOCKMEM** __attribute__((section (".lock")))
- #define **LOCKBITS** unsigned char __lock LOCKMEM
- #define **LOCKBITS_DEFAULT** (0xFF)

24.19.1 Detailed Description

24.20 math.h File Reference

Macros

- #define **M_E** 2.7182818284590452354
- #define **M_LOG2E** 1.4426950408889634074 /* log_2 e */
- #define **M_LOG10E** 0.43429448190325182765 /* log_10 e */
- #define **M_LN2** 0.69314718055994530942 /* log_e 2 */
- #define **M_LN10** 2.30258509299404568402 /* log_e 10 */
- #define **M_PI** 3.14159265358979323846 /* pi */
- #define **M_PI_2** 1.57079632679489661923 /* pi/2 */
- #define **M_PI_4** 0.78539816339744830962 /* pi/4 */
- #define **M_1_PI** 0.31830988618379067154 /* 1/pi */
- #define **M_2_PI** 0.63661977236758134308 /* 2/pi */
- #define **M_2_SQRTPI** 1.12837916709551257390 /* 2/sqrt(pi) */
- #define **M_SQRT2** 1.41421356237309504880 /* sqrt(2) */
- #define **M_SQRT1_2** 0.70710678118654752440 /* 1/sqrt(2) */
- #define **NAN** __builtin_nan("")
- #define **INFINITY** __builtin_inf()
- #define **cosf** cos
- #define **sinf** sin
- #define **tanf** tan
- #define **fabsf** fabs
- #define **fmodf** fmod
- #define **sqrtf** sqrt
- #define **cbrtf** cbrt
- #define **hypotf** hypot
- #define **squaref** square
- #define **floorf** floor
- #define **ceilf** ceil
- #define **frexpf** frexp
- #define **ldexpf** ldexp
- #define **expf** exp
- #define **coshf** cosh

- #define [sinhf](#) [sinh](#)
- #define [tanhf](#) [tanh](#)
- #define [acosf](#) [acos](#)
- #define [asinf](#) [asin](#)
- #define [atanf](#) [atan](#)
- #define [atan2f](#) [atan2](#)
- #define [logf](#) [log](#)
- #define [log10f](#) [log10](#)
- #define [powf](#) [pow](#)
- #define [isnanf](#) [isnan](#)
- #define [isinf](#) [isinf](#)
- #define [isfinitef](#) [isfinite](#)
- #define [copysignf](#) [copysign](#)
- #define [signbitf](#) [signbit](#)
- #define [fdimf](#) [fdim](#)
- #define [fmaf](#) [fma](#)
- #define [fmaxf](#) [fmax](#)
- #define [fminf](#) [fmin](#)
- #define [truncf](#) [trunc](#)
- #define [roundf](#) [round](#)
- #define [lroundf](#) [lround](#)
- #define [lrintf](#) [lrint](#)

Functions

- double [cos](#) (double __x)
- double [sin](#) (double __x)
- double [tan](#) (double __x)
- double [fabs](#) (double __x)
- double [fmod](#) (double __x, double __y)
- double [modf](#) (double __x, double *__iptr)
- float [modff](#) (float __x, float *__iptr)
- double [sqrt](#) (double __x)
- double [cbrt](#) (double __x)
- double [hypot](#) (double __x, double __y)
- double [square](#) (double __x)
- double [floor](#) (double __x)
- double [ceil](#) (double __x)
- double [frexp](#) (double __x, int *__pexp)
- double [ldexp](#) (double __x, int __exp)
- double [exp](#) (double __x)
- double [cosh](#) (double __x)
- double [sinh](#) (double __x)
- double [tanh](#) (double __x)
- double [acos](#) (double __x)
- double [asin](#) (double __x)
- double [atan](#) (double __x)
- double [atan2](#) (double __y, double __x)
- double [log](#) (double __x)
- double [log10](#) (double __x)

- double [pow](#) (double __x, double __y)
- int [isnan](#) (double __x)
- int [isinf](#) (double __x)
- static int [isfinite](#) (double __x)
- static double [copysign](#) (double __x, double __y)
- int [signbit](#) (double __x)
- double [fdim](#) (double __x, double __y)
- double [fma](#) (double __x, double __y, double __z)
- double [fmax](#) (double __x, double __y)
- double [fmin](#) (double __x, double __y)
- double [trunc](#) (double __x)
- double [round](#) (double __x)
- long [lround](#) (double __x)
- long [lrint](#) (double __x)

24.20.1 Detailed Description

24.21 memccpy.S File Reference

24.21.1 Detailed Description

24.22 memchr.S File Reference

24.22.1 Detailed Description

24.23 memchr_P.S File Reference

24.23.1 Detailed Description

24.24 memcmp.S File Reference

24.24.1 Detailed Description

24.25 memcmp_P.S File Reference

24.25.1 Detailed Description

24.26 memcmp_PF.S File Reference

24.26.1 Detailed Description

24.27 memcpy.S File Reference

24.27.1 Detailed Description

24.28 memcpy_P.S File Reference

24.28.1 Detailed Description

24.29 memmem.S File Reference

24.29.1 Detailed Description

24.30 memmove.S File Reference

24.30.1 Detailed Description

24.31 memchr.S File Reference

24.31.1 Detailed Description

24.32 memchr.P.S File Reference

24.32.1 Detailed Description

24.33 memset.S File Reference

24.33.1 Detailed Description

24.34 parity.h File Reference

Macros

- #define [parity_even_bit](#)(val)

24.34.1 Detailed Description

24.35 pgmspace.h File Reference

Macros

- #define [__need_size_t](#)
- #define [__ATTR_PROGMEM__](#) [__attribute__\(\(__progmem__\)\)](#)
- #define [__ATTR_PURE__](#) [__attribute__\(\(__pure__\)\)](#)
- #define [PROGMEM](#) [__ATTR_PROGMEM__](#)
- #define [PGM_P](#) const char *
- #define [PGM_VOID_P](#) const void *
- #define [PSTR](#)(s) ((const [PROGMEM](#) char *) (s))
- #define [__LPM_classic__](#)(addr)
- #define [__LPM_tiny__](#)(addr)
- #define [__LPM_enhanced__](#)(addr)
- #define [__LPM_word_classic__](#)(addr)
- #define [__LPM_word_tiny__](#)(addr)
- #define [__LPM_word_enhanced__](#)(addr)
- #define [__LPM_dword_classic__](#)(addr)
- #define [__LPM_dword_tiny__](#)(addr)
- #define [__LPM_dword_enhanced__](#)(addr)
- #define [__LPM_float_classic__](#)(addr)
- #define [__LPM_float_tiny__](#)(addr)
- #define [__LPM_float_enhanced__](#)(addr)
- #define [__LPM](#)(addr) [__LPM_classic__](#)(addr)

- #define `__LPM_word(addr) __LPM_word_classic__(addr)`
- #define `__LPM_dword(addr) __LPM_dword_classic__(addr)`
- #define `__LPM_float(addr) __LPM_float_classic__(addr)`
- #define `pgm_read_byte_near(address_short) __LPM__((uint16_t)(address_short))`
- #define `pgm_read_word_near(address_short) __LPM_word__((uint16_t)(address_short))`
- #define `pgm_read_dword_near(address_short) __LPM_dword__((uint16_t)(address_short))`
- #define `pgm_read_float_near(address_short) __LPM_float__((uint16_t)(address_short))`
- #define `__ELPM_classic__(addr)`
- #define `__ELPM_enhanced__(addr)`
- #define `__ELPM_xmega__(addr)`
- #define `__ELPM_word_classic__(addr)`
- #define `__ELPM_word_enhanced__(addr)`
- #define `__ELPM_word_xmega__(addr)`
- #define `__ELPM_dword_classic__(addr)`
- #define `__ELPM_dword_enhanced__(addr)`
- #define `__ELPM_dword_xmega__(addr)`
- #define `__ELPM_float_classic__(addr)`
- #define `__ELPM_float_enhanced__(addr)`
- #define `__ELPM_float_xmega__(addr)`
- #define `__ELPM(addr) __ELPM_classic__(addr)`
- #define `__ELPM_word(addr) __ELPM_word_classic__(addr)`
- #define `__ELPM_dword(addr) __ELPM_dword_classic__(addr)`
- #define `__ELPM_float(addr) __ELPM_float_classic__(addr)`
- #define `pgm_read_byte_far(address_long) __ELPM__((uint32_t)(address_long))`
- #define `pgm_read_word_far(address_long) __ELPM_word__((uint32_t)(address_long))`
- #define `pgm_read_dword_far(address_long) __ELPM_dword__((uint32_t)(address_long))`
- #define `pgm_read_float_far(address_long) __ELPM_float__((uint32_t)(address_long))`
- #define `pgm_read_byte(address_short) pgm_read_byte_near(address_short)`
- #define `pgm_read_word(address_short) pgm_read_word_near(address_short)`
- #define `pgm_read_dword(address_short) pgm_read_dword_near(address_short)`
- #define `pgm_read_float(address_short) pgm_read_float_near(address_short)`
- #define `pgm_get_far_address(var)`

Typedefs

- typedef void `PROGMEM prog_void`
- typedef char `PROGMEM prog_char`
- typedef unsigned char `PROGMEM prog_uchar`
- typedef `int8_t` `PROGMEM prog_int8_t`
- typedef `uint8_t` `PROGMEM prog_uint8_t`
- typedef `int16_t` `PROGMEM prog_int16_t`
- typedef `uint16_t` `PROGMEM prog_uint16_t`
- typedef `int32_t` `PROGMEM prog_int32_t`
- typedef `uint32_t` `PROGMEM prog_uint32_t`
- typedef `int64_t` `PROGMEM prog_int64_t`
- typedef `uint64_t` `PROGMEM prog_uint64_t`

Functions

- `const void * memchr_P (const void *, int __val, size_t __len)`
- `int memcmp_P (const void *, const void *, size_t) __ATTR_PURE__`
- `void * memccpy_P (void *, const void *, int __val, size_t)`
- `void * memcpy_P (void *, const void *, size_t)`
- `void * memmem_P (const void *, size_t, const void *, size_t) __ATTR_PURE__`
- `const void * memrchr_P (const void *, int __val, size_t __len)`
- `char * strcat_P (char *, const char *)`
- `const char * strchr_P (const char *, int __val)`
- `const char * strchrnul_P (const char *, int __val)`
- `int strcmp_P (const char *, const char *) __ATTR_PURE__`
- `char * strcpy_P (char *, const char *)`
- `int strcasecmp_P (const char *, const char *) __ATTR_PURE__`
- `char * strcasestr_P (const char *, const char *) __ATTR_PURE__`
- `size_t strcspn_P (const char *__s, const char *__reject) __ATTR_PURE__`
- `size_t strlcat_P (char *, const char *, size_t)`
- `size_t strlcpy_P (char *, const char *, size_t)`
- `size_t __strlen_P (const char *)`
- `size_t strlen_P (const char *, size_t)`
- `int strncmp_P (const char *, const char *, size_t) __ATTR_PURE__`
- `int strncasecmp_P (const char *, const char *, size_t) __ATTR_PURE__`
- `char * strncat_P (char *, const char *, size_t)`
- `char * strncpy_P (char *, const char *, size_t)`
- `char * strpbrk_P (const char *__s, const char *__accept) __ATTR_PURE__`
- `const char * strrchr_P (const char *, int __val)`
- `char * strsep_P (char **__sp, const char *__delim)`
- `size_t strspn_P (const char *__s, const char *__accept) __ATTR_PURE__`
- `char * strstr_P (const char *, const char *) __ATTR_PURE__`
- `char * strtok_P (char *__s, const char *__delim)`
- `char * strtok_rP (char *__s, const char *__delim, char **__last)`
- `size_t strlen_PF (uint_farptr_t src)`
- `size_t strlen_PF (uint_farptr_t src, size_t len)`
- `void * memcpy_PF (void *dest, uint_farptr_t src, size_t len)`
- `char * strcpy_PF (char *dest, uint_farptr_t src)`
- `char * strncpy_PF (char *dest, uint_farptr_t src, size_t len)`
- `char * strcat_PF (char *dest, uint_farptr_t src)`
- `size_t strlcat_PF (char *dst, uint_farptr_t src, size_t siz)`
- `char * strncat_PF (char *dest, uint_farptr_t src, size_t len)`
- `int strcmp_PF (const char *s1, uint_farptr_t s2) __ATTR_PURE__`
- `int strncmp_PF (const char *s1, uint_farptr_t s2, size_t n) __ATTR_PURE__`
- `int strcasecmp_PF (const char *s1, uint_farptr_t s2) __ATTR_PURE__`
- `int strncasecmp_PF (const char *s1, uint_farptr_t s2, size_t n) __ATTR_PURE__`
- `char * strstr_PF (const char *s1, uint_farptr_t s2)`
- `size_t strlcpy_PF (char *dst, uint_farptr_t src, size_t siz)`
- `int memcmp_PF (const void *, uint_farptr_t, size_t) __ATTR_PURE__`
- `__attribute__((__always_inline__)) static inline size_t strlen_P(const char *s)`
- `static size_t strlen_P (const char *s)`

24.35.1 Detailed Description

24.35.2 Macro Definition Documentation

24.35.2.1 #define __ELPM_classic__(addr)

Value:

```

(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint8_t __result; \
    __asm__ \
    ( \
        "out %2, %C1" "\n\t" \
        "mov r31, %B1" "\n\t" \
        "mov r30, %A1" "\n\t" \
        "elpm" "\n\t" \
        "mov %0, r0" "\n\t" \
        : "=r" (__result) \
        : "r" (__addr32), \
          "I" (_SFR_IO_ADDR(RAMPZ)) \
        : "r0", "r30", "r31" \
    ); \
    __result; \
}))

```

24.35.2.2 #define __ELPM_dword_enhanced__(addr)

Value:

```

(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint32_t __result; \
    __asm__ \
    ( \
        "out %2, %C1" "\n\t" \
        "movw r30, %1" "\n\t" \
        "elpm %A0, Z+" "\n\t" \
        "elpm %B0, Z+" "\n\t" \
        "elpm %C0, Z+" "\n\t" \
        "elpm %D0, Z" "\n\t" \
        : "=r" (__result) \
        : "r" (__addr32), \
          "I" (_SFR_IO_ADDR(RAMPZ)) \
        : "r30", "r31" \
    ); \
    __result; \
}))

```

24.35.2.3 #define __ELPM_dword_xmega__(addr)

Value:

```

(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint32_t __result; \
    __asm__ \
    ( \
        "in __tmp_reg__, %2" "\n\t" \
        "out %2, %C1" "\n\t" \
        "movw r30, %1" "\n\t" \
        "elpm %A0, Z+" "\n\t" \
        "elpm %B0, Z+" "\n\t" \
        "elpm %C0, Z+" "\n\t" \
        "elpm %D0, Z" "\n\t" \
        "out %2, __tmp_reg__" \
        : "=r" (__result) \
        : "r" (__addr32), \
          "I" (_SFR_IO_ADDR(RAMPZ)) \
        : "r30", "r31" \
    ); \
    __result; \
}))

```

```

    );
    __result;
}))

```

24.35.2.4 #define __ELPM_enhanced__(addr)

Value:

```

(__extension__({
    uint32_t __addr32 = (uint32_t)(addr);
    uint8_t __result;
    __asm__
    (
        "out %2, %C1" "\n\t"
        "movw r30, %1" "\n\t"
        "elpm %0, Z+" "\n\t"
        : "=r" (__result)
        : "r" (__addr32),
          "I" (_SFR_IO_ADDR(RAMPZ))
        : "r30", "r31"
    );
    __result;
}))

```

24.35.2.5 #define __ELPM_float_enhanced__(addr)

Value:

```

(__extension__({
    uint32_t __addr32 = (uint32_t)(addr);
    float __result;
    __asm__
    (
        "out %2, %C1" "\n\t"
        "movw r30, %1" "\n\t"
        "elpm %A0, Z+" "\n\t"
        "elpm %B0, Z+" "\n\t"
        "elpm %C0, Z+" "\n\t"
        "elpm %D0, Z" "\n\t"
        : "=r" (__result)
        : "r" (__addr32),
          "I" (_SFR_IO_ADDR(RAMPZ))
        : "r30", "r31"
    );
    __result;
}))

```

24.35.2.6 #define __ELPM_float_xmega__(addr)

Value:

```

(__extension__({
    uint32_t __addr32 = (uint32_t)(addr);
    float __result;
    __asm__
    (
        "in __tmp_reg__, %2" "\n\t"
        "out %2, %C1" "\n\t"
        "movw r30, %1" "\n\t"
        "elpm %A0, Z+" "\n\t"
        "elpm %B0, Z+" "\n\t"
        "elpm %C0, Z+" "\n\t"
        "elpm %D0, Z" "\n\t"
        "out %2, __tmp_reg__"
        : "=r" (__result)
        : "r" (__addr32),
          "I" (_SFR_IO_ADDR(RAMPZ))
        : "r30", "r31"
    );
    __result;
}))

```

24.35.2.7 #define __ELPM_word_class__(addr)

Value:

```
(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint16_t __result;
    __asm__
    (
        "out %2, %C1"      "\n\t"
        "mov r31, %B1"     "\n\t"
        "mov r30, %A1"     "\n\t"
        "elpm"             "\n\t"
        "mov %A0, r0"       "\n\t"
        "in r0, %2"         "\n\t"
        "adiw r30, 1"       "\n\t"
        "adc r0, __zero_reg__" "\n\t"
        "out %2, r0"        "\n\t"
        "elpm"             "\n\t"
        "mov %B0, r0"       "\n\t"
        : "=r" (__result)
        : "r" (__addr32),
          "I" (_SFR_IO_ADDR(RAMPZ))
        : "r0", "r30", "r31"
    );
    __result;
}))
```

24.35.2.8 #define __ELPM_word_enhanced__(addr)

Value:

```
(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint16_t __result;
    __asm__
    (
        "out %2, %C1"      "\n\t"
        "movw r30, %1"     "\n\t"
        "elpm %A0, Z+"      "\n\t"
        "elpm %B0, Z"       "\n\t"
        : "=r" (__result)
        : "r" (__addr32),
          "I" (_SFR_IO_ADDR(RAMPZ))
        : "r30", "r31"
    );
    __result;
}))
```

24.35.2.9 #define __ELPM_word_xmega__(addr)

Value:

```
(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint16_t __result;
    __asm__
    (
        "in __tmp_reg__, %2" "\n\t"
        "out %2, %C1"      "\n\t"
        "movw r30, %1"     "\n\t"
        "elpm %A0, Z+"      "\n\t"
        "elpm %B0, Z"       "\n\t"
        "out %2, __tmp_reg__"
        : "=r" (__result)
        : "r" (__addr32),
          "I" (_SFR_IO_ADDR(RAMPZ))
        : "r30", "r31"
    );
    __result;
}))
```

24.35.2.10 #define __ELPM_xmega__(addr)**Value:**

```
(__extension__({
    uint32_t __addr32 = (uint32_t)(addr); \
    uint8_t __result; \
    __asm__ \
    ( \
        "in __tmp_reg__, %2" "\n\t" \
        "out %2, %C1" "\n\t" \
        "movw r30, %1" "\n\t" \
        "elpm %0, Z+" "\n\t" \
        "out %2, __tmp_reg__" \
        : "=r" (__result) \
        : "r" (__addr32), \
          "I" (_SFR_IO_ADDR(RAMPZ)) \
        : "r30", "r31" \
    ); \
    __result; \
}))
```

24.35.2.11 #define __LPM_classic__(addr)**Value:**

```
(__extension__({
    uint16_t __addr16 = (uint16_t)(addr); \
    uint8_t __result; \
    __asm__ \
    ( \
        "lpm" "\n\t" \
        "mov %0, r0" "\n\t" \
        : "=r" (__result) \
        : "z" (__addr16) \
        : "r0" \
    ); \
    __result; \
}))
```

24.35.2.12 #define __LPM_dword_classic__(addr)**Value:**

```
(__extension__({
    uint16_t __addr16 = (uint16_t)(addr); \
    uint32_t __result; \
    __asm__ \
    ( \
        "lpm" "\n\t" \
        "mov %A0, r0" "\n\t" \
        "adiw r30, 1" "\n\t" \
        "lpm" "\n\t" \
        "mov %B0, r0" "\n\t" \
        "adiw r30, 1" "\n\t" \
        "lpm" "\n\t" \
        "mov %C0, r0" "\n\t" \
        "adiw r30, 1" "\n\t" \
        "lpm" "\n\t" \
        "mov %D0, r0" "\n\t" \
        : "=r" (__result), "=z" (__addr16) \
        : "1" (__addr16) \
        : "r0" \
    ); \
    __result; \
}))
```

24.35.2.13 #define __LPM_dword_enhanced__(addr)**Value:**


```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr);
    uint32_t __result;
    __asm__
    (
        "lpm %A0, Z+" "\n\t"
        "lpm %B0, Z+" "\n\t"
        "lpm %C0, Z+" "\n\t"
        "lpm %D0, Z"  "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
    );
    __result;
}))

```

24.35.2.14 #define __LPM_dword_tiny__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr) +
        __AVR_TINY_PM_BASE_ADDRESS__;
    uint32_t __result;
    __asm__
    (
        "ld %A0, z+" "\n\t"
        "ld %B0, z+" "\n\t"
        "ld %C0, z+" "\n\t"
        "ld %D0, z"  "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
    );
    __result;
}))

```

24.35.2.15 #define __LPM_enhanced__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr);
    uint8_t __result;
    __asm__
    (
        "lpm %0, Z" "\n\t"
        : "=r" (__result)
        : "z" (__addr16)
    );
    __result;
}))

```

24.35.2.16 #define __LPM_float_classic__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr);
    float __result;
    __asm__
    (
        "lpm"
        "mov %A0, r0" "\n\t"
        "adiw r30, 1" "\n\t"
        "lpm"
        "mov %B0, r0" "\n\t"
        "adiw r30, 1" "\n\t"
        "lpm"
        "mov %C0, r0" "\n\t"
        "adiw r30, 1" "\n\t"
        "lpm"

```

```

        "mov %D0, r0"      "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
        : "r0"
    );
    __result;
}))

```

24.35.2.17 #define __LPM_float_enhanced__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr);
    float __result;
    __asm__
    (
        "lpm %A0, z+"      "\n\t"
        "lpm %B0, z+"      "\n\t"
        "lpm %C0, z+"      "\n\t"
        "lpm %D0, z"       "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
    );
    __result;
}))

```

24.35.2.18 #define __LPM_float_tiny__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr) +
        __AVR_TINY_PM_BASE_ADDRESS__; \
    float __result;
    __asm__
    (
        "ld %A0, z+"      "\n\t"
        "ld %B0, z+"      "\n\t"
        "ld %C0, z+"      "\n\t"
        "ld %D0, z"       "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
    );
    __result;
}))

```

24.35.2.19 #define __LPM_tiny__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr) +
        __AVR_TINY_PM_BASE_ADDRESS__; \
    uint8_t __result;
    __asm__
    (
        "ld %0, z"        "\n\t"
        : "=r" (__result)
        : "z" (__addr16)
    );
    __result;
}))

```

24.35.2.20 #define __LPM_word_classic__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr);
    uint16_t __result;
    __asm__
    (
        "lpm"           "\n\t"
        "mov %A0, r0"    "\n\t"
        "adiw r30, 1"    "\n\t"
        "lpm"           "\n\t"
        "mov %B0, r0"    "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
        : "r0"
    );
    __result;
}))

```

24.35.2.21 #define __LPM_word_enhanced__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr);
    uint16_t __result;
    __asm__
    (
        "lpm %A0, Z+"    "\n\t"
        "lpm %B0, Z"     "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
    );
    __result;
}))

```

24.35.2.22 #define __LPM_word_tiny__(addr)

Value:

```

(__extension__({
    uint16_t __addr16 = (uint16_t)(addr) +
        __AVR_TINY_PM_BASE_ADDRESS__;
    uint16_t __result;
    __asm__
    (
        "ld %A0, z+"     "\n\t"
        "ld %B0, z"      "\n\t"
        : "=r" (__result), "=z" (__addr16)
        : "1" (__addr16)
    );
    __result;
}))

```

24.35.2.23 #define pgm_get_far_address(var)

Value:

```

({
    uint_farptr_t tmp;

    __asm__ __volatile__(
        "ldi    %A0, lo8(%1)"
        "ldi    %B0, hi8(%1)"
        "ldi    %C0, hh8(%1)"
        "clr    %D0"
        :
        : "d" (tmp)
        : "p" (&(var))
    );
    tmp;
})

```

24.36 power.h File Reference

Macros

- #define **clock_prescale_get()** (clock_div_t)(CLKPR & (uint8_t)((1<<CLKPS0)|(1<<CLKPS1)|(1<<CLKPS2)|(1<<CLKPS3)))

Enumerations

- enum **clock_div_t** {
clock_div_1 = 0, **clock_div_2** = 1, **clock_div_4** = 2, **clock_div_8** = 3,
clock_div_16 = 4, **clock_div_32** = 5, **clock_div_64** = 6, **clock_div_128** = 7,
clock_div_256 = 8 }

Functions

- static __inline__ void **clock_prescale_set** (clock_div_t) __attribute__((__always_inline__))

24.36.1 Detailed Description

24.37 setbaud.h File Reference

Macros

- #define **BAUD_TOL** 2
- #define **UBRR_VALUE**
- #define **UBRRL_VALUE**
- #define **UBRRH_VALUE**
- #define **USE_2X** 0

24.37.1 Detailed Description

24.38 setjmp.h File Reference

Macros

- #define **__ATTR_NORETURN__** __attribute__((__noreturn__))

Functions

- int **setjmp** (jmp_buf __jmpb)
- void **longjmp** (jmp_buf __jmpb, int __ret) __ATTR_NORETURN__

24.38.1 Detailed Description

24.39 signature.h File Reference

24.39.1 Detailed Description

24.40 sleep.h File Reference

Macros

- #define **_SLEEP_CONTROL_REG** MCUCR
- #define **_SLEEP_ENABLE_MASK** [_BV](#)(SE)

Functions

- void [sleep_enable](#) (void)
- void [sleep_disable](#) (void)
- void [sleep_cpu](#) (void)
- void **sleep_mode** (void)
- void **sleep_bod_disable** (void)

24.40.1 Detailed Description

24.41 stdint.h File Reference

Macros

- #define **__USING_MINT8** 0
- #define **__CONCATenate**(left, right) left ## right
- #define **__CONCAT**(left, right) __CONCATenate(left, right)

Limits of specified-width integer types

C++ implementations should define these macros only when `__STDC_LIMIT_MACROS` is defined before `<stdint.h>` is included

- #define [INT8_MAX](#) 0x7f
- #define [INT8_MIN](#) (-[INT8_MAX](#) - 1)
- #define [UINT8_MAX](#) (__CONCAT([INT8_MAX](#), U) * 2U + 1U)
- #define [INT16_MAX](#) 0x7fff
- #define [INT16_MIN](#) (-[INT16_MAX](#) - 1)
- #define [UINT16_MAX](#) (__CONCAT([INT16_MAX](#), U) * 2U + 1U)
- #define [INT32_MAX](#) 0x7fffffffL
- #define [INT32_MIN](#) (-[INT32_MAX](#) - 1L)
- #define [UINT32_MAX](#) (__CONCAT([INT32_MAX](#), U) * 2UL + 1UL)
- #define [INT64_MAX](#) 0x7fffffffffffffffLL
- #define [INT64_MIN](#) (-[INT64_MAX](#) - 1LL)
- #define [UINT64_MAX](#) (__CONCAT([INT64_MAX](#), U) * 2ULL + 1ULL)

Limits of minimum-width integer types

- #define [INT_LEAST8_MAX](#) [INT8_MAX](#)
- #define [INT_LEAST8_MIN](#) [INT8_MIN](#)
- #define [UINT_LEAST8_MAX](#) [UINT8_MAX](#)
- #define [INT_LEAST16_MAX](#) [INT16_MAX](#)
- #define [INT_LEAST16_MIN](#) [INT16_MIN](#)
- #define [UINT_LEAST16_MAX](#) [UINT16_MAX](#)
- #define [INT_LEAST32_MAX](#) [INT32_MAX](#)
- #define [INT_LEAST32_MIN](#) [INT32_MIN](#)
- #define [UINT_LEAST32_MAX](#) [UINT32_MAX](#)
- #define [INT_LEAST64_MAX](#) [INT64_MAX](#)

- #define INT_LEAST64_MIN INT64_MIN
- #define UINT_LEAST64_MAX UINT64_MAX

Limits of fastest minimum-width integer types

- #define INT_FAST8_MAX INT8_MAX
- #define INT_FAST8_MIN INT8_MIN
- #define UINT_FAST8_MAX UINT8_MAX
- #define INT_FAST16_MAX INT16_MAX
- #define INT_FAST16_MIN INT16_MIN
- #define UINT_FAST16_MAX UINT16_MAX
- #define INT_FAST32_MAX INT32_MAX
- #define INT_FAST32_MIN INT32_MIN
- #define UINT_FAST32_MAX UINT32_MAX
- #define INT_FAST64_MAX INT64_MAX
- #define INT_FAST64_MIN INT64_MIN
- #define UINT_FAST64_MAX UINT64_MAX

Limits of integer types capable of holding object pointers

- #define INTPTR_MAX INT16_MAX
- #define INTPTR_MIN INT16_MIN
- #define UINTPTR_MAX UINT16_MAX

Limits of greatest-width integer types

- #define INTMAX_MAX INT64_MAX
- #define INTMAX_MIN INT64_MIN
- #define UINTMAX_MAX UINT64_MAX

Limits of other integer types

C++ implementations should define these macros only when `__STDC_LIMIT_MACROS` is defined before `<stdint.h>` is included

- #define PTRDIFF_MAX INT16_MAX
- #define PTRDIFF_MIN INT16_MIN
- #define SIG_ATOMIC_MAX INT8_MAX
- #define SIG_ATOMIC_MIN INT8_MIN
- #define SIZE_MAX (__CONCAT(INT16_MAX, U))

Macros for integer constants

C++ implementations should define these macros only when `__STDC_CONSTANT_MACROS` is defined before `<stdint.h>` is included.

These definitions are valid for integer constants without suffix and for macros defined as integer constant without suffix

- #define INT8_C(value) ((int8_t) value)
- #define UINT8_C(value) ((uint8_t) __CONCAT(value, U))
- #define INT16_C(value) value
- #define UINT16_C(value) __CONCAT(value, U)
- #define INT32_C(value) __CONCAT(value, L)
- #define UINT32_C(value) __CONCAT(value, UL)
- #define INT64_C(value) __CONCAT(value, LL)
- #define UINT64_C(value) __CONCAT(value, ULL)
- #define INTMAX_C(value) __CONCAT(value, LL)
- #define UINTMAX_C(value) __CONCAT(value, ULL)

Typedefs

Exact-width integer types

Integer types having exactly the specified width

- typedef signed char [int8_t](#)
- typedef unsigned char [uint8_t](#)
- typedef signed int [int16_t](#)
- typedef unsigned int [uint16_t](#)
- typedef signed long int [int32_t](#)
- typedef unsigned long int [uint32_t](#)
- typedef signed long long int [int64_t](#)
- typedef unsigned long long int [uint64_t](#)

Integer types capable of holding object pointers

These allow you to declare variables of the same size as a pointer.

- typedef [int16_t](#) [intptr_t](#)
- typedef [uint16_t](#) [uintptr_t](#)

Minimum-width integer types

Integer types having at least the specified width

- typedef [int8_t](#) [int_least8_t](#)
- typedef [uint8_t](#) [uint_least8_t](#)
- typedef [int16_t](#) [int_least16_t](#)
- typedef [uint16_t](#) [uint_least16_t](#)
- typedef [int32_t](#) [int_least32_t](#)
- typedef [uint32_t](#) [uint_least32_t](#)
- typedef [int64_t](#) [int_least64_t](#)
- typedef [uint64_t](#) [uint_least64_t](#)

Fastest minimum-width integer types

Integer types being usually fastest having at least the specified width

- typedef [int8_t](#) [int_fast8_t](#)
- typedef [uint8_t](#) [uint_fast8_t](#)
- typedef [int16_t](#) [int_fast16_t](#)
- typedef [uint16_t](#) [uint_fast16_t](#)
- typedef [int32_t](#) [int_fast32_t](#)
- typedef [uint32_t](#) [uint_fast32_t](#)
- typedef [int64_t](#) [int_fast64_t](#)
- typedef [uint64_t](#) [uint_fast64_t](#)

Greatest-width integer types

Types designating integer data capable of representing any value of any integer type in the corresponding signed or unsigned category

- typedef [int64_t](#) [intmax_t](#)
- typedef [uint64_t](#) [uintmax_t](#)

24.41.1 Detailed Description

24.42 stdio.h File Reference

Macros

- #define **__need_NULL**
- #define **__need_size_t**
- #define **FILE** struct __file
- #define **stdin** (__iob[0])
- #define **stdout** (__iob[1])
- #define **stderr** (__iob[2])
- #define **EOF** (-1)
- #define **fdev_set_udata**(stream, u) do { (stream)->udata = u; } while(0)
- #define **fdev_get_udata**(stream) ((stream)->udata)
- #define **fdev_setup_stream**(stream, put, get, rflag)
- #define **_FDEV_SETUP_READ** __SRD
- #define **_FDEV_SETUP_WRITE** __SWR
- #define **_FDEV_SETUP_RW** (__SRD|__SWR)
- #define **_FDEV_ERR** (-1)
- #define **_FDEV_EOF** (-2)
- #define **FDEV_SETUP_STREAM**(put, get, rflag)
- #define **fdev_close**()
- #define **putc**(__c, __stream) **fputc**(__c, __stream)
- #define **putchar**(__c) **fputc**(__c, **stdout**)
- #define **getc**(__stream) **fgetc**(__stream)
- #define **getchar**() **fgetc**(**stdin**)
- #define **SEEK_SET** 0
- #define **SEEK_CUR** 1
- #define **SEEK_END** 2

Functions

- int **fclose** (**FILE** * __stream)
- int **vfprintf** (**FILE** * __stream, const char * __fmt, va_list __ap)
- int **vfprintf_P** (**FILE** * __stream, const char * __fmt, va_list __ap)
- int **fputc** (int __c, **FILE** * __stream)
- int **printf** (const char * __fmt,...)
- int **printf_P** (const char * __fmt,...)
- int **vprintf** (const char * __fmt, va_list __ap)
- int **sprintf** (char * __s, const char * __fmt,...)
- int **sprintf_P** (char * __s, const char * __fmt,...)
- int **snprintf** (char * __s, size_t __n, const char * __fmt,...)
- int **snprintf_P** (char * __s, size_t __n, const char * __fmt,...)
- int **vsprintf** (char * __s, const char * __fmt, va_list ap)
- int **vsprintf_P** (char * __s, const char * __fmt, va_list ap)
- int **vsprintf** (char * __s, size_t __n, const char * __fmt, va_list ap)
- int **vsprintf_P** (char * __s, size_t __n, const char * __fmt, va_list ap)
- int **fprintf** (**FILE** * __stream, const char * __fmt,...)
- int **fprintf_P** (**FILE** * __stream, const char * __fmt,...)

- int [fputs](#) (const char *__str, [FILE](#) *__stream)
- int [fputs_P](#) (const char *__str, [FILE](#) *__stream)
- int [puts](#) (const char *__str)
- int [puts_P](#) (const char *__str)
- size_t [fwrite](#) (const void *__ptr, size_t __size, size_t __nmemb, [FILE](#) *__stream)
- int [fgetc](#) ([FILE](#) *__stream)
- int [ungetc](#) (int __c, [FILE](#) *__stream)
- char * [fgets](#) (char *__str, int __size, [FILE](#) *__stream)
- char * [gets](#) (char *__str)
- size_t [fread](#) (void *__ptr, size_t __size, size_t __nmemb, [FILE](#) *__stream)
- void [clearerr](#) ([FILE](#) *__stream)
- int [feof](#) ([FILE](#) *__stream)
- int [ferror](#) ([FILE](#) *__stream)
- int [vfscanf](#) ([FILE](#) *__stream, const char *__fmt, va_list __ap)
- int [vfscanf_P](#) ([FILE](#) *__stream, const char *__fmt, va_list __ap)
- int [fscanf](#) ([FILE](#) *__stream, const char *__fmt,...)
- int [fscanf_P](#) ([FILE](#) *__stream, const char *__fmt,...)
- int [scanf](#) (const char *__fmt,...)
- int [scanf_P](#) (const char *__fmt,...)
- int [vscanf](#) (const char *__fmt, va_list __ap)
- int [sscanf](#) (const char *__buf, const char *__fmt,...)
- int [sscanf_P](#) (const char *__buf, const char *__fmt,...)
- int [fflush](#) ([FILE](#) *stream)

24.42.1 Detailed Description

24.43 stdlib.h File Reference

Data Structures

- struct [div_t](#)
- struct [ldiv_t](#)

Macros

- #define [__need_NULL](#)
- #define [__need_size_t](#)
- #define [__need_wchar_t](#)
- #define [__ptr_t](#) void *
- #define [RAND_MAX](#) 0x7FFF

Typedefs

- typedef int(* [__compar_fn_t](#))(const void *, const void *)

Functions

- void `abort` (void) `__ATTR_NORETURN__`
- int `abs` (int `__i`)
- long `labs` (long `__i`)
- void * `bsearch` (const void * `__key`, const void * `__base`, size_t `__nmemb`, size_t `__size`, int(* `__compar`)(const void *, const void *))
- `div_t` `div` (int `__num`, int `__denom`) `__asm__ ("__divmodhi4")`
- `ldiv_t` `ldiv` (long `__num`, long `__denom`) `__asm__ ("__divmodsi4")`
- void `qsort` (void * `__base`, size_t `__nmemb`, size_t `__size`, `__compar_fn_t` `__compar`)
- long `strtol` (const char * `__nptr`, char ** `__endptr`, int `__base`)
- unsigned long `strtoul` (const char * `__nptr`, char ** `__endptr`, int `__base`)
- long `atol` (const char * `__s`) `__ATTR_PURE__`
- int `atoi` (const char * `__s`) `__ATTR_PURE__`
- void `exit` (int `__status`) `__ATTR_NORETURN__`
- void * `malloc` (size_t `__size`) `__ATTR_MALLOC__`
- void `free` (void * `__ptr`)
- void * `calloc` (size_t `__nele`, size_t `__size`) `__ATTR_MALLOC__`
- void * `realloc` (void * `__ptr`, size_t `__size`) `__ATTR_MALLOC__`
- double `strtod` (const char * `__nptr`, char ** `__endptr`)
- double `atof` (const char * `__nptr`)
- int `rand` (void)
- void `srand` (unsigned int `__seed`)
- int `rand_r` (unsigned long * `__ctx`)

Variables

- size_t `__malloc_margin`
- char * `__malloc_heap_start`
- char * `__malloc_heap_end`

Non-standard (i.e. non-ISO C) functions.

- `#define` `RANDOM_MAX` 0x7FFFFFFF
- char * `itoa` (int `__val`, char * `__s`, int `__radix`)
- char * `ltoa` (long int `__val`, char * `__s`, int `__radix`)
- char * `utoa` (unsigned int `__val`, char * `__s`, int `__radix`)
- char * `ultoa` (unsigned long int `__val`, char * `__s`, int `__radix`)
- long `random` (void)
- void `srandom` (unsigned long `__seed`)
- long `random_r` (unsigned long * `__ctx`)

Conversion functions for double arguments.

Note that these functions are not located in the default library, `libc.a`, but in the mathematical library, `libm.a`. So when linking the application, the `-lm` option needs to be specified.

- `#define` `DTOSTR_ALWAYS_SIGN` 0x01 /* put '+' or '-' for positives */
- `#define` `DTOSTR_PLUS_SIGN` 0x02 /* put '+' rather than '-' */
- `#define` `DTOSTR_UPPERCASE` 0x04 /* put 'E' rather than 'e' */
- char * `dtostre` (double `__val`, char * `__s`, unsigned char `__prec`, unsigned char `__flags`)
- char * `dtostrf` (double `__val`, signed char `__width`, unsigned char `__prec`, char * `__s`)

24.43.1 Detailed Description

24.44 **strcasecmp.S File Reference**

24.44.1 Detailed Description

24.45 **strcasecmp_P.S File Reference**

24.45.1 Detailed Description

24.46 **strcasestr.S File Reference**

24.46.1 Detailed Description

24.47 **strcat.S File Reference**

24.47.1 Detailed Description

24.48 **strcat_P.S File Reference**

24.48.1 Detailed Description

24.49 **strchr.S File Reference**

24.49.1 Detailed Description

24.50 **strchr_P.S File Reference**

24.50.1 Detailed Description

24.51 **strchrnul.S File Reference**

24.51.1 Detailed Description

24.52 **strchrnul_P.S File Reference**

24.52.1 Detailed Description

24.53 **strcmp.S File Reference**

24.53.1 Detailed Description

24.54 **strcmp_P.S File Reference**

24.54.1 Detailed Description

24.55 **strcpy.S File Reference**

24.55.1 Detailed Description

24.56 strcpy_P.S File Reference

24.56.1 Detailed Description

24.57 strcspn.S File Reference

24.57.1 Detailed Description

24.58 strcspn_P.S File Reference

24.58.1 Detailed Description

24.59 strdup.c File Reference

Functions

- char * [strdup](#) (const char *s1)

24.59.1 Detailed Description

24.60 string.h File Reference

Macros

- #define [__need_NULL](#)
- #define [__need_size_t](#)
- #define [__ATTR_PURE__](#) __attribute__((__pure__))
- #define [_FFS](#)(x)

Functions

- int [ffs](#) (int __val)
- int [ffsl](#) (long __val)
- int [ffsll](#) (long long __val)
- void * [memcpy](#) (void *, const void *, int, size_t)
- void * [memchr](#) (const void *, int, size_t) [__ATTR_PURE__](#)
- int [memcmp](#) (const void *, const void *, size_t) [__ATTR_PURE__](#)
- void * [memcpy](#) (void *, const void *, size_t)
- void * [memmem](#) (const void *, size_t, const void *, size_t) [__ATTR_PURE__](#)
- void * [memmove](#) (void *, const void *, size_t)
- void * [memrchr](#) (const void *, int, size_t) [__ATTR_PURE__](#)
- void * [memset](#) (void *, int, size_t)
- char * [strcat](#) (char *, const char *)
- char * [strchr](#) (const char *, int) [__ATTR_PURE__](#)
- char * [strchrnul](#) (const char *, int) [__ATTR_PURE__](#)
- int [strcmp](#) (const char *, const char *) [__ATTR_PURE__](#)
- char * [strcpy](#) (char *, const char *)
- int [strcasecmp](#) (const char *, const char *) [__ATTR_PURE__](#)
- char * [strcasestr](#) (const char *, const char *) [__ATTR_PURE__](#)
- size_t [strcspn](#) (const char *__s, const char *__reject) [__ATTR_PURE__](#)

- char * [strdup](#) (const char *s1)
- size_t [strlcat](#) (char *, const char *, size_t)
- size_t [strlcpy](#) (char *, const char *, size_t)
- size_t [strlen](#) (const char *) `__ATTR_PURE__`
- char * [strlwr](#) (char *)
- char * [strncat](#) (char *, const char *, size_t)
- int [strncmp](#) (const char *, const char *, size_t) `__ATTR_PURE__`
- char * [strncpy](#) (char *, const char *, size_t)
- int [strncasecmp](#) (const char *, const char *, size_t) `__ATTR_PURE__`
- size_t [strnlen](#) (const char *, size_t) `__ATTR_PURE__`
- char * [strpbrk](#) (const char * __s, const char * __accept) `__ATTR_PURE__`
- char * [strchr](#) (const char *, int) `__ATTR_PURE__`
- char * [strrev](#) (char *)
- char * [strsep](#) (char **, const char *)
- size_t [strspn](#) (const char * __s, const char * __accept) `__ATTR_PURE__`
- char * [strstr](#) (const char *, const char *) `__ATTR_PURE__`
- char * [strtok](#) (char *, const char *)
- char * [strtok_r](#) (char *, const char *, char **)
- char * [strupr](#) (char *)

24.60.1 Detailed Description

24.61 **strlcat.S** File Reference

24.61.1 Detailed Description

24.62 **strlcat.P.S** File Reference

24.62.1 Detailed Description

24.63 **strlcpy.S** File Reference

24.63.1 Detailed Description

24.64 **strlcpy.P.S** File Reference

24.64.1 Detailed Description

24.65 **strlen.S** File Reference

24.65.1 Detailed Description

24.66 **strlen.P.S** File Reference

24.66.1 Detailed Description

24.67 **strlwr.S** File Reference

24.67.1 Detailed Description

24.68 strncasecmp.S File Reference

24.68.1 Detailed Description

24.69 strncasecmp_P.S File Reference

24.69.1 Detailed Description

24.70 strncat.S File Reference

24.70.1 Detailed Description

24.71 strncat_P.S File Reference

24.71.1 Detailed Description

24.72 strncmp.S File Reference

24.72.1 Detailed Description

24.73 strncmp_P.S File Reference

24.73.1 Detailed Description

24.74 strncpy.S File Reference

24.74.1 Detailed Description

24.75 strncpy_P.S File Reference

24.75.1 Detailed Description

24.76 strlen.S File Reference

24.76.1 Detailed Description

24.77 strlen_P.S File Reference

24.77.1 Detailed Description

24.78 strpbrk.S File Reference

24.78.1 Detailed Description

24.79 strpbrk_P.S File Reference

24.79.1 Detailed Description

24.80 strrchr.S File Reference

24.80.1 Detailed Description

24.81 `strchr_P.S` File Reference

24.81.1 Detailed Description

24.82 `strrev.S` File Reference

24.82.1 Detailed Description

24.83 `strsep.S` File Reference

24.83.1 Detailed Description

24.84 `strsep_P.S` File Reference

24.84.1 Detailed Description

24.85 `strspn.S` File Reference

24.85.1 Detailed Description

24.86 `strspn_P.S` File Reference

24.86.1 Detailed Description

24.87 `strstr.S` File Reference

24.87.1 Detailed Description

24.88 `strstr_P.S` File Reference

24.88.1 Detailed Description

24.89 `strtok.c` File Reference

Functions

- `char * strtok (char *s, const char *delim)`

Variables

- `static char * p`

24.89.1 Detailed Description

24.90 `strtok_P.c` File Reference

Functions

- char * [strtok_P](#) (char *s, [PGM_P](#) delim)

24.90.1 Detailed Description

24.91 strtok_r.S File Reference

24.91.1 Detailed Description

24.92 strtok_rP.S File Reference

24.92.1 Detailed Description

24.93 strupr.S File Reference

24.93.1 Detailed Description

24.94 twi.h File Reference

Macros

TWSR values

Mnemonics:

TW_MT_xxx - master transmitter

TW_MR_xxx - master receiver

TW_ST_xxx - slave transmitter

TW_SR_xxx - slave receiver

- #define [TW_START](#) 0x08
- #define [TW_REP_START](#) 0x10
- #define [TW_MT_SLA_ACK](#) 0x18
- #define [TW_MT_SLA_NACK](#) 0x20
- #define [TW_MT_DATA_ACK](#) 0x28
- #define [TW_MT_DATA_NACK](#) 0x30
- #define [TW_MT_ARB_LOST](#) 0x38
- #define [TW_MR_ARB_LOST](#) 0x38
- #define [TW_MR_SLA_ACK](#) 0x40
- #define [TW_MR_SLA_NACK](#) 0x48
- #define [TW_MR_DATA_ACK](#) 0x50
- #define [TW_MR_DATA_NACK](#) 0x58
- #define [TW_ST_SLA_ACK](#) 0xA8
- #define [TW_ST_ARB_LOST_SLA_ACK](#) 0xB0
- #define [TW_ST_DATA_ACK](#) 0xB8
- #define [TW_ST_DATA_NACK](#) 0xC0
- #define [TW_ST_LAST_DATA](#) 0xC8
- #define [TW_SR_SLA_ACK](#) 0x60
- #define [TW_SR_ARB_LOST_SLA_ACK](#) 0x68
- #define [TW_SR_GCALL_ACK](#) 0x70
- #define [TW_SR_ARB_LOST_GCALL_ACK](#) 0x78
- #define [TW_SR_DATA_ACK](#) 0x80
- #define [TW_SR_DATA_NACK](#) 0x88
- #define [TW_SR_GCALL_DATA_ACK](#) 0x90

- #define `TW_SR_GCALL_DATA_NACK` 0x98
- #define `TW_SR_STOP` 0xA0
- #define `TW_NO_INFO` 0xF8
- #define `TW_BUS_ERROR` 0x00
- #define `TW_STATUS_MASK`
- #define `TW_STATUS` (TWSR & `TW_STATUS_MASK`)

R/~W bit in SLA+R/W address field.

- #define `TW_READ` 1
- #define `TW_WRITE` 0

24.94.1 Detailed Description

24.95 wdt.h File Reference

Macros

- #define `wdt_reset()` `__asm__ __volatile__ ("wdr")`
- #define `_WD_PS3_MASK` 0x00
- #define `_WD_CONTROL_REG` WDT
- #define `_WD_CHANGE_BIT` WDCE
- #define `wdt_enable(value)`
- #define `wdt_disable()`
- #define `WDTO_15MS` 0
- #define `WDTO_30MS` 1
- #define `WDTO_60MS` 2
- #define `WDTO_120MS` 3
- #define `WDTO_250MS` 4
- #define `WDTO_500MS` 5
- #define `WDTO_1S` 6
- #define `WDTO_2S` 7
- #define `WDTO_4S` 8
- #define `WDTO_8S` 9

24.95.1 Detailed Description

Index

- <alloca.h>: Allocate space in the stack, [90](#)
 - alloca, [90](#)
- <assert.h>: Diagnostics, [91](#)
 - assert, [91](#)
- <avr/boot.h>: Bootloader Support Utilities, [159](#)
 - boot_is_spm_interrupt, [160](#)
 - boot_lock_bits_set, [160](#)
 - boot_lock_bits_set_safe, [161](#)
 - boot_lock_fuse_bits_get, [161](#)
 - boot_page_erase, [161](#)
 - boot_page_erase_safe, [161](#)
 - boot_page_fill, [161](#)
 - boot_page_fill_safe, [162](#)
 - boot_page_write, [162](#)
 - boot_page_write_safe, [162](#)
 - boot_rww_busy, [162](#)
 - boot_rww_enable, [162](#)
 - boot_rww_enable_safe, [162](#)
 - boot_signature_byte_get, [162](#)
 - boot_spm_busy, [163](#)
 - boot_spm_busy_wait, [163](#)
 - boot_spm_interrupt_disable, [163](#)
 - boot_spm_interrupt_enable, [163](#)
 - GET_LOCK_BITS, [163](#)
- <avr/cpufunc.h>: Special AVR CPU functions, [165](#)
 - _MemoryBarrier, [165](#)
 - _NOP, [165](#)
- <avr/eeprom.h>: EEPROM handling, [166](#)
 - _EETOGET, [167](#)
 - _EETOPUT, [167](#)
 - __EETOGET, [167](#)
 - __EETOPUT, [167](#)
 - EEMEM, [167](#)
 - eeprom_busy_wait, [167](#)
 - eeprom_is_ready, [167](#)
 - eeprom_read_block, [167](#)
 - eeprom_read_byte, [167](#)
 - eeprom_read_dword, [168](#)
 - eeprom_read_float, [168](#)
 - eeprom_read_word, [168](#)
 - eeprom_update_block, [168](#)
 - eeprom_update_byte, [168](#)
 - eeprom_update_dword, [168](#)
 - eeprom_update_float, [168](#)
 - eeprom_update_word, [168](#)
 - eeprom_write_block, [168](#)
 - eeprom_write_byte, [168](#)
 - eeprom_write_dword, [168](#)
 - eeprom_write_float, [168](#)
 - eeprom_write_word, [169](#)
- <avr/fuse.h>: Fuse Support, [170](#)
- <avr/interrupt.h>: Interrupts, [173](#)
 - BADISR_vect, [188](#)
 - cli, [188](#)
 - EMPTY_INTERRUPT, [188](#)
 - ISR, [188](#)
 - ISR_ALIAS, [188](#)
 - ISR_ALIASOF, [189](#)
 - ISR_BLOCK, [189](#)
 - ISR_NAKED, [189](#)
 - ISR_NOBLOCK, [189](#)
 - reti, [189](#)
 - SIGNAL, [189](#)
 - sei, [189](#)
- <avr/io.h>: AVR device-specific IO definitions, [191](#)
- <avr/lock.h>: Lockbit Support, [192](#)
- <avr/pgmspace.h>: Program Space Utilities, [195](#)
 - memcpy_PF, [201](#)
 - memcpyy_PF, [201](#)
 - PGM_P, [196](#)
 - PGM_VOID_P, [198](#)
 - PROGMEM, [198](#)
 - PSTR, [198](#)
 - pgm_read_byte, [196](#)
 - pgm_read_byte_far, [196](#)
 - pgm_read_byte_near, [196](#)
 - pgm_read_dword, [196](#)
 - pgm_read_dword_far, [197](#)
 - pgm_read_dword_near, [197](#)
 - pgm_read_float, [197](#)
 - pgm_read_float_far, [197](#)
 - pgm_read_float_near, [197](#)
 - pgm_read_word, [197](#)
 - pgm_read_word_far, [197](#)
 - pgm_read_word_near, [198](#)
 - prog_char, [198](#)
 - prog_int16_t, [198](#)
 - prog_int32_t, [198](#)
 - prog_int64_t, [199](#)
 - prog_int8_t, [199](#)
 - prog_uchar, [199](#)
 - prog_uint16_t, [199](#)
 - prog_uint32_t, [200](#)
 - prog_uint64_t, [200](#)
 - prog_uint8_t, [200](#)
 - prog_void, [200](#)
 - strcasecmp_PF, [201](#)
 - strcat_PF, [202](#)
 - strcmp_PF, [202](#)
 - strcpy_PF, [202](#)
 - strlcat_PF, [202](#)
 - strncpy_PF, [203](#)

- strlen_PF, [203](#)
- strncasecmp_PF, [203](#)
- strncat_PF, [204](#)
- strncmp_PF, [204](#)
- strncpy_PF, [204](#)
- strnlen_PF, [205](#)
- strstr_PF, [205](#)
- strtok_P, [205](#)
- <avr/power.h>: Power Reduction Management, [207](#)
- <avr/sfr_defs.h>: Special function registers, [258](#)
 - _BV, [259](#)
 - bit_is_clear, [259](#)
 - bit_is_set, [259](#)
 - loop_until_bit_is_clear, [259](#)
 - loop_until_bit_is_set, [259](#)
- <avr/signature.h>: Signature Support, [260](#)
- <avr/sleep.h>: Power Management and Sleep Modes, [261](#)
 - sleep_cpu, [262](#)
 - sleep_disable, [262](#)
 - sleep_enable, [262](#)
- <avr/version.h>: avr-libc version macros, [263](#)
- <avr/wdt.h>: Watchdog timer handling, [265](#)
 - WDTO_120MS, [266](#)
 - WDTO_15MS, [266](#)
 - WDTO_1S, [267](#)
 - WDTO_250MS, [267](#)
 - WDTO_2S, [267](#)
 - WDTO_30MS, [267](#)
 - WDTO_4S, [267](#)
 - WDTO_500MS, [267](#)
 - WDTO_60MS, [267](#)
 - WDTO_8S, [267](#)
 - wdt_disable, [266](#)
 - wdt_enable, [266](#)
 - wdt_reset, [266](#)
- <compat/deprecated.h>: Deprecated items, [282](#)
 - cbi, [283](#)
 - enable_external_int, [283](#)
 - INTERRUPT, [283](#)
 - inb, [283](#)
 - inp, [283](#)
 - outb, [283](#)
 - outp, [283](#)
 - sbi, [283](#)
 - timer_enable_int, [284](#)
- <compat/ina90.h>: Compatibility with IAR EWB 3.x, [285](#)
- <ctype.h>: Character Operations, [92](#)
 - isalnum, [92](#)
 - isalpha, [92](#)
 - isascii, [92](#)
 - isblank, [92](#)
 - iscntrl, [93](#)
 - isdigit, [93](#)
 - isgraph, [93](#)
 - islower, [93](#)
 - isprint, [93](#)
 - ispunct, [93](#)
 - isspace, [93](#)
 - isupper, [93](#)
 - isxdigit, [93](#)
 - toascii, [93](#)
 - tolower, [93](#)
 - toupper, [93](#)
- <errno.h>: System Errors, [94](#)
 - EDOM, [94](#)
 - ERANGE, [94](#)
- <inttypes.h>: Integer Type conversions, [95](#)
 - int_farptr_t, [104](#)
 - PRId16, [100](#)
 - PRId32, [100](#)
 - PRId8, [100](#)
 - PRIdFAST16, [100](#)
 - PRIdFAST32, [100](#)
 - PRIdFAST8, [101](#)
 - PRIdLEAST16, [101](#)
 - PRIdLEAST32, [101](#)
 - PRIdLEAST8, [101](#)
 - PRIdPTR, [101](#)
 - PRId16, [97](#)
 - PRId32, [97](#)
 - PRId8, [97](#)
 - PRIdFAST16, [97](#)
 - PRIdFAST32, [97](#)
 - PRIdFAST8, [97](#)
 - PRIdLEAST16, [97](#)
 - PRIdLEAST32, [97](#)
 - PRIdLEAST8, [98](#)
 - PRIdPTR, [98](#)
 - PRId16, [98](#)
 - PRId32, [98](#)
 - PRId8, [98](#)
 - PRIdFAST16, [98](#)
 - PRIdFAST32, [98](#)
 - PRIdFAST8, [98](#)
 - PRIdLEAST16, [98](#)
 - PRIdLEAST32, [98](#)
 - PRIdLEAST8, [98](#)
 - PRIdPTR, [98](#)
 - PRId16, [98](#)
 - PRId32, [98](#)
 - PRId8, [99](#)
 - PRIdFAST16, [99](#)
 - PRIdFAST32, [99](#)
 - PRIdFAST8, [99](#)
 - PRIdLEAST16, [99](#)
 - PRIdLEAST32, [99](#)
 - PRIdLEAST8, [99](#)

PRIoPTR, 99
PRlu16, 99
PRlu32, 99
PRlu8, 99
PRluFAST16, 99
PRluFAST32, 99
PRluFAST8, 99
PRluLEAST16, 100
PRluLEAST32, 100
PRluLEAST8, 100
PRluPTR, 100
PRlx16, 100
PRlx32, 100
PRlx8, 100
PRlxFAST16, 100
PRlxFAST32, 100
PRlxFAST8, 101
PRlxLEAST16, 101
PRlxLEAST32, 101
PRlxLEAST8, 101
PRlxPTR, 101
SCNd16, 101
SCNd32, 101
SCNdFAST16, 101
SCNdFAST32, 101
SCNdLEAST16, 102
SCNdLEAST32, 102
SCNdPTR, 102
SCNi16, 102
SCNi32, 102
SCNiFAST16, 102
SCNiFAST32, 102
SCNiLEAST16, 102
SCNiLEAST32, 102
SCNiPTR, 102
SCNo16, 102
SCNo32, 102
SCNoFAST16, 102
SCNoFAST32, 102
SCNoLEAST16, 103
SCNoLEAST32, 103
SCNoPTR, 103
SCNu16, 103
SCNu32, 103
SCNuFAST16, 103
SCNuFAST32, 103
SCNuLEAST16, 103
SCNuLEAST32, 103
SCNuPTR, 103
SCNx16, 103
SCNx32, 103
SCNxFAST16, 103
SCNxFAST32, 103
SCNxLEAST16, 104
SCNxLEAST32, 104
SCNxPTR, 104
uint_farptr_t, 104
<math.h>: Mathematics, 105
acos, 111
acosh, 107
asin, 111
asinh, 107
atan, 111
atan2, 111
atan2f, 107
atanf, 107
cbrt, 111
cbrtf, 107
ceil, 111
ceilf, 107
copysign, 111
copysignf, 107
cos, 111
cosf, 107
cosh, 111
coshf, 107
exp, 111
expf, 107
fabs, 111
fabsf, 107
fdim, 111
fdimf, 108
floor, 111
floorf, 108
fma, 112
fmaf, 108
fmax, 112
fmaxf, 108
fmin, 112
fminf, 108
fmod, 112
fmodf, 108
frexp, 112
frexpf, 108
hypot, 112
hypotf, 108
INFINITY, 108
isfinite, 112
isfinitef, 108
isinf, 112
isinff, 108
isnan, 112
isnanf, 108
ldexp, 112
ldexpf, 108
log, 113
log10, 113
log10f, 108

- logf, [109](#)
- lrint, [113](#)
- lrintf, [109](#)
- lround, [113](#)
- lroundf, [109](#)
- M_1_PI, [109](#)
- M_2_PI, [109](#)
- M_2_SQRTPI, [109](#)
- M_E, [109](#)
- M_LN10, [109](#)
- M_LN2, [109](#)
- M_LOG10E, [109](#)
- M_LOG2E, [109](#)
- M_PI, [109](#)
- M_PI_2, [109](#)
- M_PI_4, [109](#)
- M_SQRT1_2, [110](#)
- M_SQRT2, [110](#)
- modf, [113](#)
- modff, [113](#)
- NAN, [110](#)
- pow, [113](#)
- powf, [110](#)
- round, [113](#)
- roundf, [110](#)
- signbit, [114](#)
- signbitf, [110](#)
- sin, [114](#)
- sinf, [110](#)
- sinh, [114](#)
- sinhf, [110](#)
- sqrt, [114](#)
- sqrtf, [110](#)
- square, [114](#)
- squaref, [110](#)
- tan, [114](#)
- tanf, [110](#)
- tanh, [114](#)
- tanhf, [110](#)
- trunc, [114](#)
- truncf, [110](#)
- <setjmp.h>: Non-local goto, [115](#)
 - longjmp, [115](#)
 - setjmp, [116](#)
- <stdint.h>: Standard Integer Types, [117](#)
 - INT16_C, [120](#)
 - INT16_MAX, [120](#)
 - INT16_MIN, [120](#)
 - INT32_C, [120](#)
 - INT32_MAX, [120](#)
 - INT32_MIN, [120](#)
 - INT64_C, [120](#)
 - INT64_MAX, [120](#)
 - INT64_MIN, [120](#)
 - INT8_C, [120](#)
 - INT8_MAX, [120](#)
 - INT8_MIN, [120](#)
 - INT_FAST16_MAX, [120](#)
 - INT_FAST16_MIN, [121](#)
 - INT_FAST32_MAX, [121](#)
 - INT_FAST32_MIN, [121](#)
 - INT_FAST64_MAX, [121](#)
 - INT_FAST64_MIN, [121](#)
 - INT_FAST8_MAX, [121](#)
 - INT_FAST8_MIN, [121](#)
 - INT_LEAST16_MAX, [121](#)
 - INT_LEAST16_MIN, [121](#)
 - INT_LEAST32_MAX, [121](#)
 - INT_LEAST32_MIN, [121](#)
 - INT_LEAST64_MAX, [121](#)
 - INT_LEAST64_MIN, [121](#)
 - INT_LEAST8_MAX, [121](#)
 - INT_LEAST8_MIN, [122](#)
 - INTMAX_C, [122](#)
 - INTMAX_MAX, [122](#)
 - INTMAX_MIN, [122](#)
 - INTPTR_MAX, [122](#)
 - INTPTR_MIN, [122](#)
 - int16_t, [124](#)
 - int32_t, [124](#)
 - int64_t, [124](#)
 - int8_t, [124](#)
 - int_fast16_t, [124](#)
 - int_fast32_t, [124](#)
 - int_fast64_t, [124](#)
 - int_fast8_t, [124](#)
 - int_least16_t, [124](#)
 - int_least32_t, [124](#)
 - int_least64_t, [125](#)
 - int_least8_t, [125](#)
 - intmax_t, [125](#)
 - intptr_t, [125](#)
 - PTRDIFF_MAX, [122](#)
 - PTRDIFF_MIN, [122](#)
 - SIG_ATOMIC_MAX, [122](#)
 - SIG_ATOMIC_MIN, [122](#)
 - SIZE_MAX, [122](#)
 - UINT16_C, [122](#)
 - UINT16_MAX, [122](#)
 - UINT32_C, [122](#)
 - UINT32_MAX, [123](#)
 - UINT64_C, [123](#)
 - UINT64_MAX, [123](#)
 - UINT8_C, [123](#)
 - UINT8_MAX, [123](#)
 - UINT_FAST16_MAX, [123](#)
 - UINT_FAST32_MAX, [123](#)
 - UINT_FAST64_MAX, [123](#)

- UINT_FAST8_MAX, 123
- UINT_LEAST16_MAX, 123
- UINT_LEAST32_MAX, 123
- UINT_LEAST64_MAX, 123
- UINT_LEAST8_MAX, 123
- UINTMAX_C, 123
- UINTMAX_MAX, 124
- UINTPTR_MAX, 124
- uint16_t, 125
- uint32_t, 125
- uint64_t, 125
- uint8_t, 125
- uint_fast16_t, 125
- uint_fast32_t, 125
- uint_fast64_t, 125
- uint_fast8_t, 126
- uint_least16_t, 126
- uint_least32_t, 126
- uint_least64_t, 126
- uint_least8_t, 126
- uintmax_t, 126
- uintptr_t, 126
- <stdio.h>: Standard IO facilities, 127
 - _FDEV_EOF, 130
 - _FDEV_ERR, 130
 - _FDEV_SETUP_RW, 130
 - clearerr, 132
 - EOF, 130
 - FILE, 131
 - fclose, 132
 - fdev_close, 131
 - fdev_get_udata, 131
 - fdev_set_udata, 131
 - fdev_setup_stream, 131
 - fdevopen, 132
 - feof, 133
 - ferror, 133
 - fflush, 133
 - fgetc, 133
 - fgets, 133
 - fprintf, 133
 - fprintf_P, 133
 - fputc, 133
 - fputs, 133
 - fputs_P, 134
 - fread, 134
 - fscanf, 134
 - fscanf_P, 134
 - fwrite, 134
 - getc, 131
 - getchar, 131
 - gets, 134
 - printf, 134
 - printf_P, 134
 - putc, 131
 - putchar, 132
 - puts, 134
 - puts_P, 134
 - scanf, 134
 - scanf_P, 134
 - snprintf, 135
 - snprintf_P, 135
 - sprintf, 135
 - sprintf_P, 135
 - sscanf, 135
 - sscanf_P, 135
 - stderr, 132
 - stdin, 132
 - stdout, 132
 - ungetc, 135
 - vfprintf, 135
 - vfprintf_P, 137
 - vfscanf, 137
 - vfscanf_P, 139
 - vprintf, 139
 - vscanf, 139
 - vsprintf, 139
 - vsprintf_P, 139
 - vsprintf_P, 139
- <stdlib.h>: General utilities, 140
 - __compar_fn_t, 142
 - __malloc_heap_end, 148
 - __malloc_heap_start, 148
 - __malloc_margin, 148
 - abort, 142
 - abs, 142
 - atof, 142
 - atoi, 142
 - atol, 142
 - bsearch, 142
 - calloc, 143
 - DTOSTR_PLUS_SIGN, 141
 - DTOSTR_UPPERCASE, 141
 - div, 143
 - dtostre, 143
 - dtostrf, 143
 - exit, 143
 - free, 143
 - itoa, 143
 - labs, 144
 - ldiv, 144
 - ltoa, 144
 - malloc, 144
 - qsort, 145
 - RAND_MAX, 141
 - RANDOM_MAX, 141
 - rand, 145

- rand_r, 145
- random, 145
- random_r, 145
- realloc, 145
- srand, 146
- srandom, 146
- strtod, 146
- strtol, 146
- strtoul, 146
- ultoa, 147
- utoa, 147
- <string.h>: Strings, 149
 - _FFS, 150
 - ffs, 150
 - ffsl, 150
 - ffsll, 150
 - memccpy, 150
 - memchr, 151
 - memcmp, 151
 - memcpy, 151
 - memmem, 151
 - memmove, 151
 - memrchr, 152
 - memset, 152
 - strcasecmp, 152
 - strcasestr, 152
 - strcat, 152
 - strchr, 153
 - strchrnul, 153
 - strcmp, 153
 - strcpy, 153
 - strcspn, 153
 - strdup, 154
 - strlcat, 154
 - strlcpy, 154
 - strlen, 155
 - strlwr, 155
 - strncasecmp, 155
 - strncat, 155
 - strncmp, 155
 - strncpy, 156
 - strnlen, 156
 - strpbrk, 156
 - strrchr, 156
 - strrev, 156
 - strsep, 157
 - strspn, 157
 - strstr, 157
 - strtok, 157
 - strtok_r, 158
 - strupr, 158
- <util/atomic.h> Atomically and Non-Atomically Executed Code Blocks, 268
 - ATOMIC_BLOCK, 269
 - ATOMIC_FORCEON, 269
 - NONATOMIC_BLOCK, 269
- <util/crc16.h>: CRC Computations, 271
 - _crc16_update, 271
 - _crc_ccitt_update, 272
 - _crc_ibutton_update, 272
 - _crc_xmodem_update, 273
- <util/delay_basic.h>: Basic busy-wait delay loops, 274
 - _delay_loop_1, 274
 - _delay_loop_2, 274
- <util/parity.h>: Parity bit generation, 275
 - parity_even_bit, 275
- <util/setbaud.h>: Helper macros for baud rate calculations, 276
 - BAUD_TOL, 277
 - UBRR_VALUE, 277
 - UBRRH_VALUE, 277
 - UBRRL_VALUE, 277
 - USE_2X, 277
- <util/twi.h>: TWI bit mask definitions, 278
 - TW_BUS_ERROR, 279
 - TW_MR_ARB_LOST, 279
 - TW_MR_DATA_ACK, 279
 - TW_MR_SLA_ACK, 279
 - TW_MR_SLA_NACK, 279
 - TW_MT_ARB_LOST, 279
 - TW_MT_DATA_ACK, 279
 - TW_MT_SLA_ACK, 279
 - TW_MT_SLA_NACK, 279
 - TW_NO_INFO, 279
 - TW_READ, 279
 - TW_REP_START, 280
 - TW_SR_DATA_ACK, 280
 - TW_SR_SLA_ACK, 280
 - TW_SR_STOP, 280
 - TW_ST_DATA_ACK, 280
 - TW_ST_SLA_ACK, 281
 - TW_START, 281
 - TW_STATUS, 281
 - TW_STATUS_MASK, 281
 - TW_WRITE, 281
- \$PATH, 48
- \$PREFIX, 48
- prefix, 48
- _BV
 - <avr/sfr_defs.h>: Special function registers, 259
- _EETGET
 - <avr/eeprom.h>: EEPROM handling, 167
- _EETPUT
 - <avr/eeprom.h>: EEPROM handling, 167
- _FDEV_EOF
 - <stdio.h>: Standard IO facilities, 130
- _FDEV_ERR
 - <stdio.h>: Standard IO facilities, 130

- __FDEV_SETUP_RW
 - <stdio.h>: Standard IO facilities, [130](#)
- __FFS
 - <string.h>: Strings, [150](#)
- __MemoryBarrier
 - <avr/cpufunc.h>: Special AVR CPU functions, [165](#)
- __NOP
 - <avr/cpufunc.h>: Special AVR CPU functions, [165](#)
- __EGET
 - <avr/eeprom.h>: EEPROM handling, [167](#)
- __EPUT
 - <avr/eeprom.h>: EEPROM handling, [167](#)
- __ELPM_classic__
 - pgmspace.h, [336](#)
- __ELPM_dword_enhanced__
 - pgmspace.h, [336](#)
- __ELPM_dword_xmega__
 - pgmspace.h, [336](#)
- __ELPM_enhanced__
 - pgmspace.h, [337](#)
- __ELPM_float_enhanced__
 - pgmspace.h, [337](#)
- __ELPM_float_xmega__
 - pgmspace.h, [337](#)
- __ELPM_word_classic__
 - pgmspace.h, [337](#)
- __ELPM_word_enhanced__
 - pgmspace.h, [338](#)
- __ELPM_word_xmega__
 - pgmspace.h, [338](#)
- __ELPM_xmega__
 - pgmspace.h, [338](#)
- __LPM_classic__
 - pgmspace.h, [339](#)
- __LPM_dword_classic__
 - pgmspace.h, [339](#)
- __LPM_dword_enhanced__
 - pgmspace.h, [339](#)
- __LPM_dword_tiny__
 - pgmspace.h, [340](#)
- __LPM_enhanced__
 - pgmspace.h, [340](#)
- __LPM_float_classic__
 - pgmspace.h, [340](#)
- __LPM_float_enhanced__
 - pgmspace.h, [341](#)
- __LPM_float_tiny__
 - pgmspace.h, [341](#)
- __LPM_tiny__
 - pgmspace.h, [341](#)
- __LPM_word_classic__
 - pgmspace.h, [341](#)
- __LPM_word_enhanced__
 - pgmspace.h, [342](#)
- __LPM_word_tiny__
 - pgmspace.h, [342](#)
- __boot_lock_bits_set
 - boot.h, [321](#)
- __boot_lock_bits_set_alternate
 - boot.h, [321](#)
- __boot_page_erase_alternate
 - boot.h, [322](#)
- __boot_page_erase_extended
 - boot.h, [322](#)
- __boot_page_erase_normal
 - boot.h, [322](#)
- __boot_page_fill_alternate
 - boot.h, [323](#)
- __boot_page_fill_extended
 - boot.h, [323](#)
- __boot_page_fill_normal
 - boot.h, [323](#)
- __boot_page_write_alternate
 - boot.h, [324](#)
- __boot_page_write_extended
 - boot.h, [324](#)
- __boot_page_write_normal
 - boot.h, [324](#)
- __boot_rww_enable
 - boot.h, [324](#)
- __boot_rww_enable_alternate
 - boot.h, [325](#)
- __compar_fn_t
 - <stdlib.h>: General utilities, [142](#)
- __malloc_heap_end
 - <stdlib.h>: General utilities, [148](#)
- __malloc_heap_start
 - <stdlib.h>: General utilities, [148](#)
- __malloc_margin
 - <stdlib.h>: General utilities, [148](#)
- __crc16_update
 - <util/crc16.h>: CRC Computations, [271](#)
- __crc_ccitt_update
 - <util/crc16.h>: CRC Computations, [272](#)
- __crc_ibutton_update
 - <util/crc16.h>: CRC Computations, [272](#)
- __crc_xmodem_update
 - <util/crc16.h>: CRC Computations, [273](#)
- __delay_loop_1
 - <util/delay_basic.h>: Basic busy-wait delay loops, [274](#)
- __delay_loop_2
 - <util/delay_basic.h>: Basic busy-wait delay loops, [274](#)
- A more sophisticated project, [303](#)
- A simple project, [290](#)
- ATOMIC_BLOCK

- <util/atomic.h> Atomically and Non-Atomically Executed Code Blocks, [269](#)
- ATOMIC_FORCEON
 - <util/atomic.h> Atomically and Non-Atomically Executed Code Blocks, [269](#)
- abort
 - <stdlib.h>: General utilities, [142](#)
- abs
 - <stdlib.h>: General utilities, [142](#)
- acos
 - <math.h>: Mathematics, [111](#)
- acosf
 - <math.h>: Mathematics, [107](#)
- Additional notes from <avr/sfr_defs.h>, [257](#)
- alloca
 - <alloca.h>: Allocate space in the stack, [90](#)
- asin
 - <math.h>: Mathematics, [111](#)
- asinf
 - <math.h>: Mathematics, [107](#)
- assert
 - <assert.h>: Diagnostics, [91](#)
- assert.h, [320](#)
- atan
 - <math.h>: Mathematics, [111](#)
- atan2
 - <math.h>: Mathematics, [111](#)
- atan2f
 - <math.h>: Mathematics, [107](#)
- atanf
 - <math.h>: Mathematics, [107](#)
- atof
 - <stdlib.h>: General utilities, [142](#)
- atoi
 - <stdlib.h>: General utilities, [142](#)
- atoi.S, [320](#)
- atol
 - <stdlib.h>: General utilities, [142](#)
- atol.S, [320](#)
- atomic.h, [320](#)
- avrdude, usage, [78](#)
- avrprog, usage, [78](#)
- BADISR_vect
 - <avr/interrupt.h>: Interrupts, [188](#)
- BAUD_TOL
 - <util/setbaud.h>: Helper macros for baud rate calculations, [277](#)
- BOOTLOADER_SECTION
 - <avr/boot.h>: Bootloader Support Utilities, [163](#)
- bit_is_clear
 - <avr/sfr_defs.h>: Special function registers, [259](#)
- bit_is_set
 - <avr/sfr_defs.h>: Special function registers, [259](#)
- boot.h, [320](#)
 - __boot_lock_bits_set, [321](#)
 - __boot_lock_bits_set_alternate, [321](#)
 - __boot_page_erase_alternate, [322](#)
 - __boot_page_erase_extended, [322](#)
 - __boot_page_erase_normal, [322](#)
 - __boot_page_fill_alternate, [323](#)
 - __boot_page_fill_extended, [323](#)
 - __boot_page_fill_normal, [323](#)
 - __boot_page_write_alternate, [324](#)
 - __boot_page_write_extended, [324](#)
 - __boot_page_write_normal, [324](#)
 - __boot_rww_enable, [324](#)
 - __boot_rww_enable_alternate, [325](#)
- boot_is_spm_interrupt
 - <avr/boot.h>: Bootloader Support Utilities, [160](#)
- boot_lock_bits_set
 - <avr/boot.h>: Bootloader Support Utilities, [160](#)
- boot_lock_bits_set_safe
 - <avr/boot.h>: Bootloader Support Utilities, [161](#)
- boot_lock_fuse_bits_get
 - <avr/boot.h>: Bootloader Support Utilities, [161](#)
- boot_page_erase
 - <avr/boot.h>: Bootloader Support Utilities, [161](#)
- boot_page_erase_safe
 - <avr/boot.h>: Bootloader Support Utilities, [161](#)
- boot_page_fill
 - <avr/boot.h>: Bootloader Support Utilities, [161](#)
- boot_page_fill_safe
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_page_write
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_page_write_safe
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_rww_busy
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_rww_enable
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_rww_enable_safe
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_signature_byte_get
 - <avr/boot.h>: Bootloader Support Utilities, [162](#)
- boot_spm_busy
 - <avr/boot.h>: Bootloader Support Utilities, [163](#)
- boot_spm_busy_wait
 - <avr/boot.h>: Bootloader Support Utilities, [163](#)
- boot_spm_interrupt_disable
 - <avr/boot.h>: Bootloader Support Utilities, [163](#)
- boot_spm_interrupt_enable
 - <avr/boot.h>: Bootloader Support Utilities, [163](#)
- bsearch
 - <stdlib.h>: General utilities, [142](#)
- calloc

- `<stdlib.h>`: General utilities, [143](#)
- `cbi`
 - `<compat/deprecated.h>`: Deprecated items, [283](#)
- `cbrt`
 - `<math.h>`: Mathematics, [111](#)
- `cbrtf`
 - `<math.h>`: Mathematics, [107](#)
- `ceil`
 - `<math.h>`: Mathematics, [111](#)
- `ceilf`
 - `<math.h>`: Mathematics, [107](#)
- `clearerr`
 - `<stdio.h>`: Standard IO facilities, [132](#)
- `cli`
 - `<avr/interrupt.h>`: Interrupts, [188](#)
- Combining C and assembly source files, [287](#)
- `copysign`
 - `<math.h>`: Mathematics, [111](#)
- `copysignf`
 - `<math.h>`: Mathematics, [107](#)
- `cos`
 - `<math.h>`: Mathematics, [111](#)
- `cosf`
 - `<math.h>`: Mathematics, [107](#)
- `cosh`
 - `<math.h>`: Mathematics, [111](#)
- `coshf`
 - `<math.h>`: Mathematics, [107](#)
- `cpufunc.h`, [325](#)
- `crc16.h`, [325](#)
- `ctype.h`, [325](#)
- `DTOSTR_ALWAYS_SIGN`
 - `<stdlib.h>`: General utilities, [141](#)
- `DTOSTR_PLUS_SIGN`
 - `<stdlib.h>`: General utilities, [141](#)
- `DTOSTR_UPPERCASE`
 - `<stdlib.h>`: General utilities, [141](#)
- `delay_basic.h`, [326](#)
- Demo projects, [286](#)
- disassembling, [293](#)
- `div`
 - `<stdlib.h>`: General utilities, [143](#)
- `div_t`, [319](#)
 - `quot`, [319](#)
 - `rem`, [319](#)
- `dtostre`
 - `<stdlib.h>`: General utilities, [143](#)
- `dtostrf`
 - `<stdlib.h>`: General utilities, [143](#)
- `EDOM`
 - `<errno.h>`: System Errors, [94](#)
- `EEMEM`
 - `<avr/eeprom.h>`: EEPROM handling, [167](#)
- `EMPTY_INTERRUPT`
 - `<avr/interrupt.h>`: Interrupts, [188](#)
- `EOF`
 - `<stdio.h>`: Standard IO facilities, [130](#)
- `ERANGE`
 - `<errno.h>`: System Errors, [94](#)
- `eeprom_busy_wait`
 - `<avr/eeprom.h>`: EEPROM handling, [167](#)
- `eeprom_is_ready`
 - `<avr/eeprom.h>`: EEPROM handling, [167](#)
- `eeprom_read_block`
 - `<avr/eeprom.h>`: EEPROM handling, [167](#)
- `eeprom_read_byte`
 - `<avr/eeprom.h>`: EEPROM handling, [167](#)
- `eeprom_read_dword`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_read_float`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_read_word`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_update_block`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_update_byte`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_update_dword`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_update_float`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_update_word`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_write_block`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_write_byte`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_write_dword`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_write_float`
 - `<avr/eeprom.h>`: EEPROM handling, [168](#)
- `eeprom_write_word`
 - `<avr/eeprom.h>`: EEPROM handling, [169](#)
- `enable_external_int`
 - `<compat/deprecated.h>`: Deprecated items, [283](#)
- `errno.h`, [326](#)
- Example using the two-wire interface (TWI), [315](#)
- `exit`
 - `<stdlib.h>`: General utilities, [143](#)
- `exp`
 - `<math.h>`: Mathematics, [111](#)
- `expf`
 - `<math.h>`: Mathematics, [107](#)
- `FDEV_SETUP_STREAM`
 - `<stdio.h>`: Standard IO facilities, [131](#)
- `FILE`

- `<stdio.h>`: Standard IO facilities, 131
- `fabs`
 - `<math.h>`: Mathematics, 111
- `fabsf`
 - `<math.h>`: Mathematics, 107
- `fclose`
 - `<stdio.h>`: Standard IO facilities, 132
- `fdev_close`
 - `<stdio.h>`: Standard IO facilities, 131
- `fdev_get_udata`
 - `<stdio.h>`: Standard IO facilities, 131
- `fdev_set_udata`
 - `<stdio.h>`: Standard IO facilities, 131
- `fdev_setup_stream`
 - `<stdio.h>`: Standard IO facilities, 131
- `fdevopen`
 - `<stdio.h>`: Standard IO facilities, 132
- `fdevopen.c`, 326
- `fdim`
 - `<math.h>`: Mathematics, 111
- `fdimf`
 - `<math.h>`: Mathematics, 108
- `feof`
 - `<stdio.h>`: Standard IO facilities, 133
- `ferror`
 - `<stdio.h>`: Standard IO facilities, 133
- `fflush`
 - `<stdio.h>`: Standard IO facilities, 133
- `ffs`
 - `<string.h>`: Strings, 150
- `ffs.S`, 327
- `ffsl`
 - `<string.h>`: Strings, 150
- `ffsl.S`, 327
- `ffsll`
 - `<string.h>`: Strings, 150
- `ffsll.S`, 327
- `fgetc`
 - `<stdio.h>`: Standard IO facilities, 133
- `fgets`
 - `<stdio.h>`: Standard IO facilities, 133
- `floor`
 - `<math.h>`: Mathematics, 111
- `floorf`
 - `<math.h>`: Mathematics, 108
- `fma`
 - `<math.h>`: Mathematics, 112
- `fmaf`
 - `<math.h>`: Mathematics, 108
- `fmax`
 - `<math.h>`: Mathematics, 112
- `fmaxf`
 - `<math.h>`: Mathematics, 108
- `fmin`
 - `<math.h>`: Mathematics, 112
- `fminf`
 - `<math.h>`: Mathematics, 108
- `fmod`
 - `<math.h>`: Mathematics, 112
- `fmodf`
 - `<math.h>`: Mathematics, 108
- `fprintf`
 - `<stdio.h>`: Standard IO facilities, 133
- `fprintf_P`
 - `<stdio.h>`: Standard IO facilities, 133
- `fputc`
 - `<stdio.h>`: Standard IO facilities, 133
- `fputs`
 - `<stdio.h>`: Standard IO facilities, 133
- `fputs_P`
 - `<stdio.h>`: Standard IO facilities, 134
- `fread`
 - `<stdio.h>`: Standard IO facilities, 134
- `free`
 - `<stdlib.h>`: General utilities, 143
- `frexp`
 - `<math.h>`: Mathematics, 112
- `frexpf`
 - `<math.h>`: Mathematics, 108
- `fscanf`
 - `<stdio.h>`: Standard IO facilities, 134
- `fscanf_P`
 - `<stdio.h>`: Standard IO facilities, 134
- `fuse.h`, 327
- `fwrite`
 - `<stdio.h>`: Standard IO facilities, 134
- `GET_LOCK_BITS`
 - `<avr/boot.h>`: Bootloader Support Utilities, 163
- `getc`
 - `<stdio.h>`: Standard IO facilities, 131
- `getchar`
 - `<stdio.h>`: Standard IO facilities, 131
- `gets`
 - `<stdio.h>`: Standard IO facilities, 134
- `hypot`
 - `<math.h>`: Mathematics, 112
- `hypotf`
 - `<math.h>`: Mathematics, 108
- `INFINITY`
 - `<math.h>`: Mathematics, 108
- `INT16_C`
 - `<stdint.h>`: Standard Integer Types, 120
- `INT16_MAX`
 - `<stdint.h>`: Standard Integer Types, 120
- `INT16_MIN`
 - `<stdint.h>`: Standard Integer Types, 120

- INT32_C
 - <stdint.h>: Standard Integer Types, [120](#)
- INT32_MAX
 - <stdint.h>: Standard Integer Types, [120](#)
- INT32_MIN
 - <stdint.h>: Standard Integer Types, [120](#)
- INT64_C
 - <stdint.h>: Standard Integer Types, [120](#)
- INT64_MAX
 - <stdint.h>: Standard Integer Types, [120](#)
- INT64_MIN
 - <stdint.h>: Standard Integer Types, [120](#)
- INT8_C
 - <stdint.h>: Standard Integer Types, [120](#)
- INT8_MAX
 - <stdint.h>: Standard Integer Types, [120](#)
- INT8_MIN
 - <stdint.h>: Standard Integer Types, [120](#)
- INT_FAST16_MAX
 - <stdint.h>: Standard Integer Types, [120](#)
- INT_FAST16_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_FAST32_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_FAST32_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_FAST64_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_FAST64_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_FAST8_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_FAST8_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST16_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST16_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST32_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST32_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST64_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST64_MIN
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST8_MAX
 - <stdint.h>: Standard Integer Types, [121](#)
- INT_LEAST8_MIN
 - <stdint.h>: Standard Integer Types, [122](#)
- INTERRUPT
 - <compat/deprecated.h>: Deprecated items, [283](#)
- INTMAX_C
 - <stdint.h>: Standard Integer Types, [122](#)
- INTMAX_MAX
 - <stdint.h>: Standard Integer Types, [122](#)
- INTMAX_MIN
 - <stdint.h>: Standard Integer Types, [122](#)
- INTPTR_MAX
 - <stdint.h>: Standard Integer Types, [122](#)
- INTPTR_MIN
 - <stdint.h>: Standard Integer Types, [122](#)
- ISR
 - <avr/interrupt.h>: Interrupts, [188](#)
- ISR_ALIAS
 - <avr/interrupt.h>: Interrupts, [188](#)
- ISR_ALIASOF
 - <avr/interrupt.h>: Interrupts, [189](#)
- ISR_BLOCK
 - <avr/interrupt.h>: Interrupts, [189](#)
- ISR_NAKED
 - <avr/interrupt.h>: Interrupts, [189](#)
- ISR_NOBLOCK
 - <avr/interrupt.h>: Interrupts, [189](#)
- inb
 - <compat/deprecated.h>: Deprecated items, [283](#)
- inp
 - <compat/deprecated.h>: Deprecated items, [283](#)
- installation, [47](#)
- installation, avarice, [52](#)
- installation, avr-libc, [50](#)
- installation, avrdude, [51](#)
- installation, avrprog, [51](#)
- installation, binutils, [49](#)
- installation, gcc, [50](#)
- Installation, gdb, [51](#)
- installation, simulavr, [52](#)
- int16_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int32_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int64_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int8_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int_farptr_t
 - <inttypes.h>: Integer Type conversions, [104](#)
- int_fast16_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int_fast32_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int_fast64_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int_fast8_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int_least16_t
 - <stdint.h>: Standard Integer Types, [124](#)
- int_least32_t

- `<stdint.h>`: Standard Integer Types, 124
- `int_least64_t`
 - `<stdint.h>`: Standard Integer Types, 125
- `int_least8_t`
 - `<stdint.h>`: Standard Integer Types, 125
- `interrupt.h`, 327
- `intmax_t`
 - `<stdint.h>`: Standard Integer Types, 125
- `intptr_t`
 - `<stdint.h>`: Standard Integer Types, 125
- `inttypes.h`, 328
- `io.h`, 330
- `isalnum`
 - `<ctype.h>`: Character Operations, 92
- `isalpha`
 - `<ctype.h>`: Character Operations, 92
- `isascii`
 - `<ctype.h>`: Character Operations, 92
- `isblank`
 - `<ctype.h>`: Character Operations, 92
- `iscntrl`
 - `<ctype.h>`: Character Operations, 93
- `isdigit`
 - `<ctype.h>`: Character Operations, 93
- `isfinite`
 - `<math.h>`: Mathematics, 112
- `isfinitef`
 - `<math.h>`: Mathematics, 108
- `isgraph`
 - `<ctype.h>`: Character Operations, 93
- `isinf`
 - `<math.h>`: Mathematics, 112
- `isinf`
 - `<math.h>`: Mathematics, 108
- `islower`
 - `<ctype.h>`: Character Operations, 93
- `isnan`
 - `<math.h>`: Mathematics, 112
- `isnanf`
 - `<math.h>`: Mathematics, 108
- `isprint`
 - `<ctype.h>`: Character Operations, 93
- `ispunct`
 - `<ctype.h>`: Character Operations, 93
- `isspace`
 - `<ctype.h>`: Character Operations, 93
- `isupper`
 - `<ctype.h>`: Character Operations, 93
- `isxdigit`
 - `<ctype.h>`: Character Operations, 93
- `itoa`
 - `<stdlib.h>`: General utilities, 143
- `labs`
 - `<stdint.h>`: Standard Integer Types, 124
- `ldexp`
 - `<math.h>`: Mathematics, 112
- `ldexpf`
 - `<math.h>`: Mathematics, 108
- `ldiv`
 - `<stdlib.h>`: General utilities, 144
- `ldiv_t`, 319
 - `quot`, 319
 - `rem`, 319
- `lock.h`, 330
- `log`
 - `<math.h>`: Mathematics, 113
- `log10`
 - `<math.h>`: Mathematics, 113
- `log10f`
 - `<math.h>`: Mathematics, 108
- `logf`
 - `<math.h>`: Mathematics, 109
- `longjmp`
 - `<setjmp.h>`: Non-local goto, 115
- `loop_until_bit_is_clear`
 - `<avr/sfr_defs.h>`: Special function registers, 259
- `loop_until_bit_is_set`
 - `<avr/sfr_defs.h>`: Special function registers, 259
- `lrint`
 - `<math.h>`: Mathematics, 113
- `lrintf`
 - `<math.h>`: Mathematics, 109
- `lround`
 - `<math.h>`: Mathematics, 113
- `lroundf`
 - `<math.h>`: Mathematics, 109
- `ltoa`
 - `<stdlib.h>`: General utilities, 144
- `M_1_PI`
 - `<math.h>`: Mathematics, 109
- `M_2_PI`
 - `<math.h>`: Mathematics, 109
- `M_2_SQRTPI`
 - `<math.h>`: Mathematics, 109
- `M_E`
 - `<math.h>`: Mathematics, 109
- `M_LN10`
 - `<math.h>`: Mathematics, 109
- `M_LN2`
 - `<math.h>`: Mathematics, 109
- `M_LOG10E`
 - `<math.h>`: Mathematics, 109
- `M_LOG2E`
 - `<math.h>`: Mathematics, 109
- `M_PI`
 - `<math.h>`: Mathematics, 109

- M_PI_2
 - <math.h>: Mathematics, [109](#)
- M_PI_4
 - <math.h>: Mathematics, [109](#)
- M_SQRT1_2
 - <math.h>: Mathematics, [110](#)
- M_SQRT2
 - <math.h>: Mathematics, [110](#)
- malloc
 - <stdlib.h>: General utilities, [144](#)
- math.h, [330](#)
- memcpy
 - <string.h>: Strings, [150](#)
- memcpy.S, [332](#)
- memchr
 - <string.h>: Strings, [151](#)
- memchr.S, [332](#)
- memchr_P.S, [332](#)
- memcmp
 - <string.h>: Strings, [151](#)
- memcmp.S, [332](#)
- memcmp_P.S, [332](#)
- memcmp_PF
 - <avr/pgmspace.h>: Program Space Utilities, [201](#)
- memcmp_PF.S, [332](#)
- memcpy
 - <string.h>: Strings, [151](#)
- memcpy.S, [332](#)
- memcpy_P.S, [332](#)
- memcpy_PF
 - <avr/pgmspace.h>: Program Space Utilities, [201](#)
- memmem
 - <string.h>: Strings, [151](#)
- memmem.S, [332](#)
- memmove
 - <string.h>: Strings, [151](#)
- memmove.S, [333](#)
- memchr
 - <string.h>: Strings, [152](#)
- memchr.S, [333](#)
- memchr_P.S, [333](#)
- memset
 - <string.h>: Strings, [152](#)
- memset.S, [333](#)
- modf
 - <math.h>: Mathematics, [113](#)
- modff
 - <math.h>: Mathematics, [113](#)
- NAN
 - <math.h>: Mathematics, [110](#)
- NONATOMIC_BLOCK
 - <util/atomic.h>: Atomically and Non-Atomically Executed Code Blocks, [269](#)
- outb
 - <compat/deprecated.h>: Deprecated items, [283](#)
- outp
 - <compat/deprecated.h>: Deprecated items, [283](#)
- PGM_P
 - <avr/pgmspace.h>: Program Space Utilities, [196](#)
- PGM_VOID_P
 - <avr/pgmspace.h>: Program Space Utilities, [198](#)
- PRIX16
 - <inttypes.h>: Integer Type conversions, [100](#)
- PRIX32
 - <inttypes.h>: Integer Type conversions, [100](#)
- PRIX8
 - <inttypes.h>: Integer Type conversions, [100](#)
- PRIXFAST16
 - <inttypes.h>: Integer Type conversions, [100](#)
- PRIXFAST32
 - <inttypes.h>: Integer Type conversions, [100](#)
- PRIXFAST8
 - <inttypes.h>: Integer Type conversions, [101](#)
- PRIXLEAST16
 - <inttypes.h>: Integer Type conversions, [101](#)
- PRIXLEAST32
 - <inttypes.h>: Integer Type conversions, [101](#)
- PRIXLEAST8
 - <inttypes.h>: Integer Type conversions, [101](#)
- PRIXPTR
 - <inttypes.h>: Integer Type conversions, [101](#)
- PRId16
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRId32
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRId8
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRIdFAST16
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRIdFAST32
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRIdFAST8
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRIdLEAST16
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRIdLEAST32
 - <inttypes.h>: Integer Type conversions, [97](#)
- PRIdLEAST8
 - <inttypes.h>: Integer Type conversions, [98](#)
- PRIdPTR
 - <inttypes.h>: Integer Type conversions, [98](#)
- PRId16
 - <inttypes.h>: Integer Type conversions, [98](#)
- PRId32
 - <inttypes.h>: Integer Type conversions, [98](#)
- PRId8
 - <inttypes.h>: Integer Type conversions, [98](#)

- `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRIfAST16`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRIfAST32`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRIfAST8`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRiLEAST16`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRiLEAST32`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRiLEAST8`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRiPTR`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRIo16`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRIo32`
 - `<inttypes.h>`: Integer Type conversions, [98](#)
- `PRIo8`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRIoFAST16`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRIoFAST32`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRIoFAST8`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRiLEAST16`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRiLEAST32`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRiLEAST8`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRIoPTR`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRlu16`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRlu32`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRlu8`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRluFAST16`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRluFAST32`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRluFAST8`
 - `<inttypes.h>`: Integer Type conversions, [99](#)
- `PRluLEAST16`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRluLEAST32`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRluLEAST8`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRluPTR`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRlx16`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRlx32`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRlx8`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRlxFAST16`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRlxFAST32`
 - `<inttypes.h>`: Integer Type conversions, [100](#)
- `PRlxFAST8`
 - `<inttypes.h>`: Integer Type conversions, [101](#)
- `PRlxLEAST16`
 - `<inttypes.h>`: Integer Type conversions, [101](#)
- `PRlxLEAST32`
 - `<inttypes.h>`: Integer Type conversions, [101](#)
- `PRlxLEAST8`
 - `<inttypes.h>`: Integer Type conversions, [101](#)
- `PRlxPTR`
 - `<inttypes.h>`: Integer Type conversions, [101](#)
- `PROGMEM`
 - `<avr/pgmspace.h>`: Program Space Utilities, [198](#)
- `PSTR`
 - `<avr/pgmspace.h>`: Program Space Utilities, [198](#)
- `PTRDIFF_MAX`
 - `<stdint.h>`: Standard Integer Types, [122](#)
- `PTRDIFF_MIN`
 - `<stdint.h>`: Standard Integer Types, [122](#)
- `parity.h`, [333](#)
- `parity_even_bit`
 - `<util/parity.h>`: Parity bit generation, [275](#)
- `pgm_get_far_address`
 - `pgmspace.h`, [342](#)
- `pgm_read_byte`
 - `<avr/pgmspace.h>`: Program Space Utilities, [196](#)
- `pgm_read_byte_far`
 - `<avr/pgmspace.h>`: Program Space Utilities, [196](#)
- `pgm_read_byte_near`
 - `<avr/pgmspace.h>`: Program Space Utilities, [196](#)
- `pgm_read_dword`
 - `<avr/pgmspace.h>`: Program Space Utilities, [196](#)
- `pgm_read_dword_far`
 - `<avr/pgmspace.h>`: Program Space Utilities, [197](#)
- `pgm_read_dword_near`
 - `<avr/pgmspace.h>`: Program Space Utilities, [197](#)
- `pgm_read_float`
 - `<avr/pgmspace.h>`: Program Space Utilities, [197](#)
- `pgm_read_float_far`
 - `<avr/pgmspace.h>`: Program Space Utilities, [197](#)
- `pgm_read_float_near`
 - `<avr/pgmspace.h>`: Program Space Utilities, [197](#)
- `pgm_read_word`
 - `<avr/pgmspace.h>`: Program Space Utilities, [197](#)

- pgm_read_word_far
 - <avr/pgmspace.h>: Program Space Utilities, [197](#)
- pgm_read_word_near
 - <avr/pgmspace.h>: Program Space Utilities, [198](#)
- pgmspace.h, [333](#)
 - __ELPM_classic__, [336](#)
 - __ELPM_dword_enhanced__, [336](#)
 - __ELPM_dword_xmega__, [336](#)
 - __ELPM_enhanced__, [337](#)
 - __ELPM_float_enhanced__, [337](#)
 - __ELPM_float_xmega__, [337](#)
 - __ELPM_word_classic__, [337](#)
 - __ELPM_word_enhanced__, [338](#)
 - __ELPM_word_xmega__, [338](#)
 - __ELPM_xmega__, [338](#)
 - __LPM_classic__, [339](#)
 - __LPM_dword_classic__, [339](#)
 - __LPM_dword_enhanced__, [339](#)
 - __LPM_dword_tiny__, [340](#)
 - __LPM_enhanced__, [340](#)
 - __LPM_float_classic__, [340](#)
 - __LPM_float_enhanced__, [341](#)
 - __LPM_float_tiny__, [341](#)
 - __LPM_tiny__, [341](#)
 - __LPM_word_classic__, [341](#)
 - __LPM_word_enhanced__, [342](#)
 - __LPM_word_tiny__, [342](#)
- pgm_get_far_address, [342](#)
- pow
 - <math.h>: Mathematics, [113](#)
- power.h, [343](#)
- powf
 - <math.h>: Mathematics, [110](#)
- printf
 - <stdio.h>: Standard IO facilities, [134](#)
- printf_P
 - <stdio.h>: Standard IO facilities, [134](#)
- prog_char
 - <avr/pgmspace.h>: Program Space Utilities, [198](#)
- prog_int16_t
 - <avr/pgmspace.h>: Program Space Utilities, [198](#)
- prog_int32_t
 - <avr/pgmspace.h>: Program Space Utilities, [198](#)
- prog_int64_t
 - <avr/pgmspace.h>: Program Space Utilities, [199](#)
- prog_int8_t
 - <avr/pgmspace.h>: Program Space Utilities, [199](#)
- prog_uchar
 - <avr/pgmspace.h>: Program Space Utilities, [199](#)
- prog_uint16_t
 - <avr/pgmspace.h>: Program Space Utilities, [199](#)
- prog_uint32_t
 - <avr/pgmspace.h>: Program Space Utilities, [200](#)
- prog_uint64_t
 - <avr/pgmspace.h>: Program Space Utilities, [200](#)
- prog_uint8_t
 - <avr/pgmspace.h>: Program Space Utilities, [200](#)
- prog_void
 - <avr/pgmspace.h>: Program Space Utilities, [200](#)
- putc
 - <stdio.h>: Standard IO facilities, [131](#)
- putchar
 - <stdio.h>: Standard IO facilities, [132](#)
- puts
 - <stdio.h>: Standard IO facilities, [134](#)
- puts_P
 - <stdio.h>: Standard IO facilities, [134](#)
- qsort
 - <stdlib.h>: General utilities, [145](#)
- quot
 - div_t, [319](#)
 - ldiv_t, [319](#)
- RAND_MAX
 - <stdlib.h>: General utilities, [141](#)
- RANDOM_MAX
 - <stdlib.h>: General utilities, [141](#)
- rand
 - <stdlib.h>: General utilities, [145](#)
- rand_r
 - <stdlib.h>: General utilities, [145](#)
- random
 - <stdlib.h>: General utilities, [145](#)
- random_r
 - <stdlib.h>: General utilities, [145](#)
- realloc
 - <stdlib.h>: General utilities, [145](#)
- rem
 - div_t, [319](#)
 - ldiv_t, [319](#)
- reti
 - <avr/interrupt.h>: Interrupts, [189](#)
- round
 - <math.h>: Mathematics, [113](#)
- roundf
 - <math.h>: Mathematics, [110](#)
- SCNd16
 - <inttypes.h>: Integer Type conversions, [101](#)
- SCNd32
 - <inttypes.h>: Integer Type conversions, [101](#)
- SCNdFAST16
 - <inttypes.h>: Integer Type conversions, [101](#)
- SCNdFAST32
 - <inttypes.h>: Integer Type conversions, [101](#)
- SCNdLEAST16
 - <inttypes.h>: Integer Type conversions, [102](#)
- SCNdLEAST32
 - <inttypes.h>: Integer Type conversions, [102](#)

[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNdPTR
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNi16
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNi32
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNiFAST16
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNiFAST32
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNiLEAST16
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNiLEAST32
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNiPTR
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNo16
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNo32
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNoFAST16
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNoFAST32
[<inttypes.h>](#): Integer Type conversions, [102](#)
 SCNoLEAST16
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNoLEAST32
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNoPTR
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNu16
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNu32
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNuFAST16
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNuFAST32
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNuLEAST16
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNuLEAST32
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNuPTR
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNx16
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNx32
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNxFAST16
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNxFAST32
[<inttypes.h>](#): Integer Type conversions, [103](#)
 SCNxLEAST16

[<inttypes.h>](#): Integer Type conversions, [104](#)
 SCNxLEAST32
[<inttypes.h>](#): Integer Type conversions, [104](#)
 SCNxPTR
[<inttypes.h>](#): Integer Type conversions, [104](#)
 SIG_ATOMIC_MAX
[<stdint.h>](#): Standard Integer Types, [122](#)
 SIG_ATOMIC_MIN
[<stdint.h>](#): Standard Integer Types, [122](#)
 SIGNAL
[<avr/interrupt.h>](#): Interrupts, [189](#)
 SIZE_MAX
[<stdint.h>](#): Standard Integer Types, [122](#)
 sbi
[<compat/deprecated.h>](#): Deprecated items, [283](#)
 scanf
[<stdio.h>](#): Standard IO facilities, [134](#)
 scanf_P
[<stdio.h>](#): Standard IO facilities, [134](#)
 sei
[<avr/interrupt.h>](#): Interrupts, [189](#)
 setbaud.h, [343](#)
 setjmp
[<setjmp.h>](#): Non-local goto, [116](#)
 setjmp.h, [343](#)
 signature.h, [343](#)
 signbit
[<math.h>](#): Mathematics, [114](#)
 signbitf
[<math.h>](#): Mathematics, [110](#)
 sin
[<math.h>](#): Mathematics, [114](#)
 sinf
[<math.h>](#): Mathematics, [110](#)
 sinh
[<math.h>](#): Mathematics, [114](#)
 sinhf
[<math.h>](#): Mathematics, [110](#)
 sleep.h, [344](#)
 sleep_cpu
[<avr/sleep.h>](#): Power Management and Sleep Modes, [262](#)
 sleep_disable
[<avr/sleep.h>](#): Power Management and Sleep Modes, [262](#)
 sleep_enable
[<avr/sleep.h>](#): Power Management and Sleep Modes, [262](#)
 snprintf
[<stdio.h>](#): Standard IO facilities, [135](#)
 snprintf_P
[<stdio.h>](#): Standard IO facilities, [135](#)
 sprintf
[<stdio.h>](#): Standard IO facilities, [135](#)

- sprintf_P
 - <stdio.h>: Standard IO facilities, [135](#)
- sqrt
 - <math.h>: Mathematics, [114](#)
- sqrtf
 - <math.h>: Mathematics, [110](#)
- square
 - <math.h>: Mathematics, [114](#)
- squaref
 - <math.h>: Mathematics, [110](#)
- srand
 - <stdlib.h>: General utilities, [146](#)
- srandom
 - <stdlib.h>: General utilities, [146](#)
- sscanf
 - <stdio.h>: Standard IO facilities, [135](#)
- sscanf_P
 - <stdio.h>: Standard IO facilities, [135](#)
- stderr
 - <stdio.h>: Standard IO facilities, [132](#)
- stdin
 - <stdio.h>: Standard IO facilities, [132](#)
- stdint.h, [344](#)
- stdio.h, [347](#)
- stdlib.h, [348](#)
- stdout
 - <stdio.h>: Standard IO facilities, [132](#)
- strcasecmp
 - <string.h>: Strings, [152](#)
- strcasecmp.S, [350](#)
- strcasecmp_P.S, [350](#)
- strcasecmp_PF
 - <avr/pgmspace.h>: Program Space Utilities, [201](#)
- strcasestr
 - <string.h>: Strings, [152](#)
- strcasestr.S, [350](#)
- strcat
 - <string.h>: Strings, [152](#)
- strcat.S, [350](#)
- strcat_P.S, [350](#)
- strcat_PF
 - <avr/pgmspace.h>: Program Space Utilities, [202](#)
- strchr
 - <string.h>: Strings, [153](#)
- strchr.S, [350](#)
- strchr_P.S, [350](#)
- strchrnul
 - <string.h>: Strings, [153](#)
- strchrnul.S, [350](#)
- strchrnul_P.S, [350](#)
- strcmp
 - <string.h>: Strings, [153](#)
- strcmp.S, [350](#)
- strcmp_P.S, [350](#)
- strcmp_PF
 - <avr/pgmspace.h>: Program Space Utilities, [202](#)
- strcpy
 - <string.h>: Strings, [153](#)
- strcpy.S, [350](#)
- strcpy_P.S, [351](#)
- strcpy_PF
 - <avr/pgmspace.h>: Program Space Utilities, [202](#)
- strcspn
 - <string.h>: Strings, [153](#)
- strcspn.S, [351](#)
- strcspn_P.S, [351](#)
- strdup
 - <string.h>: Strings, [154](#)
- strdup.c, [351](#)
- string.h, [351](#)
- strlcat
 - <string.h>: Strings, [154](#)
- strlcat.S, [352](#)
- strlcat_P.S, [352](#)
- strlcat_PF
 - <avr/pgmspace.h>: Program Space Utilities, [202](#)
- strlcpy
 - <string.h>: Strings, [154](#)
- strlcpy.S, [352](#)
- strlcpy_P.S, [352](#)
- strlcpy_PF
 - <avr/pgmspace.h>: Program Space Utilities, [203](#)
- strlen
 - <string.h>: Strings, [155](#)
- strlen.S, [352](#)
- strlen_P.S, [352](#)
- strlen_PF
 - <avr/pgmspace.h>: Program Space Utilities, [203](#)
- strlwr
 - <string.h>: Strings, [155](#)
- strlwr.S, [352](#)
- strncasecmp
 - <string.h>: Strings, [155](#)
- strncasecmp.S, [353](#)
- strncasecmp_P.S, [353](#)
- strncasecmp_PF
 - <avr/pgmspace.h>: Program Space Utilities, [203](#)
- strncat
 - <string.h>: Strings, [155](#)
- strncat.S, [353](#)
- strncat_P.S, [353](#)
- strncat_PF
 - <avr/pgmspace.h>: Program Space Utilities, [204](#)
- strncmp
 - <string.h>: Strings, [155](#)
- strncmp.S, [353](#)
- strncmp_P.S, [353](#)
- strncmp_PF

- <avr/pgmspace.h>: Program Space Utilities, 204
- strncpy
 - <string.h>: Strings, 156
- strncpy.S, 353
- strncpy_P.S, 353
- strncpy_PF
 - <avr/pgmspace.h>: Program Space Utilities, 204
- strlen
 - <string.h>: Strings, 156
- strlen.S, 353
- strlen_P.S, 353
- strlen_PF
 - <avr/pgmspace.h>: Program Space Utilities, 205
- strpbrk
 - <string.h>: Strings, 156
- strpbrk.S, 353
- strpbrk_P.S, 353
- strrchr
 - <string.h>: Strings, 156
- strrchr.S, 353
- strrchr_P.S, 354
- strrev
 - <string.h>: Strings, 156
- strrev.S, 354
- strsep
 - <string.h>: Strings, 157
- strsep.S, 354
- strsep_P.S, 354
- strspn
 - <string.h>: Strings, 157
- strspn.S, 354
- strspn_P.S, 354
- strstr
 - <string.h>: Strings, 157
- strstr.S, 354
- strstr_P.S, 354
- strstr_PF
 - <avr/pgmspace.h>: Program Space Utilities, 205
- strtod
 - <stdlib.h>: General utilities, 146
- strtok
 - <string.h>: Strings, 157
- strtok.c, 354
- strtok_P
 - <avr/pgmspace.h>: Program Space Utilities, 205
- strtok_P.c, 354
- strtok_r
 - <string.h>: Strings, 158
- strtok_r.S, 355
- strtok_rP.S, 355
- strtol
 - <stdlib.h>: General utilities, 146
- strtoul
 - <stdlib.h>: General utilities, 146
- strupr
 - <string.h>: Strings, 158
- strupr.S, 355
- supported devices, 1
- TW_BUS_ERROR
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MR_ARB_LOST
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MR_DATA_ACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MR_DATA_NACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MR_SLA_ACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MR_SLA_NACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MT_ARB_LOST
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MT_DATA_ACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MT_DATA_NACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MT_SLA_ACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_MT_SLA_NACK
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_NO_INFO
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_READ
 - <util/twi.h>: TWI bit mask definitions, 279
- TW_REP_START
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_SR_DATA_ACK
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_SR_DATA_NACK
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_SR_GCALL_ACK
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_SR_SLA_ACK
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_SR_STOP
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_ST_DATA_ACK
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_ST_DATA_NACK
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_ST_LAST_DATA
 - <util/twi.h>: TWI bit mask definitions, 280
- TW_ST_SLA_ACK
 - <util/twi.h>: TWI bit mask definitions, 281
- TW_START
 - <util/twi.h>: TWI bit mask definitions, 281
- TW_STATUS

- `<util/twi.h>`: TWI bit mask definitions, [281](#)
- `TW_STATUS_MASK`
 - `<util/twi.h>`: TWI bit mask definitions, [281](#)
- `TW_WRITE`
 - `<util/twi.h>`: TWI bit mask definitions, [281](#)
- `tan`
 - `<math.h>`: Mathematics, [114](#)
- `tanf`
 - `<math.h>`: Mathematics, [110](#)
- `tanh`
 - `<math.h>`: Mathematics, [114](#)
- `tanhf`
 - `<math.h>`: Mathematics, [110](#)
- `timer_enable_int`
 - `<compat/deprecated.h>`: Deprecated items, [284](#)
- `toascii`
 - `<ctype.h>`: Character Operations, [93](#)
- `tolower`
 - `<ctype.h>`: Character Operations, [93](#)
- `tools, optional`, [48](#)
- `tools, required`, [48](#)
- `toupper`
 - `<ctype.h>`: Character Operations, [93](#)
- `trunc`
 - `<math.h>`: Mathematics, [114](#)
- `truncf`
 - `<math.h>`: Mathematics, [110](#)
- `twi.h`, [355](#)
- `UBRR_VALUE`
 - `<util/setbaud.h>`: Helper macros for baud rate calculations, [277](#)
- `UBRRH_VALUE`
 - `<util/setbaud.h>`: Helper macros for baud rate calculations, [277](#)
- `UBRR_L_VALUE`
 - `<util/setbaud.h>`: Helper macros for baud rate calculations, [277](#)
- `UINT16_C`
 - `<stdint.h>`: Standard Integer Types, [122](#)
- `UINT16_MAX`
 - `<stdint.h>`: Standard Integer Types, [122](#)
- `UINT32_C`
 - `<stdint.h>`: Standard Integer Types, [122](#)
- `UINT32_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT64_C`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT64_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT8_C`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT8_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_FAST16_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_FAST32_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_FAST64_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_FAST8_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_LEAST16_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_LEAST32_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_LEAST64_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINT_LEAST8_MAX`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINTMAX_C`
 - `<stdint.h>`: Standard Integer Types, [123](#)
- `UINTMAX_MAX`
 - `<stdint.h>`: Standard Integer Types, [124](#)
- `UINTPTR_MAX`
 - `<stdint.h>`: Standard Integer Types, [124](#)
- `USE_2X`
 - `<util/setbaud.h>`: Helper macros for baud rate calculations, [277](#)
- `uint16_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint32_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint64_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint8_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint_farptr_t`
 - `<inttypes.h>`: Integer Type conversions, [104](#)
- `uint_fast16_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint_fast32_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint_fast64_t`
 - `<stdint.h>`: Standard Integer Types, [125](#)
- `uint_fast8_t`
 - `<stdint.h>`: Standard Integer Types, [126](#)
- `uint_least16_t`
 - `<stdint.h>`: Standard Integer Types, [126](#)
- `uint_least32_t`
 - `<stdint.h>`: Standard Integer Types, [126](#)
- `uint_least64_t`
 - `<stdint.h>`: Standard Integer Types, [126](#)
- `uint_least8_t`
 - `<stdint.h>`: Standard Integer Types, [126](#)
- `uintmax_t`
 - `<stdint.h>`: Standard Integer Types, [126](#)
- `uintptr_t`

- <stdint.h>: Standard Integer Types, [126](#)
- ultoa
 - <stdlib.h>: General utilities, [147](#)
- ungetc
 - <stdio.h>: Standard IO facilities, [135](#)
- Using the standard IO facilities, [309](#)
- utoa
 - <stdlib.h>: General utilities, [147](#)
- vfprintf
 - <stdio.h>: Standard IO facilities, [135](#)
- vfprintf_P
 - <stdio.h>: Standard IO facilities, [137](#)
- vfscanf
 - <stdio.h>: Standard IO facilities, [137](#)
- vfscanf_P
 - <stdio.h>: Standard IO facilities, [139](#)
- vprintf
 - <stdio.h>: Standard IO facilities, [139](#)
- vscanf
 - <stdio.h>: Standard IO facilities, [139](#)
- vsprintf
 - <stdio.h>: Standard IO facilities, [139](#)
- vsprintf_P
 - <stdio.h>: Standard IO facilities, [139](#)
- vsprintf_P
 - <stdio.h>: Standard IO facilities, [139](#)
- WDTO_120MS
 - <avr/wdt.h>: Watchdog timer handling, [266](#)
- WDTO_15MS
 - <avr/wdt.h>: Watchdog timer handling, [266](#)
- WDTO_1S
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_250MS
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_2S
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_30MS
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_4S
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_500MS
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_60MS
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- WDTO_8S
 - <avr/wdt.h>: Watchdog timer handling, [267](#)
- wdt.h, [356](#)
- wdt_disable
 - <avr/wdt.h>: Watchdog timer handling, [266](#)
- wdt_enable
 - <avr/wdt.h>: Watchdog timer handling, [266](#)
- wdt_reset
 - <avr/wdt.h>: Watchdog timer handling, [266](#)